

FOR USE IN MOST COLOUR LASER COPIERS AND COLOUR PRINTERS, WITHOUT THE USE OF FUSER OIL.

Printing:

- Use the multi-function tray (if applicable)

- > Air all sheets on both edges to make sure they are loose
- > Do not stack more than 30 sheets at a time
- Set paper type. See list below and try a variation until you get good results with your model of printer or copier. If you don't see your brand of printer or copier please try one of the suggestions available. Here are some suggestions:

HP: Transparency or Label Mode

Ricoh: Thick 2 Mode

Brother: Transparency Mode Okidata: Label 1 or Label 2 Mode Xerox: Transfer or Coated 1 Mode

Canon: Label or Heavy Paper 2 Mode (ensure to use Tray A/ Top Tray as output tray.)

- Use mirror image setting so image will read correctly after application.
- Open the feed option from the back of the printer for straight feed through the printer (if applicable, except for Canon Copiers Use the top tray or Tray A.)

Pressing:

Note: A conventional home iron will not provide a satisfactory image transfer

- Set temperature to 165 c.
- Set at medium pressure (approx. 40psi)
- Do not pre press the fabric. Fabric must be cool.
- Position transfer paper on fabric, image facing down and press for 20 seconds.
- Wait 8 Seconds then peel off transfer sheet (while still hot.)
- Place a Teflon sheet over the image and press again for 5 seconds.
- Sheet can be removed hot of cold.

Washing:

- Turn garments inside out. Machine wash in warm or cold water.
- Do not use fabric softener or bleach.
- Tumble dry on low setting.
- Do not use iron on imaged area.
- Do not dry clean.

IMPORTANT: Please keep your Hi Temp Plus paper in a plastic bag until actual use.

This will prevent moisture from forming. Close the bag after each use.