


# Operator Use Guide

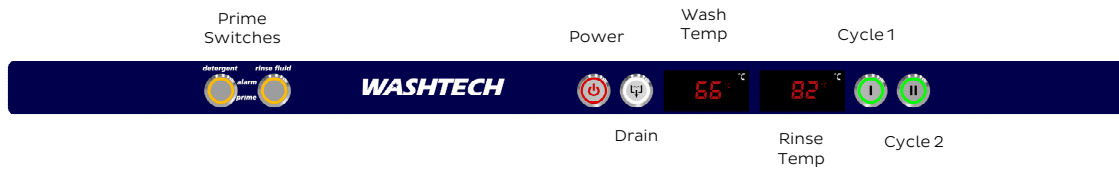

## START

- Turn on at wall
- Ensure the Drain Filter (3) and Wash Pump Filters (2) are firmly in place.
- Check the Scrap Trays (1) are in place and shut door.
- Press the Power button, the button will glow red and the machine will fill automatically.

## OPERATION

- Load items into the machine and shut door.
- Select either Cycle 1 (2 minutes) or Cycle 2 (4 minutes) button to start a cycle.
- Both Cycle buttons glow green while machine operates.
- When Cycle lights go out, the cycle is complete.

NOTE: The machine may be started while the rinse water is being heated – the machine will continue to run the wash cycle until the rinse water is up to temperature.

## SHUT DOWN - EVERY NIGHT


- Open the door and press the Drain button, leave the door open.
- Allow to drain for approximately 1 minute or until the tank is empty.
- Turn the Drain and then the Power buttons off.
- Once the machine has cooled down, clean the wash tank, then remove and rinse Scrap Trays (1) and Wash Pump Filters (2) before replacing back in machine.

## CLEANING – AT LEAST ONCE A WEEK

Remove, rinse and replace when machine has cooled down:

Scrap Trays	1
Wash Pump Filters	2
Drain Filter	3
Wash Arms	4
Rinse Arm	5

Inspect and clear all jets in the upper and lower Wash/Rinse Arms using a small object such as a toothpick where necessary to remove any blockages prior to rinsing.

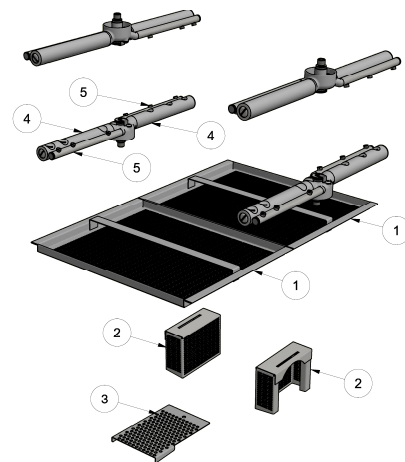

## SUGGESTED BEST PRACTICE

- Pre-rinse      Scrape and/or rinse trays, plates & glasses in cool water.
- Chemical      Chemical alarm lights indicate when a chemical drum is empty. Replace chemical and press the corresponding prime switch until supply pipe is refilled.
- Use a good quality non foaming commercial detergent and drying agent – do not use domestic detergents which will cause the machine to foam.

# Operator Troubleshooting

Issue	Cause									
	POOR PRE-SCRAPING	CARRY OVER OF SOAP FROM SINK	OVERLOADING RACKS	INADEQUATE CLEANING	DRAIN UPSTAND NOT PLUGGED IN	WASH/RINSE JETS BLOCKED	WASH/RINSE ARMS NOT ROTATING	DETERGENT DOSAGE LOW/HIGH*	RINSE FLUID DOSAGE LOW/HIGH*	POOR WATER QUALITY**
DISHES NOT CLEAN	●		●	●		●	●	●		■
STAINING	●					●	■	●		■
FOAMING		●		■				■	■	
PROTEIN BLOOM	■		■	●		■	■	■		
DIRTY MACHINE	●			●		■	■	■		■
FOOD RESIDUE ON WARE	■		●	■		■	■	●		
FILM/SPOTS ON WARE			■	■		■	●	●		■
DETERGENT RESIDUE						■	●	●		
GREASY FILM/NO FIZZ			■						●	■
HIGH DETERGENT USE				■	●			●		
HIGH RINSE FLUID USE				■					●	
WET WASHWARE			●	■					●	
SCALE BUILD UP IN MACHINE				●				■		●

- Likely cause
- Possible cause

\* For issues most likely due to incorrect chemical dosages or other chemical issues we recommend you consult your chemical supplier and/or a local chemical expert prior to calling in a dishwasher technician.

\*\* For issues that are likely due to poor water quality (scale building up, filters being required on other kitchen equipment etc.) we recommend you consult a local water specialist prior to calling in a dishwasher technician.

**IF PROBLEMS PERSIST CONTACT MOFFAT SERVICE ON 1300 264 217**