



PW₃

Cycle Selector

Power

55.0°

Cycle Light

Wash Temperature

Rinse Temperature

START

- Turn on at wall.
- Ensure the Upstand (2) and Wash Pump Filter (3) are firmly in place.
- Check the Scrap Trays (1) are in place and shut door.
- Turn the Selector Switch to any Cycle (I, II or III).
- Power Light glows red and machine fills automatically.
- Once full, rinse heating starts.

OPERATION

- Select required Cycle of I (2 minutes), II (4 minutes) or III (6 minutes).
- · Load items into the machine and shut door.
- Cycle Light glows green while machine operates.
- When Cycle Light goes out, the cycle is complete.

NOTE: The machine may be started while the rinse water is being heated – the machine will continue to run the wash cycle until the rinse water is up to temperature.

SHUT DOWN - EVERY NIGHT

- Turn Cycle Selector to 0 and turn off the power from the wall.
- Remove Scrap Trays (1) and Upstand (2) to drain the Wash Tank.
- Once the Wash Tank is fully drained remove and rinse Wash Pump Filter (3) and Scrap Trays (1) before replacing back into the machine along with the Upstand (2).

CLEANING - AT LEAST ONCE A WEEK

Remove, rinse and replace when machine has cooled down:

Scrap Trays 1
Drain Upstand 2
Wash Pump Filters 3
Rinse Arms 4
Wash Arms 5
Thumbscrews 6

Inspect and clear all jets in the upper and lower Wash/Rinse Arms using a small object such as a toothpick where necessary to remove any blockages prior to rinsing.

SUGGESTED BEST PRACTICE

Pre-rinse Scrape and/or rinse trays, plates & glasses in co

Chemical Use a good quality non foaming commercial detergent and drying agent – do

not use domestic detergents which will cause the wash tank to foam.

