

XM

START

- Turn on at wall
- Ensure the Filter (1) is locked firmly in place
- Check the Upstand (2) is in place
- Shut door and turn Cycle Selector to I, II or III
- Power light glows red and the machine will fill automatically

OPERATION

- Select cycle of 1 (I), 2 (II), or 3 (III) minutes
- Load rack into machine and shut door
- Cycle light glows green while machine operates
- When the Cycle light goes out, the cycle is complete

NOTE: The machine may be started once the Wash light glows amber and the Rinse Ready light is off, however it will continue to run the wash cycle until the rinse water is up to temperature

SHUT DOWN - EVERY NIGHT

- Remove Upstand (2) only
- Press Drain button to drain wash tank
- Press Drain button off when tank is empty
- Turn Cycle Selector to 0 and turn off the power from the wall
- Clean the tank then remove and rinse Filter (1) before replacing back in machine with Upstand (2)
- Ensure Filter (1) is pressed firmly down and has clicked into place

CLEANING – AT LEAST ONCE A WEEK

Remove, rinse and replace:

| | |
|----------------|---|
| Filter | 1 |
| Upstand | 2 |
| Wash/Rinse Arm | 3 |

Inspect and clear all jets in the upper and lower Wash/Rinse Arms using a small object such as a toothpick where necessary to remove any blockages prior to rinsing

SUGGESTED BEST PRACTICE

| | |
|--------------|---|
| Cutlery | Stack with handles or sharp blades down and avoid overloading |
| Pre-rinse | Scrape and/or rinse plates & glasses in cool water |
| Chemical | Use good quality non foaming commercial detergent and drying agent – do not use domestic detergent which will cause the machine to foam |
| Wash results | If wash results are deteriorating, check that you have haven't run out of detergent and that the wash/rinse arms are clean and free of obstructions |
| Draining | Use the Drain button to lower the water level before removing the Upstand |

