

# Instructions for assembly - JAIPUR



1. Fan is supplied Part Assembled, Hang the fan on the ceiling as per instructions.

2. Connect the MAINS (LIVE) to the fan Brown (L) wire.

MAINS (NEUTRAL) to the fan Blue (N) wire

EARTHING to the fan Earth (Yellow/Green) wire.

Dear Electrician,  
Please connect mains here

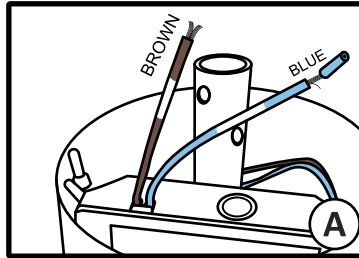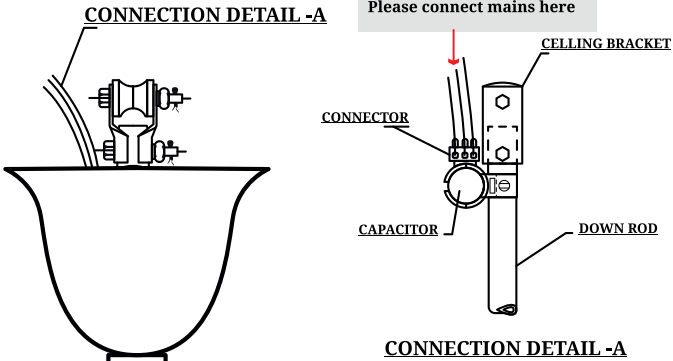

## A. CONNECT

BROWN Main (Live) to Brown  
BLUE Mains (neutral) to Blue  
Earth Mains to Yellow/Green



Supplied REMOTE Controller  
2 x AAA Batteries required (not supplied)

B. Ensure fan is within 10 meters of remote to operate properly.

**IMPORTANT : DO NOT connect the REMOTE with ANY OTHER wall SPEED Controller. Doing so will VOID any warranty on the FAN/REMOTE.**

## IMPORTANT / CAUTION

MOTOR NO. 123

MATCH MOTOR NUMBER

and BLADE POSITION

Blade A to Position A

Blade B to Position B


Blade C to Position C

Screw Blades here

WOOD BLADES

THIS SIDE UP

THIS SIDE UP

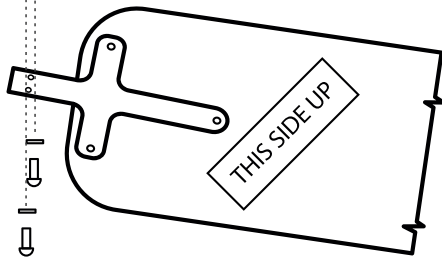

# Instructions to change fan-rod in JAIPUR

