 
Instructions for Assembly - ULTRA PURE


- Unpack the box
- DO NOT MIX the blades with Blades of OTHER fans.




- 1.- Take the fan motor and insert the DOWN-ROD in the
 - Ceiling clamp assembly.
 - Tighten the Bolts as shown in the picture.

Sequence

- 1. Washer
- 2. Spring washer
- 3. Nut
 Tighten Nut Fully
 4. Insert LOCK PIN.

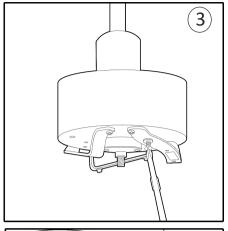


Open Screws from Blade Holders.

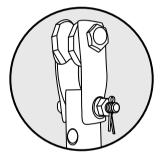


IMPORTANT: Must check LOCK PIN is inserted and SPREAD OPEN with PLIERS.

 This will ensure that the fan does not Fall in any case of Loosening of Fastners.



Hang the fan on the Ceiling.


TURN OFF the Fan Mains before proceeding ahead

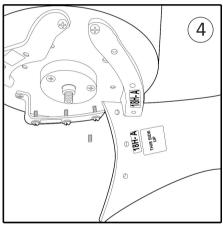

Match BLADE Code with MOTOR code. (for Wood Blades)

BLADES are Balanced in SETS.
BLADES are NUMBERED (18H-A or B or C)

18H denotes Motor Number A or B or C denotes BLADE LOCATION

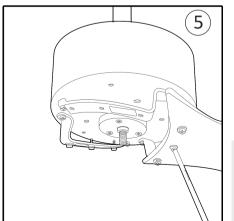


DO NOT MIX BLADES with OTHER MOTOR BLADES.

ENSURE the screws are full tight.


Keep "THIS SIDE UP" sticker facing the Ceiling

Repeat for all 3 Blades.

 IMPORTANT PLEASE FOLLOW STICKER ON BLADE




Instructions for Assembly – ULTRA PURE (PAGE 2)

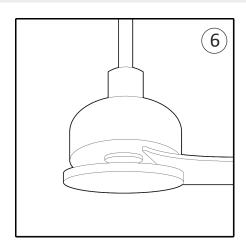

RE-CHECK all Canopy Screws and tighten them.

They may have loosened in transit.

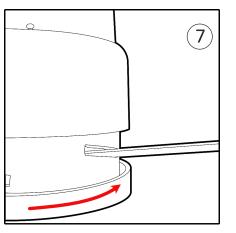


Screw the BOTTOM Plate on the fan.

Turn the plate by HAND and ENSURE the PLATE is full tight.


FOR FANS with REMOTE CONTROL

 Fans Come pre-installed with Remote Receiver inside the Canopy



CONNECT

BROWN Main (Live) to Brown BLUE Mains (neutral) to Blue Earth Mains to Yellow/Green

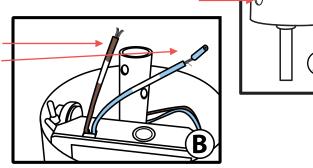

Supplied REMOTE Controller 2 x AAA Batteries required (not supplied)

