


# USER MANUAL

**MPOW**

WIRED  
EARPHONE

MODEL: BH319A

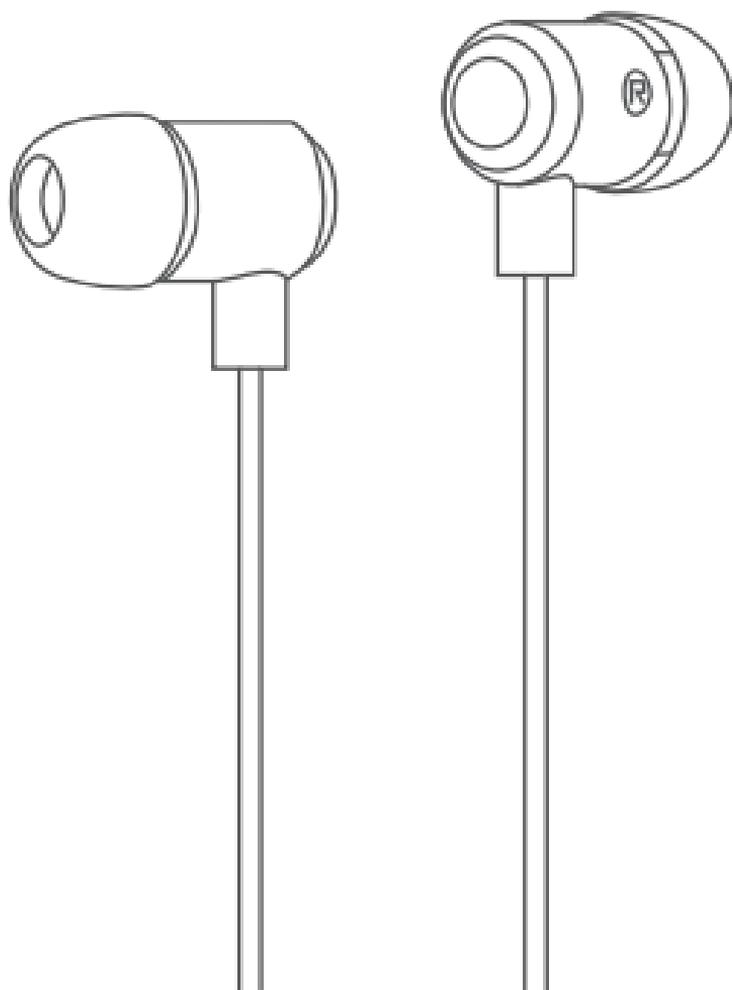


**EN** OPERATION

**DE** BEDIENUNGSANLEITUNG

**FR** OPÉRATION

**ES** OPERACIÓN

**IT** OPERAZIONE

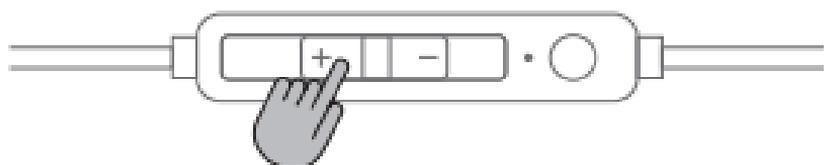


**EN** Slide the wheel to adjust volume

**DE** Drücken Sie den Schieberegler, um die Lautstärke zu ändern

**FR** Poussez le curseur pour changer le volume

**ES** Deslice la rueda para ajustar el volumen

**IT** Fare scorrere la ruota per regolare il volume

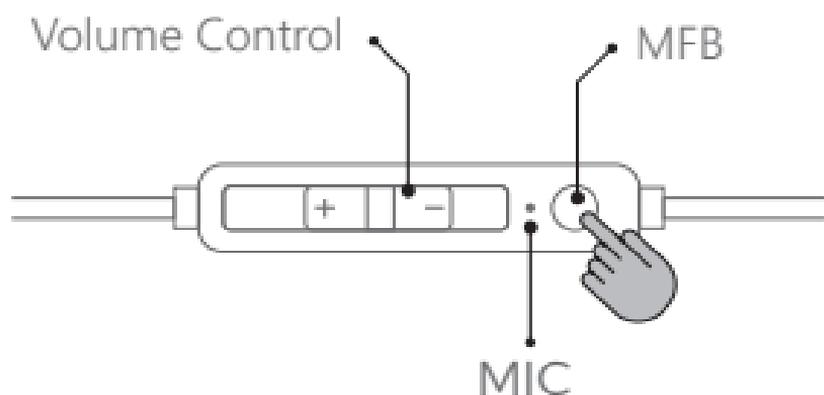

**EN** Short press: Answer/ Play/Pause

Double press: Next Track

Triple press: Previous Track

**DE** Drücken Sie kurz: Einen Anruf beantworten/ Spielen/ Pausieren

Doppelklicken: Nächstes Lied

Dreimal Klicken: Vorheriges Lied

**FR** Appuyez brièvement: Répondre/ Lecture/ Pause

Double clic: Piste Suivante

Trois clics: Liste Précédente

**ES** Presione: Contestar/ Reproducir/ Pausar  
Doble presión: Siguiente Pista  
Triple pulsación: Pista Anterior

**IT** Premere brevemente: rispondere /  
riprodurre / mettere in pausa  
Doppia premere: Canzone successiva  
Tripla premere: Canzone precedente

# FCC STATEMENT

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.