Mico 12 Baby capsule

Suitable for newborn up to 12months approx..







Dear Customer,

Congratulations on the purchase of your brand new Maxi-Cosi car seat, we hope you and your little one will have plenty of hours of fun together!

Our car seats are so good, we've put them under a Lifetime Warranty - so you can enjoy them for years to come. Don't forget to register within three months after purchase.

In the event of a car accident, your Maxi-Cosi child restraint may have unseen damage from crash forces. The Maxi-Cosi Accident Exchange Service offers new for old Maxi-Cosi child restraint replacement in the event of a serious accident (where a police report is required), giving you peace of mind knowing your child is correctly protected.

Need assistance?

Call our Customer Service Centre 1300 809 526

Monday to Friday (8:30am-5:00pm AEST)

or send an email: customerservice@dorel.com.au





Don't forget to please register your product warranty by visiting:

maxi-cosi.com.au/warranty-registration





We Carry The Future

Life is one big adventure, and becoming a parent is the biggest adventure of all.

And we would know. Because we're parents too.

It's a road full of milestones, moments and unforgettable journeys - starting with the first trip home from the hospital. We understand how important it is for new parents to feel supported right from the start. That's where Maxi-Cosi comes in.

We're there from day one... and for every day that follows. We care about giving parents child mobility solutions they can trust - car seats and strollers that are safe, smart and easy to use. With Maxi-Cosi, parents know their children are in the best hands possible. So they can focus on the other things that matter, like living in the moment and seeing the joy and wonder of life in a whole new way. That's what being a parent is really about.

We get it, and we care.

We always have.

It was thirty years ago that we launched Europe's first baby car seat and since then, we've carried over 50 million babies home from the hospital.

We were pioneers then, and we're pioneers now. That's why we'll never stop improving, designing, and perfecting the way new families move around the world - wherever life's adventures may take them.





WARNINGS

Read and follow all of the installation instructions for maximum protection. If you have any questions regarding the installation or use of this child restraint in Australia or New Zealand, please contact our customer service number provided. An alternative option is to also contact any registered child fitting station authorised by your local transport authority.

Suitable for low birth weight and premature infants without restrictive medical conditions. To be used only in a rearward-facing position until the infant's shoulders reach the shoulder height marker (approximately 12 months of age). Continue to use this infant restraint until the child reaches this limit. Infants are at risk of serious injury if they face forward too early.

General:

- Use the restraint exactly as shown in the instructions.
- Supervision of children is needed because they may be able to undo the buckles.
- DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturers or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible.
- DO NOT USE THIS RESTRAINT WITHOUT THE COVER.
- To ensure infant's back is evenly supported, do not put more than one nappy on the baby and make sure the nappy is not thickly folded at the back.
- DO NOT USE A REAR-FACING CHILD RESTRAINT WHERE AN AIRBAG IS FITTED IN FRONT OF THE SEATING POSITION.
- Fit the restraint firmly to the car seat.
- Fit the harness firmly to the child.
- · A loose restraint or harness is dangerous.
- Do not harness an infant wrapped in a blanket or swaddled. Any blanket or wrap must only be placed over the harness and infant.
- Always secure the loose end of the top tether strap. Do not use the child restraint
 where this strap may fall into a split in the seat back or off the side of the seat.



A WARNINGS

- ALWAYS ATTACH HOOK AND REMOVE SLACK.
- This child restraint is not approved for use with any connectors that connect to the car's ISOFIX low anchorages.
- THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.
- TO BE USED WITH A LAP-SASH/LAP-ONLY SEATBELT IN THE FRONT/BACK OF MOST CARS WITH FORWARD FACING SEATS.
- THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR.
- Care and attention should always be given to ventilation and shading of the child.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long
 enough to secure the child restraint. If seatbelts are too short then advice should
 be sought from a child restraint fitter and their recommendations be considered
 before using a seatbelt extender.
- Always check that the measurements between the rear and front seats in the car in which the child restraint is intended to be used, provides sufficient space.
- The use of child restraints in the front seat may be restricted for children of specific ages by local legislation. Please check with your local legislation regarding any restriction for child restraint. If a car has two or more rows of seats, children under four must not travel in the front seat. If all seats, other than the front seats, are being used by children under seven years, children aged between four and six years (inclusive) may travel in the front seat, provided they use an approved child restraint or booster seat.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by the child restraint and may cause injury or death. For approved aftermarket accessories please refer to page 30.
- Please contact Dorel Australia Customer Service with any questions or concerns (see page 2 for contact details).

TABLE OF CONTENTS

Before you Start	3 4 -7 11 14
Installing Seatbelt to Base	18 19 20 21 22 23 24 25 26 26
VEHICLE INFORMATION	28
Correct Rearward-Facing Vehicle Position	28 29 30 31 34 35

Installation Using Seatbelt	41
CHILD FITMENT	43
Fastening the Buckle	45 46 46 47 48
Removing the Body Insert	
Carrier Operation and Adjustment Removing Capsule From Base Handle Adjustment Canopy Adjustment	51
Removing Capsule From Stroller Stroller Installation	53
LOW BIRTH WEIGHT	54
Converting the Car Seat for Low-Birth Weight Suitability	55
CARE & MAINTENANCE	56
Cleaning the Buckle	61

VEHICLE INSTALL ATION

The Next Seat tor your Child64 Guarantee......65



What's in the Box?





CHECK THAT THIS CHILD RESTRAINT WILL FIT IN YOUR CAR

Swing Tag*

What's included:

- 1 Capsule
- 1 Base
- 1 Canopy
- 1 Instruction Manual
- 1 Swing Tag



Capsule



IMPORTANT: KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT.



Base



Canopy

Instruction Manual*

^{*} Images and features correct at time of printing, however subject to change.

Components



- A. Carry handle
- B. Belt mates x 2
- C. Low Birth Weight button (under cover)
- D. Buckle
- E. Adjuster strap

- F. Air Protect cell x 2
- G. Stroller release buttons x 2
- H. Harness
- I. Body insert
- J. Harness release button


Components





- A. Canopy
- B. Carry handle
- C. Storage pocket for instruction manual and loop tether strap
- D. Magnetic harness holders x 2
- E. Capsule shell
- F. Locking indicator x 2


- G. Base
- H. Stroller release buttons x 2
- I. Capsule release handle
- J. Tensioning clamp
- K. Belt path indicator x2
- L. Base angle adjustment knob

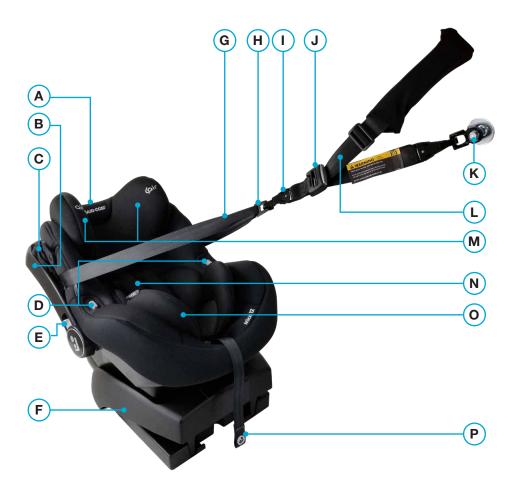

- A. Headrest adjuster (under cover)
- B. Carry handle
- C. Canopy
- D. Stroller release buttons x 2
- E. Handle adjustment buttons x 2
- F. Base
- G. Loop tether strap
- H. Loop tether metal connector

- I. Top tether attachment hook
- J. Top tether adjuster
- K. Anchor kit
- L. Top tether strap
- M. Air Protect cell x 2
- N. Belt mates x 2
- O. Body insert
- P. Adjuster strap

 Visual Guide







Installing seatbelt to base



Front of vehicle













Installing the capsule with top tether strap








NOTE Ensure headrest is in place when restraint is not in use..







 
Removing and reattaching the capsule to the base

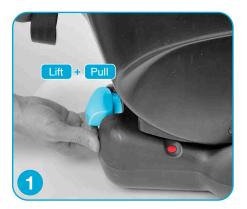











Adjusting the buckle height

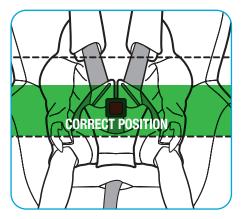





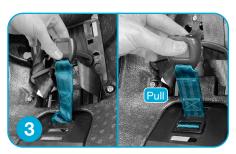




Adjusting harness and headrest



 2 Lift



Removing the infant insert











 
Adjusting for low birth weight suitability











Installing the Canopy

- Adjust the carry handle to the upright position by pushing the grey buttons at the pivot points at the base of the handle (image1).
- Lift up canopy connectors to the upright position on both left and right side of the capsule (image2).
- Slide the canopy ends into canopy connector on both left and right side of the capsule (image3).
- Connect canopy press stud onto canopy connector on both left and right side of the capsule (image4).
- 5. Open canopy to locate press stud at the back of canopy (image5).

Connect press stud at the back of the canopy to the trim cover (image6).















Adjusting the handle





 
Adjusting the canopy









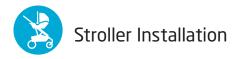

Connecting the capsule to the stroller





Disconnecting the capsule from the stroller





Compatible strollers for Mico 12 capsule

- Maxi-Cosi Lila Comfort Stroller
- Maxi-Cosi Lila CP² Stroller
- Maxi-Cosi Zelia² Stroller

NOTE Capsule connectors not included.

Detailed Section




Correct Rearward-Facing Vehicle Position

Some seating positions in your vehicle may NOT be safe for this safety seat. Some vehicles do not have any seating positions that can be used safely with the seat.

If you are not sure where to place the infant seat in your vehicle, consult your vehicle's owner's handbook.

Vehicle Seat Location Requirements

Children are safer when properly restrained in rear vehicle seating positions. Whenever possible, secure the infant seat in the centre position of the seat directly behind the front seats.

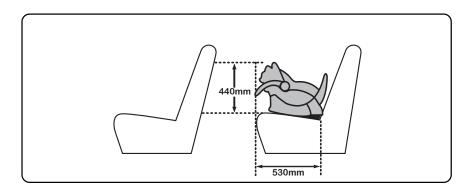





IMPROPER PLACEMENT OF THE SAFETY SEAT INCREASES THE RISK OF SERIOUS INJURY OR DEATH.



Correct Forward-Facing Vehicle Position

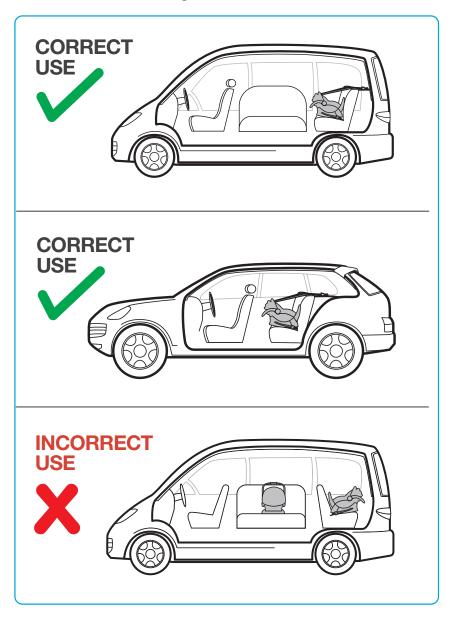

Location of Top Tether Anchorage Point

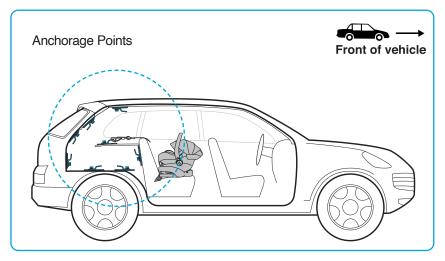

NOTE:

- The anchor point can be found in different locations in different car.
 The illustration above shows possible locations of anchor points.
 Sometimes it is on the parcel shelf in sedans, and on the floor area in station wagons, vans and hatchbacks. Make sure that you do not confuse the luggage hook in the back of a station wagon with anchor points. Refer to your owner's manual.
- An extension strap may be needed for vehicles without a fixed parcel shelf. Extension straps and extra fittings are available from various stores.
- Use of aftermarket accessories not meeting AS/NZS 8005 could cause injury or death.

Extension straps 300mm ref no. 019865	Extension straps 600mm ref no. 019866
Anchor bolt kit ref no. 014400	Locking clip ref no. 014401

Vehicle Information



Connecting the Top Tether

Child restraints must be used correctly to provide proper protection for your child. The anchorage system on child restraint must be used in the correct way.

CORRECT

Make sure there is no slack in the top tether strap and the attachment clip is upright in the anchorage fitting.

INCORRECT

The clip must not lie flat on the anchorage fitting.

Figure 1

INSTALLATION

Anchorages in vertical panel at rear of vehicle

Correct

Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fittina.



Figure 2

INSTALLATION

Floor mounted anchorages

Correct

Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.



 
Incorrect

 
The clip must not lie flat on the anchorage fittina.



Incorrect

The clip must not lie flat on the anchorage fitting.

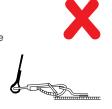

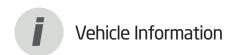


Anchorage Fitting Installation



FOR CARS FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT

Locate the upper anchorage point behind the rear seating position (consult the car owner's handbook for the location of the upper anchorage point).

Remove the thread plug from the parcel shelf/floor/roof and install the attachment bolt as shown in **Figure 1**.

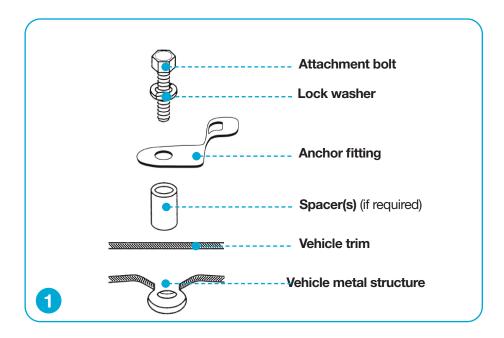


CAUTION: DO NOT OVERTIGHTEN THE ATTACHMENT BOLT. OVERTIGHTENING MAY FRACTURE OR BREAK BOLT. MAXIMUM TORQUE IS 20 Nm.



FOR CARS NOT FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT


FOR SEDANS ONLY:

Drill a 9mm diameter hole in the parcel shelf on the centre-line of the seating position as shown in **Figure 2**.

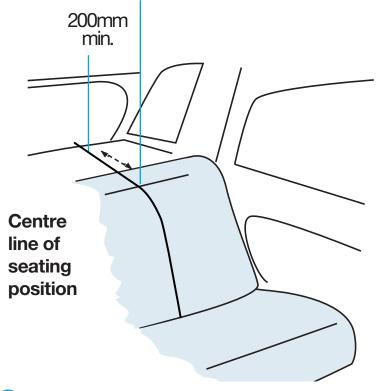

Vehicle Information

Install the anchor bolt as shown in Figure 3. It is recommended that this installation be carried out by a child restraint fitting station or licenced motor mechanic.

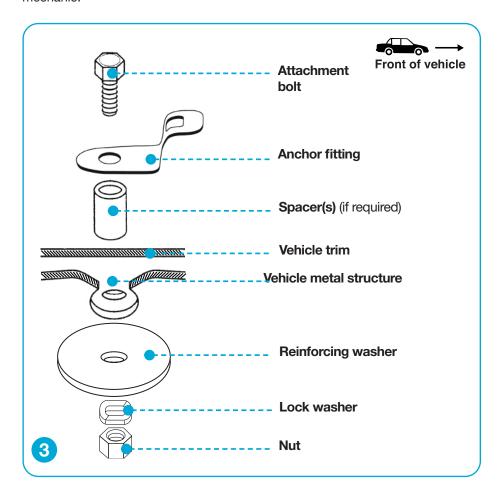

For vehicles other than sedans

 
In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle.



WARNINGS


- CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD OR SYNTHETIC STRUCTURES. WHEN DRILLING THE 9mm HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES.
- THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seat belts are too short then advice should be sought from a child restraint fitter and their recommendation be considered before using a seatbelt extender.
- Always check the measurements between the front of the seat back of the rear seat and all front seats in the car in which the child restraint is intended to be used, to ensure that the space is sufficient.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by child restraint and may cause injury or death. For approved aftermarket accessories please refer to page 30.
- The use of child restraints in the front seat may be restricted for children of specific ages by local legislation. Please check with your local legislation regarding any restriction for child restraint. If a car has two or more rows of seats, children under four must not travel in the front seat. If all seats, other than the front seats, are being used by children under seven years, children aged between four and six years (inclusive) may travel in the front seat, provided they use an approved child restraint or booster seat.

CAUTION: The restraint system shall not be used by more than one occupant at any one time

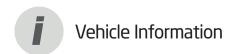

Seat Angle

All vehicle seats are different which may position the child restraint too upright or reclined for the child's comfort. The diagram below indicates the recommended installation angle range of child restraints specific to this manual. The child restraint's backrest angle should not exceed 50° (measured from the horizontal plane) when installed.

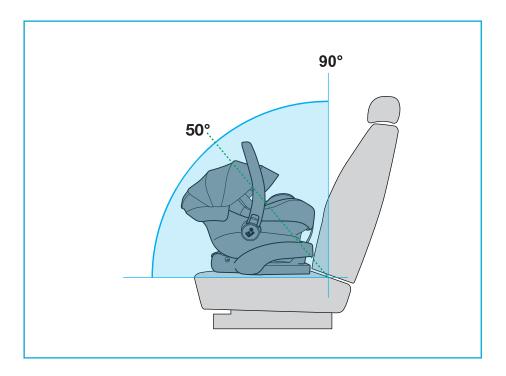

If in some rare instances you are unable to meet the installation recommendations as described above, please consult with a Professional Child Restraint Installation Specialist.

NOTE: These recommendations are specific only to the child restraint model(s) referenced in this instruction manual. Please check your specific manual closely for installation recommendations for alternative restraints.



A WARNINGS

- DO NOT install convertible child restraints excessively reclined, ensure the angle is no greater than 50°.
- DO NOT adjust harness or tether strap hardware such that it sits too close to the occupant.
- Ensure that correct seatbelt path is used and that the restraint is installed in the correct direction for rearward facing application refer to page 38 and 40.
- DO NOT wrap baby in a blanket or swaddled as infant can be ejected and killed in an accident.
- Ensure the harness fits the baby firmly.
- Ensure that any blanket or other covering may only be placed over the harness after the harness is adjusted firmly.
- The infant's legs are not be bound or wrapped together and the arms are not bound or wrapped together.







Installation using seatbelt

- Seperate the base from the capsule by activating the release handle and lifting the capsule off of the base as shown in image A. Put the capsule aside for now. Refer to page 50 for detailed instructions.
- Position the base central to the rear vehicle seat as shown in image B.
 It is recommended that the capsule and base be installed on the curb side of the car whenever possible to make entry and exit safer.
- Adjust the base angle or deploy the incline foot to help stabilise the base in ergonomic seats as needed before proceeding. Refer to page 41.
- Lift the seatbelt clamp handle up to open the installation path as shown in image B.
- Pull the vehicle seatbelt out from the retractor and press the sash and lap parts of the belt together so they are unified with no twists.
- Pass the belt under the base's nearest side wing, through the clamp's slot and then back under the base's side wing before then clipping the seatbelt in as shown in image C.







Installation Using Seatbelt







- 7. Check the vehicle belt and make sure there are no twists present before proceeding.
- 8. Pull excess belt slack out of the vehicle belt by applying pressure to the base and pulling on the sash portion of the belt so the lap portion is taught as shown in **image D**. Slack only needs to be removed, the tensioning clamp will tighten automatically.
- 9. Press the clamp handle down to tighten and lock the vehicle seat belt installation as shown in image **E.** Check base is firm by applying some side pressure to the base. Only a small amount of sideways movemet should be observable. Repeat step seven and remove additional slack if a tighter install is desired.
- 10. Attach the Top-Tether adjuster strap to your vehicle's anchor point. Ensure the strap with the variable length is used to connect to the car so the adjuster is easily accesible This can be seen in images F and G.
- 11. Loosen the top-tether strap so the adjuster is on top of the vehicle seat as seen in image G.























- 12. Place the capsule back onto the base and check to ensure the locking indicators have turned green as shown in image H.
- 13. Check the angle of the capsule once in place. Indicator on side of the capsule must be level to the ground as seen in image I. If necessary, adjust the angle following the instruction on page 41.
- 14. Pull the tether loop located in the pocket on the rear of the canopy out and loop it around the capsule, ensuring there are no twists before connecting it to the Top-Tether adjuster strap as shown in image J.
- 15. Tighten the Top-Tether strap and remove all slack by pulling on the adjuster strap as shown in **image**K. Careful not to overtighten the Top-Tether, checking that the base is not lifted off the vehicle seat.
- 16. Final installation should appear as per image L. If desired, the handle can be in either of the retracted positions during travel

NOTE: Ensure loop tether strap does not run on outside of canopy cover.

NOTE: If the car seatbelt is not long enough to secure the child restraint, do not use seatbelt extenders.

IMPORTANT: Always attach the top tether strap to the child restraint upper anchorage in your car. Refer to owner's manual.





Changing the base angle setting

- 1. To adjust the installation base angle, rotate the ergonomic knob located underneath the capsule release handle. Turn counter clockwise to extend the incline foot and clockwise to retract.
- 2. Once the desired angle is reached, stop winding to lock the position. The adjustment can be stopped at any point between retracted and maximum extension. The total adjustment is eight degrees.











Adjusting the Top Tether Strap







TO LOOSEN:

Press on the adjuster button with thumb and pull on the strap between the adjuster and the seat.

TO TIGHTEN:

Pull on the extra length of tether strap.

NOTE: Store the excess webbing in the pocket provided on the top tether assembly.



WARNINGS

CAUTION: CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION, SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.

When not in use, fold hanging tether strap and place in storage pocket provided.







Fastening the buckle

To release, press the red button to unfasten the buckle.



To fasten, insert one 2. buckle tongue as shown in image.



3. Insert the second buckle tongue as shown.

Now listen for a "click".



Remember to always pull up on the harness straps to make sure buckle is locked tightly.







Preparing Harness for Child Fitment



Rearward-facing

(Newborn to approximately 12 months)

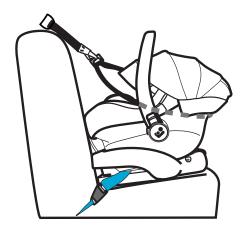

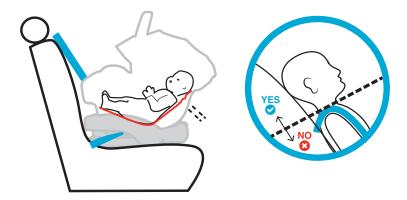

Check harness height. The shoulder straps must be in the slots which are nearest to the child's shoulders, but not lower than the child's shoulders.

Shoulder Height Markers






Height marker

SHOULDERS BELOW THIS LINE WHEN HEADREST AT HIGHEST POSITION

Rearward-facing

For newborn use up to approximately 12 months old or when the child's shoulders reach the shoulder height marker at which point you must move to the next car seat.

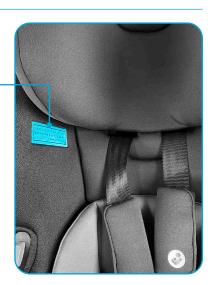

WARNINGS

- To be used only in a rearward-facing position until the infant's shoulders reach the shoulder height marker (approximately 12 months of age).
- Continue to use this infant restraint until the child reaches this limit. Infants are at risk of serious injury if they face forward too early. For information regarding the next seat for your child, refer to page 64.
- The child restraint is not suitable for the child when the child's shoulders are above the shoulder height marker.

NOTE: If the baby's neck muscles are unable to support their head, then the child should remain rear facing.









- To loosen, push-down on the harness release lever at the front of the front of the capsule and pull the shoulder straps simultaneously as shown.
- 2. To tighten, pull on the adjuster strap at the front of the capsule. For tightening tips see page 47.
- Press the red button on the buckle to release the harness tongues. Pull the harness tongues over the sides of the capsule and connect them to the magnetic harness holders.



Adjusting headrest and harness height for child fitment

- 4. Estimate harness height based on recommendations on page **44**.
- Squeeze the adjuster at the back of the headrest as shown to release the locking mechanism. Pull or push simultaneously to adjust headrest up or down.
- Release adjuster when desired height is reached, checking that it is locked in position.
- Place child in the capsule, fasten the buckle and tighten the harness before validating headrest height.



NOTE: Always adjust the height of the shoulder straps as the child grows.

NOTE: Position child in seat and adjust headrest and harness to be level or in the closest position allowable for your installation mode.

WARNING: DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.





Tightening the harness

Before pulling on adjuster strap to tighten harness, pull on harness shoulder straps first to remove slack from the waist area. Once slack is removed, pull on adjuster strap so that the harness fitment over the shoulders is firm.

Pinch the straps near the top of the shoulder to check for desired tension, this is achieved when you are unable to pinch any belt.





NOTE: Ensure shoulder straps are not being caught between child's back and the car seat as this can make tightening more difficult. Always check and ensure shoulder straps are level or in the closest position allowable for your installation mode.

NOTE: Always tighten the harness by pulling the adjuster strap straight.

CAUTION: Tightening the harness.

Tighten harness by pulling the adjuster strap up and straight as shown in image A.

Avoid pulling the strap at an angle as this will accelerate the wear and decrease longevity of use.







Buckle height adjustment


When adjusting the buckle height, it should be positioned on the lower abdomen of the child when fastened.


As your child grows, this will need to be adjusted accordingly.

Adjusting buckle height and depth position

The buckle's depth position can be adjusted by un-threading and rethreading the buckle's anchor strap through the various available slots. The slot closest to the baby is the low-birth-weight slot (1) and should only be used if you baby has been classified as such, the middle slot (2) is the newborn position and the slot furtherest from the baby (3) is for larger infants who require additional crotch space.

The height of the buckle can be altered between long and short settings. Maximum buckle height is achieved just by threading the buckle's anchor through any depth slot. To shorten the buckle's length, re-thread the buckle's anchor back through depth slot 1 or 2 after threading through the preferred depth slot.

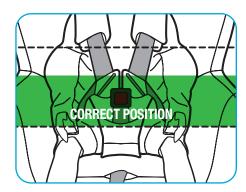

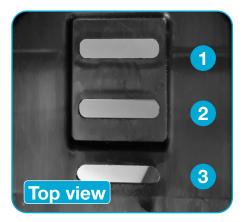













Removing the Body Insert

- 1. Loosen the harness as per page 46.
- 2. Release the buckle assembly by pressing the red button and pull the buckle tongues over the side of the seat, looping them through the elastic holders (image A).
- 3. Pull each side wing of the insert through the harness straps as shown (image B).
- 4. Push buckle through the insert hole and insert will be released (image C).





Removing Capsule from Base

- 1. Position handle in carry position and grip the handle with one hand.
- Activate capsule release handle on the base by simultaneously pushing up on the under-handle lever with your fingers and pulling the handle out with the same hand.
- Whilst activating the release handle, the base will disconnect from the capsule and the indicator should turn red as shown in **image A**.
 At this moment lift the capsule off the base.













Handle adjustment

The handle has three positions of adjustment, the carry position, the retracted position and the anti-rock position. The carry position is used to transport the capsule between environments, the retracted position is optional - designed to make removing the child easier for the parent and the anti-rock position is used to stabilise the capsule when on a flat surface – preventing it from rocking.

- To adjust the capsule carry handle, first position both hands around the connected pivot points marked by the Maxi Cosi logo and position your thumbs on top of the grey activation buttons.
- Simultaneously push down on both the left and righthand side buttons together and push or pull the handle in the desired direction of adjustment.
- When the desired position is reach, release the buttons and continue to rotate the handle until the buttons 'click' into position to lock the handle.

Note: The handle's rotational adjustment is restricted between the first and third position so do not attempt to adjust beyond these positions.





Canopy Adjustment

The canopy can be adjusted to many positions between its retracted and extended positions. To adjust the canopy gently pull or push the visor to the desired position.

The canopy features a black out mode, a canopy position that completely covers the baby when in the capsule. Simply pull the canopy forward from the start position and it will softly lock into the black out position.

Note: The handle's rotational adjustment is restricted between the first and third position so do not attempt to adjust beyond these positions.









Removing capsule from stroller







Stroller installation

When capsule attachments for stroller (sold separately) are secured, carefully line up the capsule with the stroller attachments (shown in image A), then push down to secure the connection between the attachments and capsule.

To remove: push down both Stroller release buttons at the same time and pull capsule up and out of stroller attachments (image B & C).



NOTE: Stroller adaptors may be sold separately. For more information please visit the Maxi-Cosi website www.maxi-cosi.com.au

NOTE: Maxi-Cosi recommends the following strollers for the Mico 12 capsule:

- Maxi-Cosi Lila Comfort Stroller
 - Maxi-Cosi Lila CP2 Stroller
 - Maxi-Cosi Lila Zelia 2 Stroller















Converting the car seat for low-birth weight suitability

- Ensure the headrest is in the lowest standard height setting and if it isn't, activate the headrest adjustment handle and push the headrest down, stopping when the headrest cannot be positioned any lower.
- To adjust the headrest into the low-birth-weight height and width setting, activate the headrest adjustment lever and simultaneously, push on the low-birth-weight harness button. The button is located as per image A. Once both are activated, push the headrest into the lower position, automatically adjusting the harness's width.
- To adjust the waist straps, turn the capsule upside down and pull the harness anchors out from the retention clips at the slots as shown in image B and unthread them from the slot as shown in image C.
- Once freed, slot the waist strap back through the low birth weight slot, as shown in **image D**. Pull straps to secure strap anchors in the slot.





- 5. Once the waist straps have been threaded into the low-birth-weight slots, slide the straps into the soft fabric slots to ensure optimal belt contact on baby.
- 6. To adjust the buckle position, firstly release the buckle by unthreading the buckle's anchor out from the capsule's buckle slots as shown in image E.
- 7. Once released, thread the buckle anchor firstly through the low-birthweight slot shown in image F, which is easily identified by the moulded markings and is the closest slot to the child.
- 8. Once achieved, thread the buckle anchor back through the middle slot to restrict the height, completing the transition to low-birth-weight mode as shown in image G.









Care and Maintenance - Cleaning the Buckle

Follow the manufacturer's instructions at all times.

Your child car seat is equipped with a buckle designed to give your child maximum protection during proper use. When working properly, your buckle should always fasten with an audible '**CLICK**' when both tounges are engaged.

If sticky liquids (such as baby food, fruit juice, etc.) get into the buckle it may become sluggish and you will not hear a 'CLICK'.

The buckle should be cleaned by following the steps below.

- Push red button to release the buckle from the harness.
- Unthread the buckle's retaining strap by threading the anchor back through the product buckle slots, releasing the buckle from the product. Refer to page 48 for more details.
- Place the buckle under running water 40 degrees Celsius approximately) letting the water flow through the mouth of the buckle for one minute.
- Immediately latch and unlatch the tongues into the buckle several times until a strong audible cick is heard.
- 5. Allow the buckle to dry.
- If the buckle still does not work, contact Dorel Australia Customer Service on 1300 809 526



CAUTION: Do not oil any part of buckle. Water may be hot so proceed with care.

TIP: If the buckle does not return to original working order, contact Dorel Australia Customer Service on 1300 809 526.

If you are a New Zealand customer, please contact IGC Dorel New Zealand Customer Service on 0800 628 000.





WASHING INSTRUCTIONS

SEAT INSERTS

Ö

Lukewarm setting

- delicate cycle



Tumble dry 10-15 minutes on low heat



Do not dry clean



Never clean with bleach or spirit-type cleaners

CANOPY



Hand wash in lukewarm water



Do not tumble dry



Do not dry clean



Never clean with bleach or spirit-type cleaners



All other surfaces should be cleaned with a mild soap and water

VERY IMPORTANT:

Only replace the cover with a manufacturer's supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.



Removing the inserts

Remove the body inserts as needed - referring to the detailed sections found on page **49**.

Removing the harness pads

Each harness pad has two press studs on the external edge. Locate the press studs and release them to unwrap each pad from the harness straps.

Removing the canopy

- Disconnect the canopy press studs on both sides and rear of the shell (image A).
- 2. Disconnect canopy plastic hoop from shell (**image B**).
- 3. Pull the canopy hoop from the canopy channel (**image C**).

Removing infant trim covers

- Remove the harness pads by releasing press studs on the pads (image D).
- Pull and weave the crotch buckle pad's stem through the slots of the body trim (image E).
- 3. Remove the infant insert (image F).





























Remove headrest cover

- Adjust the headrest into the highest position (see detailed section on page 46).
- 2. Release the press studs around the top of the harness straps (**image A**).
- Unlatch the elastic cords on both sides of the headrest adjuster (image B).
- 4. Disconnect all press studs and remove the cover from top (**image C**).

Removing capsule cover

- Disconnect the press studs and the ball studs located in the located in the central body and around the shell, working from front to back (image D).
- 2. Un-loop cover over canopy adjusters and capsule release buttons on both sides (**image E**).
- 3. Move headrest to lowest position (see detailed section on page 40).
- Loosen rear of the trim from the shell and un-loop trim from side buttons (both sides) and front harness strap adjuster (image F).
- 5. Remove main body trim (image G).



Installing capsule cover

- Place cover over the headrest and wrap it around the capsule edge (image A).
- Pull the cover over the canopy hub and around the stroller release buttons on both sides of the shell (image B & C).
- 3. Wrap the cover around the harness adjuster button (**image D**).
- Slide harnesses into the harness slots on both left and right of lower trim body (image E).
- Pull the crotch buckle out from the appropriate slot on the cover (image F).
- Connect all press studs and ball studs around the cover onto the outside of the shell (image G).
- Connect press studs on the back flap to the central locations on the body (image H).

Installing Headrest Cover

- 1. Adjust the headrest to the highest position (**image I**).
- Pull the elastics on the headrest cover around each side of the headrest and pull the cover onto the headrest (image J).
- 3. Tuck the cover around the headrest adjuster (**image K**).















































 Put the headrest flap around the harnesses on both sides and connect the press studs next to the harnesses (image L).

Putting on Infant Trim Covers

- Pull the crotch buckle through appropriate hole on the infant insert (image M).
- 2. Wrap infant insert around harnesses on both sides (**image N**).
- 3. Fit harness pads on both harnesses with press studs (**image 0**).
- Pull the crotch buckle through the crotch pad. Push the bottom of the crotch pad into the appropriate hole on the infant insert and the cover (image P & Q).

Put on the Canopy

- Push the canopy hoop into the channel closest to the visor (image R).
- Connect the hoop to the canopy hub on both left and right of the shell (image S).
- Connect the top press stud to the stud on the canopy and connect the bottom stud to the canopy hub (image T).
- Connect the press stud at the back on the canopy to the trim cover and shell (image U).
- 5. Roll up the top tether and tuck it into the storage pocket (**image V**).



Care and Maintenance - Troubleshooting

Twisted Harness

If you notice your car seat's harness has a twist in it like shown in **image A**, follow the steps below to identify the type of twist and how to fix it.

Identifying the Type of Twist:

There are two types of harness twist, a single twist on the upper shoulder strap and a double twist, split around the buckle tongue. A single twist looks like **image A** and a double twist looks like **image B**. If you cannot identify the type of twist you have from these images please follow the below steps.


- Adjust the headrest into the highest position (see detailed section on page 46).
- Remove the inserts and backrest fabrics (to expose the plastic seat) (see detailed sections on pages 49, 58 and 59).
- Inspect the belt below the buckle tongue near the waist area of the seat and if a twist is observed, you have a double twist and if not, a single.

Single Twist:

- Loosen the harness to maximum and then slide the twist up to the headrest slot as shown in **image C**.
- Whilst keeping the twist at the headrest slot, pull the adjuster strap - tightening the harness and this will force the twist behind the backrest. This will fix the single twist.





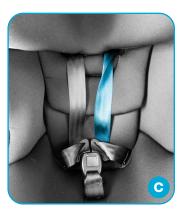

Care and Maintenance - Troubleshooting





Double Twist:

- To adjust the waist straps, turn the capsule upside down and pull the harness anchors out from the retention clips at the slots as shown in image A.
- Once freed, rotate the waist strap to fix the twist. Snap the harness anchor back into position until it clicks (image B).



NOTE:

If this troubleshooting guide did not resolve your problem, please contact our customer care team:

If the buckle does not return to original working order, contact Dorel Australia Customer Service on 1300 809 526.

If you are a New Zealand customer, please contact IGC Dorel New Zealand Customer Service on 0800 628 000.

General Maintenance:

- · All other surfaces should be cleaned with a mild soap and water.
- Never clean with ammonia, bleach based or spirit type cleaners.
- · Check the webbing for fraying
- Ensure there are no cracks in moulding or the plastic moulding.
- Check the Harness Adjuster is operating and is clamping the webbing.
- If any part of the restraint is cracked or broken, seek repair immediately or replace the child restraint.



The Next Seat for your Child

Type A4/B convertible car seat

To be used only in a rearward-facing position until the infants shoulders either reach the lower shoulder height marker (approximately 12 months of age) or reach the middle height marker (approximately 2-3 years of age).

Then to be used in a forward-facing position until the child's shoulders reach the upper shoulder height marker (approximately 4 years of age).



For more information, visit maxi-cosi.com.au



Guarantee



Dorel Australia Pty Ltd warrants your new product to be free from defects in materials and workmanship for 10 years on the seat & 3 years on the trim, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian consumer law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Dorel Australia Pty Ltd will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Dorel Australia Pty Ltd will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase or register your product with us within 3 months from point of purchase via our website **www.maxi-cosi.com.au.** If you are having difficulties with your product contact our Customer Service Team on ph: 1300 809 526 or alternatively, via our website at **www.dorel.com.au.** Warranty claims and claims for expense incurred in returning this product can be addressed to our **Customer Service Team** at **655-685 Somerville Road, West Sunshine, Vic, 3020.** Hours: 8:30 am to 5:00 pm, Monday to Friday.

For New Zealand please contact **Customer Service Centre**, 14 **Sir William Avenue**, **East Tamaki**, **Auckland**, **2013**. Auckland: **(09) 274 1040** NZ wide: **0800 628 000** (toll free). Hours: 8:00am - 4:00pm, Monday to Friday.

Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Notes		

Notes		

Dear Customer,
Don't forget to register your product
within 3 months of purchase for
the Lifetime Warranty offer*

Please visit to register now.

www.maxi-cosi.com.au



Suitable for model

• CMB - 13 - A



© 2021 Dorel Australia, Pty Ltd. All Rights Reserved.

*Terms and conditions apply.

