

**EN**

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

**DE**

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

**FR**

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

**ES**

 
Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

**IT**

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

**PL**

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

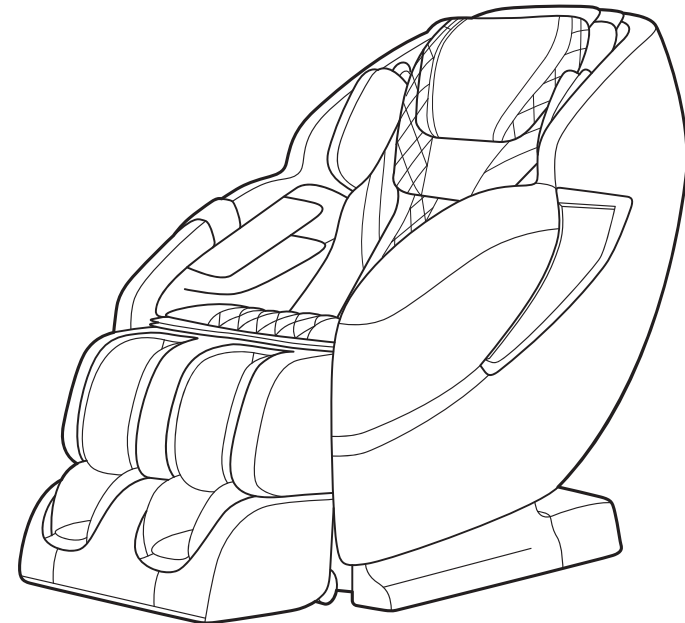

**US** office: Fontana

**UK** office: Ipswich

**AU** office: Truganina

**DE** office: Hamburg

**FR** office: Saint Vigor d'Ymonville

**PL** office: Gdańsk

**USER'S MANUAL/MANUEL DE L'UTILISATEUR****JL10025**

Massage Chair / Fauteuil de Massage

## IMPORTANT SAFETY INSTRUCTIONS

### OPERATING SURROUNDINGS

- OPERATING ENVIRONMENT
- Do not use or store the massage chair under damp conditions; i.e. bathroom, sauna, spa, to avoid any mold development, electric shock, fire or mechanical failure.
- Don't use the massage chair outdoors.
- Don't use the massage chair under dusty and temperature-varying conditions.
- Don't place the massage chair near heater(s) stove or direct sunlight to avoid inner components overheating which may lead electrical fires and shock.
- Make sure to place the massage chair on flat level ground surface.
- The chair should be placed on carpet, wood or hard surface flooring.
- Make sure the power plug is properly grounded to avoid shock and injury.
- Don't use the machine while smoking



### FOLLOWING CONDITIONS REQUIRING CONSULT FROM A MEDICAL DOCTOR BEFORE USE

- Suffered from malignant tumor
- Serious heart disease
- Serious skin disease
- Bone disease
- While pregnant or menstruating
- On rest by the doctor
- Spinal conditions including injuries associated to the back and spine
- Hypertension and cramping
- Arthritic bone disease
- Any implanted medical device such as pacemaker
- Suffering from internal conditions (i.e. gastritis, enteritis, diarrhea, hepatitis)
- Serious blood circulation trouble
- Consciousness issues such as vertigo and other equilibrium matters

### WARNING

Children under the age of 18 years old or with physical or mental conditions are not permitted to use this product unattended by an able adult and with the permission of a medical doctor. These precautions are taken to prevent injury and damage.

## IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following should be strictly noted.

### CAUTIONS

Non-qualified technicians are not permitted to dismantle or repair this product to avoid fire, electrical shock or serious injury.



Do not clean or wipe down this product with anything wet or moist when this symbol is shown.



When storing or during maintenance, be sure to disconnect the power plug from socket. Do not detach the plug with wet hands.



Make sure to turn the power switch to the "off" position and detach the power plug when cleaning or storing the product.



During cleaning or when moving the chair, make sure to detach power cord from the wall and chair to avoid fire or electrical shock. Do not place the machine on a unstable, uneven surface to avoid damage, insulation, failure or electrical shock.



When storing the machine, make sure to disconnect power plug from the outlet and chair to avoid fire caused by electrical surges.



Clean power plug periodically to avoid buildup leading to possible fire.



Do not use it at any unsafe area or for any other purposes than personal use. Not for commercial use.



Do not store the chair in areas that are not climate controlled. Must be in room temperature with very low humidity.



Keep the power cord unobstructed at all time, i.e. not twisted, knotted, over bent or pulled and do not place anything heavy on it.



## IMPORTANT SAFETY INSTRUCTIONS

### ⊘ CAUTIONS

Do not make any modifications or change components by an unqualified person. ⊘

Do not dismantle the machine by unauthorized person to avoid electrical shock, short-circuit or fire. ⊘

Do not store it near a fire, heater or flammable substances it is one of the major reasons of causing product damage. ⊘

Should any abnormality occur(i.e. burning smell), stop using immediately and detach power plug from outlet. ⊘

 
Please contact your local seller or authorized service agent for maintenance to avoid electrical fire and injury. ⊘

Only proper rated voltage must be used. Stop using immediately if power cord or power plug is damaged or not tightly fitted into the outlet or the base of the chair. ⊘

Be sure to keep children and pets away while operating to avoid any injury. Do not place the chair in direct sunlight at all times. ⊘

If the supply cord is damaged, it must be replaced by a unqualified technician. ⊘


## NAME OF EACH PART

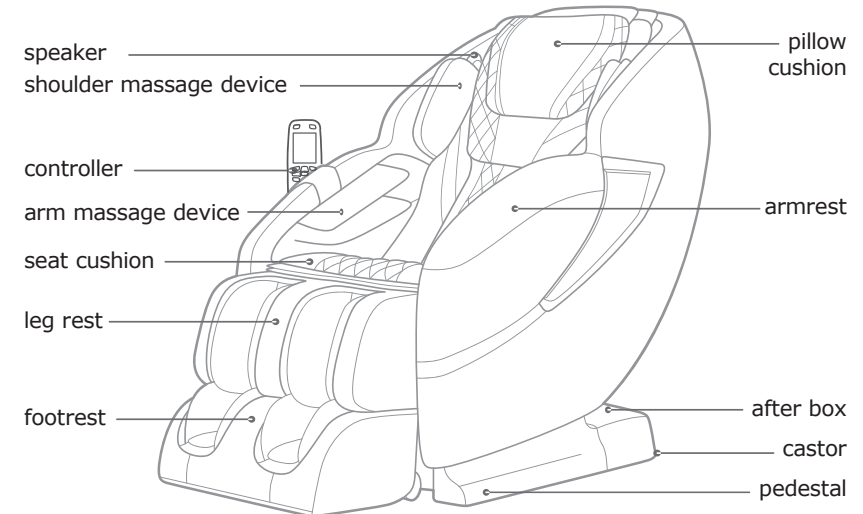

### Voice Control Enter

Serial No	Automatic Program	Voice Control Entry	Answer Entry
1		Hello Massage	I Am Here
2		Massage On	Powered On
3		Switch Off	Shut Down
4		Pause Massage	Paused
5		Resume Massage	Massage Resumed
6	Z.G	Zero Gravity On	Zero Gravity On
7		Stretch Mode	Stretch Mode Is On
8	DEMO	Vitality Mode	Vitality Awakening Has Been Turned On
9	GENTLE	Soothing Mode	Soothing Mode Is On
10	NECK&SHOULDER	Shoulder Neck Mode	Shoulder Neck Mode Is On
11	VIGOROUS	Motion Mode	Sport Mode Is On
12	RELAX	Relaxation Mode	Relaxation Is On
13	LOWER BACK	Hip Mode	Beauty Mode Is On
14		Turn On Heating	Heating On
15		Stop Heating	Heating Off
16		Sole Massage	The Sole Roller Is Turned On
17		Stop Foot Massage	Sole Roller Closed
18		Back Up	Backrest Raised
19		Lie Down A Little	Backrest Lowered
20		Backrest Stop	Backrest Stopped
21		Increase Efforts	Efforts Have Been Intensified
22		Reduce Force	The Force Has Been Reduced
 
# INSTRUCTIONS ON CONTROL PANEL

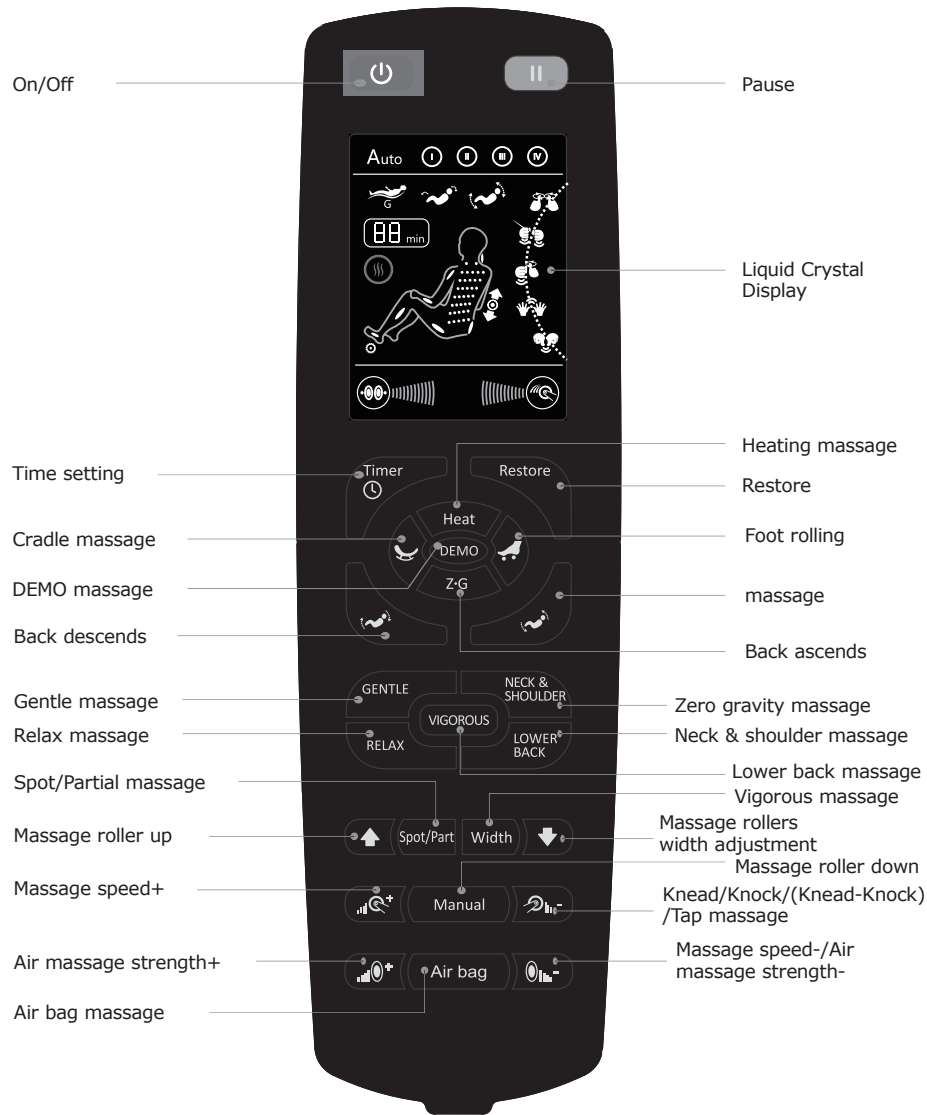


**!** Warning: Only rated supply 110V must be used to avoid damage to electronic components.

# OPERATION GUIDE
 
## 1. Powering up the massage chair

First be sure the power switch at the back of the massage chair is in the off "O" position. then insert the power cable into the port to the left of the switch. Once firmly plugged in, proceed to plug the power cord into the outlet. Then put the switch to the on "I" and the remote should light up.

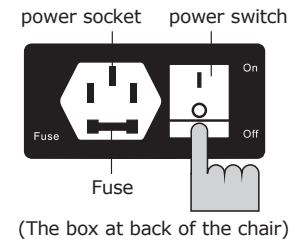

## 2. Starting your massage

Sit in the chair with your buttocks firmly pressed against the backrest to ensure that the chair will provide a consistent massage pressure from top to bottom. The press "on" button and select a massage.



ON/OFF



Time setting

Press the "time setting" button to adjust massage time. You can adjust time to maximum of 30 minutes. The unit of increment is 5 minutes.

## 3. Adjusting the angle of the recline

Please adjust the backrest and leg rest angle prior to selecting a massage function. Getting into position before selecting the massage function allows for the chair to deliver a more accurate massage. The chair and leg rest can be adjusted simultaneously or the independently, depending on the button selected on the remote as illustrated below.



## 4. Stop or finish massage



Pause








Normal stop: the timing function automatically fix time is 15 minutes, time out, all the program will stop and keep the setting posture. Force stop: when press the restore during massage, it will stop massage immediately, press again to continue.

## OPERATION GUIDE

### 5. Electing a Preset Programmed Massage

DEMO, Gentle, Neck & shoulder, Relax, Lower back, Vigorous, Cradle massage.

Automatic programs combine shiatsu, kneading, tapping and air massage.

Button	Description	Main function
	DEMO message program	Press for a 7-minute demonstration of all available massage techniques.
	Gentle message program	Kneading massage, air massage and tapping massage. The recline of the backrest can be adjusted during the massage.
	Neck & shoulder message program	Kneading and beat massage program. The angle of backrest cushion and leg rest cushion could be adjusted during the process.
	Relax message program	This course combines mainly with quick kneading, tapping and air massage. The angle of backrest cushion and leg rest cushion could be adjusted during the process.
	Lower back message program	Kneading and scraping massage program. The angle of backrest cushion and leg rest cushion could be adjusted during the process.
	Vigorous message program	A slower pace massage, delivering a soothing intensity with full airbag massage.
	Cradle message program	This course combines mainly with cradle massage. The angle of backrest cushion and leg rest cushion could be adjusted during the process.







- For above programs, the fixed time is 15 minutes and the default of airbag intensity is low.
- The above automatic full-body massage courses can not be combined with other programs.

## OPERATION GUIDE

### Manual setting course


 


Introduction of manual setting course

Partial air massage is the course which targets different needs and areas of body.

Button	Description	Main function
	 Kneading	Press button one time to start kneading massage. The speed is adjustable.
	 Knocking	Press two times to start the knead-knocking massage. The speed is adjustable.
	 Knead-Knocking	Press three times to start the knocking massage. The speed and width is adjustable.
	 Tapping	Press four times to start the tapping massage. The speed and width is adjustable.
	 Shiatsu	Shiatsu massage.

- The above manual setting course could not be combined with other courses.
- For the above manual setting course, the default setting for the massage is spot-specific with medium width. Speed and width are adjustable by pressing relative button.


 


Function introduction for manual setting course

Button	Description	Main function
	Speed adjustment	There are five levels to choose.
	Width adjustment	There are three levels to choose from narrow, medium and wide.
	Spot	Partial massage/Press the button one time the rollers will stay in one locatio Press two times to start the partial massage. The third time to start full course massage.n.
	Message roller move up Message roller move down	Press down the button to move massage roller, release the button to stop.

## OPERATION GUIDE

### Functions on buttons

#### Introductions on buttons used for manual setting course

Button	Description	Main function
	Air pressure intensity adjustment	Air pressure intensity is adjustable It could be adjusted only in air pressure massage. There are 5 levels of strength that can be adjusted.
	Air massage	Press one time to start air massage for upper body. Press two times to start air massage for lower body. Press three times to start air massage for full body. Close by four times.
	Rolling massage	Foot rolling control key. Press the button to start foot rolling massage, press again to stop.
	Heating function	Waist heating function. Press the button to start waist heating massage, press again to stop.

#### Music Function

Connecting your mobile device: Turn on blue tooth of mobile phone or tablet. then select blue tooth device labeled (code JL10025, password "9999"), after it syncs with massage chair speakers, you can now play your favorite tunes or audio books form your massage chair. Enhance your massage experience!



Warning: Supervision and guidance are necessary when people with disabilities and mental illness. Please advise with your doctor before using the chair if you have any medical conditions. Children under 18 should not use the chair and consult with a doctor for approval if attempted. Do not operate the chair and consult with a doctor for approval if attempted. Do not operate the chair if there are any children or pets near by. Serious injuries may occur if these instructions are not followed.

## SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When power cord are damaged, it must be changed from special power cord or available from other manufacturer or service department.



!Warning: Do not dismantle, modify or change components by unqualified person to avoid electric shock or fire.

## DAILY CARE AND MAINTENANCE

#### Storage guide

- Do not dismantle any part the chair or make modifications. Serious injury make occur.
- Do not attempt to repair the machine by unqualified person to avoid electric shock or fire.
- Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- Keep the massage chair clean and free dust. Do not place the massage chair in a humid area.
- If not in use for a long period ,please cover it with a cloth to protect from dust.
- Do not place the massage chair under sunlight or heating source like a heater or directly by a window that has direct sunlight.

#### Maintenance

- Use a neutral detergent only that is free of acid and alcohol.
- Use a neutral detergent to clean the back cushion, head cushion and leg cushion. Let it dry.
- With a damp cloth wipe down the plastic parts, pipe and synthetic leather material of the chair.

- Make sure not to use any gasoline, banana oil, benzene based cleaners to avoid leather color fading or discoloring.
- Do not spray pesticide or aerosols near or on the chair to avoid electric shock or fire.
- Please clean with dry cloth to avoid mechanical failure.

#### Controller maintenance

- Do not place the massage chair near heater or fire.
- Keep away from humidity to avoid electric shock and damage to the chair.
- Please clean dust with soft cloth or small banister brush.
- Make sure not to use detergents containing benzene, gasoline, banana oil.

## TROUBLE SHOOTING

Checking is necessary in frequent usage.

Make sure the machine work normally before usage, after not in used for long time.

Abnormality situation	Solution guide
Failure to start and indication light is off	Check the plug is well connected./Check the switch on the chair is turned on in the "I" position.
Sound in operation	<p>The following sounds are normal</p> <ul style="list-style-type: none"> <li>• The mechanism will produce a sound for kneading or knocking</li> <li>• Sound changes after speed adjustment</li> <li>• Sound from when the rollers go up or down.</li> <li>• When the chair does a tapping massage it will make the chair vibrate making a sound.</li> <li>• When the air inflates and deflates it will make a swooshing sound</li> <li>• Sound for airbag inflating and venting. Airbags may crackle.</li> <li>• Sound for leg adjustment.</li> <li>• Sound for motor when the massage chair is loaded.</li> </ul>

## SPECIFICATION

Product name	Massage Chair
Model	JL10025
Power supply	110V~60HZ
Rated power	150W
Rated working time	15min

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

### ENVIRONNEMENT D'UTILISATION

- N'utilisez pas et ne rangez pas le fauteuil de massage dans des conditions humides : par exemple, salle de bain, sauna, spa, afin d'éviter tout développement de moisissure, choc électrique, incendie ou défaillance mécanique.
- N'utilisez pas le fauteuil de massage à l'extérieur.
- N'utilisez pas le fauteuil de massage dans des conditions poussiéreuses et à température variable.
- Ne placez pas le fauteuil de massage près d'un radiateur ou à la lumière directe du soleil pour éviter la surchauffe des composants internes, ce qui pourrait provoquer des incendies électriques et des chocs électriques.
- Assurez-vous de placer le fauteuil de massage sur une surface plane.
- Le fauteuil doit être placé sur de la moquette, du bois ou un revêtement de sol dur.
- Assurez-vous que la fiche d'alimentation est correctement mise à la terre pour éviter les chocs et les blessures.
- N'utilisez pas la machine en fumant.



### CONDITIONS SUIVANTES NÉCESSITANT LA CONSULTATION D'UN MÉDECIN AVANT UTILISATION

- Atteint d'une tumeur maligne
- Maladie cardiaque grave
- Maladie cutanée grave
- Maladie des os
- Pendant la grossesse ou les règles
- Au repos par le médecin
- Affections de la colonne vertébrale, y compris les blessures associées au dos et à la colonne vertébrale
- Hypertension et crampes
- Maladie osseuse arthritique
- Tout dispositif médical implanté tel qu'un stimulateur cardiaque
- Souffrant d'affections internes (c'est-à-dire gastrite, entérite, diarrhée, hépatite)
- Troubles graves de la circulation sanguine
- Problèmes de conscience tels que vertiges et autres problèmes d'équilibre

### AVERTISSEMENT

Les enfants de moins de 18 ans ou souffrant de conditions physiques ou mentales ne sont pas autorisés à utiliser ce produit sans la surveillance d'un adulte capable et avec l'autorisation d'un médecin. Ces précautions sont prises pour éviter les blessures et les dommages.

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

Pour des raisons de sécurité et afin d'indiquer clairement les dangers potentiels en cas d'utilisation incorrecte du produit, les instructions suivantes doivent être strictement respectées.

### ATTENTIONS

Les techniciens non qualifiés ne sont pas autorisés à démonter ou à réparer ce produit pour éviter un incendie, un choc électrique ou des blessures graves.



Ne nettoyez pas ou n'essuyez pas ce produit avec quoi que ce soit de mouillé ou d'humide lorsque ce symbole est affiché.



Lors du stockage ou pendant l'entretien, assurez-vous de débrancher la fiche d'alimentation de la prise. Ne débranchez pas la fiche avec les mains mouillées.



Assurez-vous de mettre l'interrupteur d'alimentation en position « arrêt » (off) et de débrancher la fiche d'alimentation lors du nettoyage ou du stockage du produit.



Pendant le nettoyage ou le déplacement du fauteuil, assurez-vous de débrancher le cordon d'alimentation du mur et du fauteuil pour éviter un incendie ou un choc électrique.



Ne placez pas la machine sur une surface instable et inégale pour éviter tout dommage, isolation, panne ou choc électrique.

Lors du stockage de la machine, assurez-vous de débrancher la fiche d'alimentation de la prise et du fauteuil pour éviter un incendie causé par des surtensions électriques.



Nettoyez périodiquement la fiche d'alimentation pour éviter toute accumulation susceptible de provoquer un incendie.



Ne l'utilisez pas dans une zone dangereuse ou à d'autres fins qu'un usage personnel. Pas pour un usage commercial.



Ne rangez pas le fauteuil dans des zones non climatisées. Doit être à température ambiante avec une humidité très faible.



Gardez le cordon d'alimentation dégagé à tout moment, c'est-à-dire qu'il n'est pas tordu, noué, trop plié ou tiré et ne placez rien de lourd dessus.





## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

### ⊘ ATTENTIONS

N'effectuez aucune modification ou ne changez aucun composant par une personne non qualifiée. ⊘

Ne démontez pas la machine par une personne non autorisée pour éviter un choc électrique, un court-circuit ou un incendie. ⊘

Ne le stockez pas près d'un feu, d'un radiateur ou de substances inflammables, c'est l'une des principales raisons d'endommager le produit. ⊘

En cas d'anomalie (c'est-à-dire une odeur de brûlé), arrêtez immédiatement de l'utiliser et débranchez la fiche d'alimentation de la prise. ⊘

 
Veuillez contacter votre vendeur local ou un agent de service agréé pour l'entretien afin d'éviter les incendies électriques et les blessures. ⊘

Seule la tension nominale appropriée doit être utilisée. Arrêtez immédiatement de l'utiliser si le cordon d'alimentation ou la fiche d'alimentation est endommagé ou mal inséré dans la prise ou la base du fauteuil. ⊘

Assurez-vous d'éloigner les enfants et les animaux domestiques pendant l'utilisation pour éviter toute blessure. Ne placez pas le fauteuil à la lumière directe du soleil en tout temps. ⊘

Si le cordon d'alimentation est endommagé, il doit être remplacé par un technicien qualifié. ⊘


## NOM DES PIÈCES

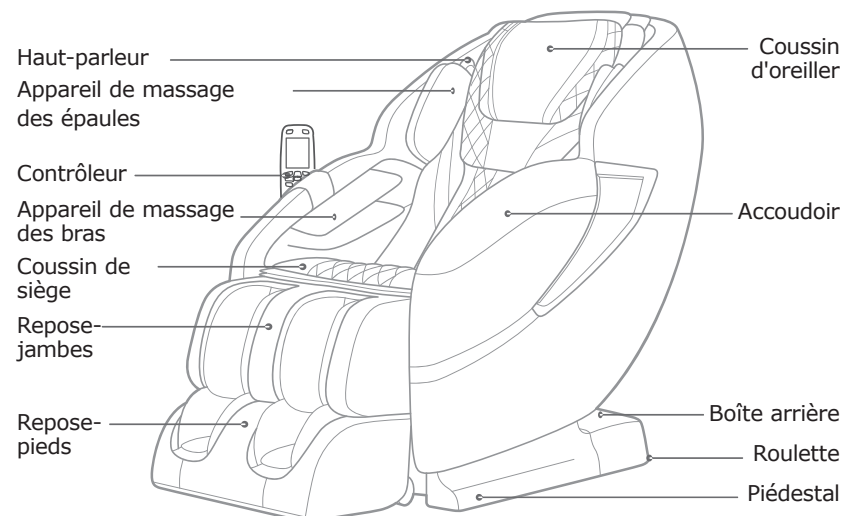

### Entrée de Commande Vocale

Numéro de Série	Programme Automatique	Entrée de Commande Vocale	Entrée de Réponse
1		Hello Massage (Bonjour massage)	I Am Here (Je suis là)
2		Massage On (Massage activé)	Powered On (Allumer)
3		Switch Off (Éteindre)	Shut Down (Fermer)
4		Pause Massage (Suspendre le massage)	Paused (En pause)
5		Resume Massage (Reprendre le massage)	Massage Resumed (Massage repris)
6	Z.G	Zero Gravity On (Zéro gravité activé)	Zero Gravity On (Zéro gravité activé)
7		Stretch Mode (Mode étirement)	Stretch Mode Is On (Le mode étirement est activé)
8	DÉMO	Vitality Mode (Mode vitalité)	Vitality Awakening Has Been Turned On (L'éveil de la vitalité a été activé)
9	DOUX	Soothing Mode (Mode apaisant)	Soothing Mode Is On (Le mode apaisant est activé)
10	COU & ÉPAULES	Shoulder Neck Mode (Mode épaule cou)	Shoulder Neck Mode Is On (Le mode épaule cou est activé)
11	VIGOUREUX	Motion Mode (Mode mouvement)	Sport Mode Is On (Le mode sport est activé)
12	DÉTENTE	Relaxation Mode (Mode détente)	Relaxation Is On (Le mode détente est activé)
13	BAS DU DOS	Hip Mode (Mode hanche)	Beauty Mode Is On (Le mode beauté est activé)
14		Turn On Heating (Allumer le chauffage)	Heating On (Chauffage allumé)
15		Stop Heating (Arrêter le chauffage)	Heating Off (Chauffage éteint)
16		Sole Massage (Massage de la semelle)	The Sole Roller Is Turned On (Le rouleau de semelle est allumé)
17		Stop Foot Massage (Arrêter le massage des pieds)	Sole Roller Closed (Rouleau de semelle fermé)
18		Back Up (Dossier relevé)	Backrest Raised (Dossier relevé)
19		Lie Down A Little (S'allonger un peu)	Backrest Lowered (Dossier abaissé)
20		Backrest Stop (Arrêt du dossier)	Backrest Stopped (Dossier arrêté)
21		Increase Efforts (Augmenter les efforts)	Efforts Have Been Intensified (Les efforts ont été intensifiés)
22		Reduce Force (Réduire la force)	The Force Has Been Reduced (La force a été réduite)
 
## INSTRUCTIONS DU PANNEAU DE COMMANDE

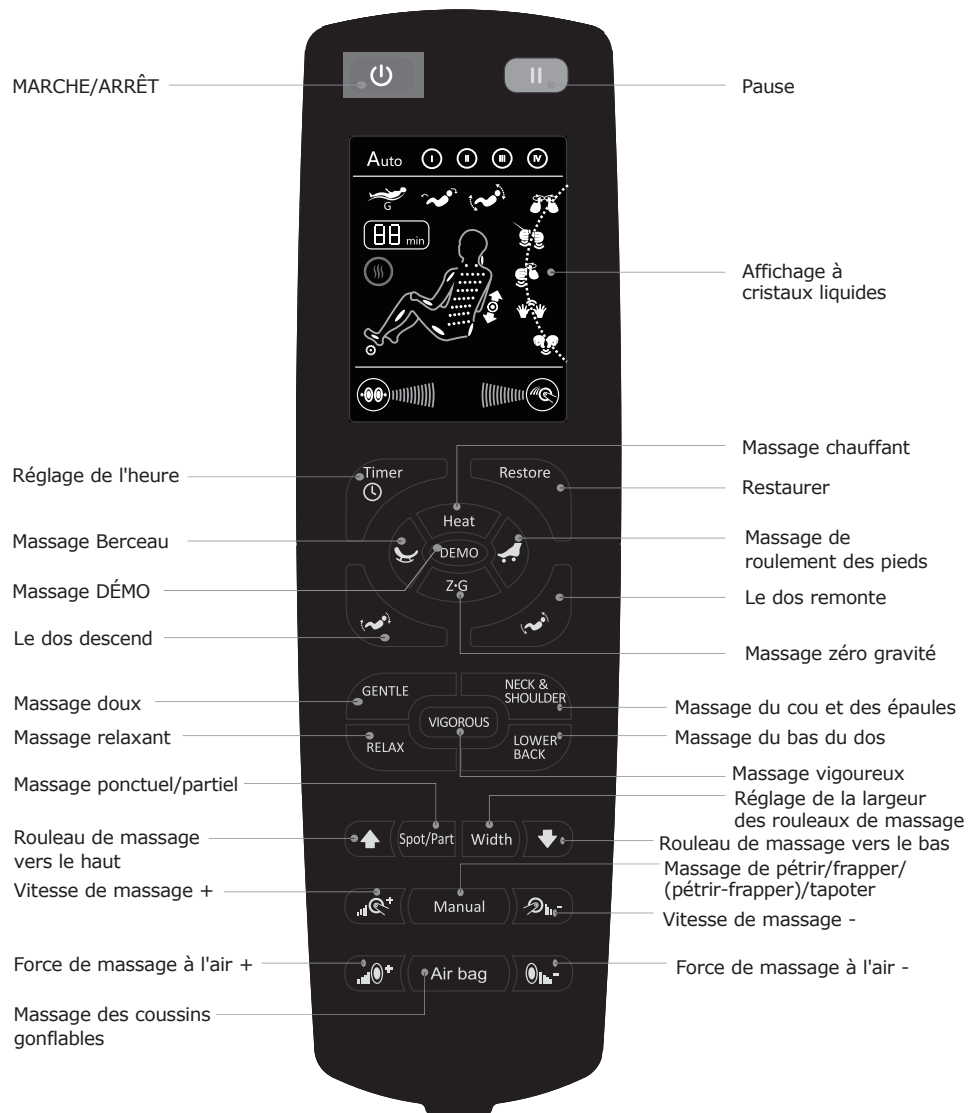


**!** Avertissement: Seule une alimentation nominale de 110 V doit être utilisée pour éviter d'endommager les composants électroniques.

## GUIDE D'OPÉRATION
 
### 1. Allumer le fauteuil de massage

Assurez-vous d'abord que l'interrupteur d'alimentation à l'arrière du fauteuil de massage est en position d'arrêt « O », puis insérez le câble d'alimentation dans le port à gauche de l'interrupteur. Une fois fermement branché, branchez le cordon d'alimentation dans la prise. Mettez ensuite l'interrupteur sur « | » et la télécommande devrait s'allumer.

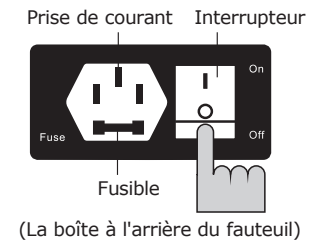

### 2. Commencer votre massage

Asseyez-vous sur la chaise avec vos fesses fermement appuyées contre le dossier pour vous assurer que la chaise fournira une pression de massage constante de haut en bas. Appuyez ensuite sur le bouton « marche » et sélectionnez un massage.



Appuyez sur le bouton « réglage de l'heure » pour régler le temps de massage. Vous pouvez régler le temps jusqu'à un maximum de 30 minutes. L'unité d'incrément est de 5 minutes.

### 3. Ajuster l'angle d'inclinaison

Veillez régler l'angle du dossier et du repose-jambes avant de sélectionner une fonction de massage. Se mettre en position avant de sélectionner la fonction de massage permet au fauteuil de délivrer un massage plus précis. Le fauteuil et le repose-jambes peuvent être réglés simultanément ou indépendamment, selon le bouton sélectionné sur la télécommande, comme illustré ci-dessous.



### 4. Arrêter ou terminer le massage Pause

Arrêt normal: la fonction de minuterie fixe automatiquement le temps est de 15 minutes, le temps mort, tout le programme s'arrêtera et conservera la posture de réglage.








Arrêt forcé : lorsque vous appuyez sur le bouton de restauration pendant le massage, le massage s'arrête immédiatement, appuyez à nouveau pour continuer.

## GUIDE D'OPÉRATION

### 5. Sélectionner un programme de massage prédéfini

**DÉMO, Doux, Cou & épaules, Détente, Bas du dos, Vigoureux, Berceau massage.**

Les programmes automatiques combinent le shiatsu, le pétrissage, le tapotement et le massage à l'air.

Bouton	Description	Fonction principale
	Programme de massage DÉMO	Appuyez sur pour une démonstration de 7 minutes de toutes les techniques de massage disponibles.
	Programme de massage doux	Massage par pétrissage, massage à l'air et massage par tapotement. L'inclinaison du dossier peut être ajustée pendant le processus.
	Programme de massage du cou et des épaules	Programme de pétrissage et de massage par battements. L'angle du coussin de dossier et du coussin de repose-jambes peut être ajusté pendant le processus.
	Programme de massage relaxant	Ce cours combine principalement des pétrissages rapides, des tapotements et des massages à l'air. L'angle du coussin de dossier et du coussin de repose-jambes peut être ajusté pendant le processus.
	Programme de massage du bas du dos	Programme de massage par pétrissage et grattage. L'angle du coussin de dossier et du coussin de repose-jambes peut être ajusté pendant le processus.
	Programme de massage vigoureux	Un massage à rythme plus lent, délivrant une intensité apaisante avec un massage complet de l'airbag.
	Programme de massage berceau	Ce cours se combine principalement avec le massage du berceau. L'angle du coussin de dossier et du coussin de repose-jambes peut être ajusté pendant le processus.







- Pour les programmes ci-dessus, la durée fixe est de 15 minutes et la valeur par défaut de l'intensité de l'airbag est faible.
- Les cours de massage complet du corps automatiques ci-dessus ne peuvent pas être combinés avec d'autres programmes.

## GUIDE D'OPÉRATION

### Cours de réglage manuel


 



**Introduction du cours de réglage manuel**

Le massage à air partiel est le cours qui cible différents besoins et zones du corps.

Bouton	Description	Fonction principale et guide de réglage
	 Pétrissage	Appuyez une fois sur le bouton pour démarrer le massage par pétrissage. La vitesse est réglable.
	 Frappement	Appuyez deux fois pour démarrer le massage par frappement. La vitesse est réglable.
	 Pétrissage-frappement	Appuyez trois fois pour démarrer le massage par pétrissage-frappement. La vitesse et la largeur sont réglables.
	 Tapotement	Appuyez quatre fois pour démarrer le massage par tapotement. La vitesse et la largeur sont réglables.
	 Shiatsu	Massage par shiatsu.

- Le cours de réglage manuel ci-dessus ne peut pas être combiné avec d'autres cours.
- Pour le cours de réglage manuel ci-dessus, le réglage par défaut pour le massage est spécifique à un point avec une largeur moyenne. La vitesse et la largeur sont réglables en appuyant sur le bouton correspondant.


 


**Introduction des fonctions pour le cours de réglage manuel**

Bouton	Description	Fonction principale
	Réglage de la vitesse	Il y a cinq niveaux à choisir.
	Réglage de la largeur	Il y a trois niveaux à choisir : étroit, moyen et large.
	Massage ponctuel/partiel	Appuyez une fois sur le bouton pour que les rouleaux restent au même endroit.
 	Le rouleau de massage monte Le rouleau de massage descend	Appuyez deux fois pour démarrer le massage partiel. La troisième fois pour commencer le massage complet.

## GUIDE D'OPÉRATION

### Fonctions des boutons

#### Introductions des boutons pour le cours de réglage manuel

Bouton	Description	Fonction principale
	Réglage de l'intensité de la pression d'air	L'intensité de la pression d'air est réglable. Il ne peut être ajusté qu'en massage à pression d'air. Il y a 5 niveaux de force qui peuvent être ajustés.
	Massage à l'air	Appuyez une fois pour démarrer le massage à l'air pour le haut du corps. Appuyez deux fois pour démarrer le massage à l'air pour le bas du corps. Appuyez trois fois pour démarrer le massage à l'air pour tout le corps. Appuyez quatre fois pour fermer.
	Massage par roulement	Touche de commande de roulement au pied. Appuyez sur le bouton pour démarrer le massage par roulement des pieds, appuyez à nouveau pour arrêter.
	Fonction chauffage	Fonction chauffante à la taille. Appuyez sur le bouton pour démarrer le massage chauffant de la taille, appuyez à nouveau pour arrêter.

#### Fonction Musique

Connectez votre appareil mobile : Activez le Bluetooth du téléphone mobile ou de la tablette, puis sélectionnez l'appareil Bluetooth étiqueté (code JL10025, mot de passe « 9999 »), après qu'il se synchronise avec les haut-parleurs du fauteuil de massage, vous pouvez maintenant écouter vos morceaux préférés ou livres audio à partir de votre fauteuil de massage. Améliorez votre expérience de massage !



Avertissement : Une supervision et des conseils sont nécessaires pour les personnes handicapées et souffrant de maladie mentale. Veuillez informer votre médecin avant d'utiliser la chaise si vous avez des conditions médicales. Les enfants de moins de 18 ans ne doivent pas utiliser la chaise, consultez un médecin pour approbation en cas de tentative. N'utilisez pas le fauteuil s'il y a des enfants ou des animaux domestiques à proximité. Des blessures graves peuvent survenir si ces instructions ne sont pas suivies.

## INSTRUCTIONS DE SÉCURITÉ

1. En cas d'anomalie, éteignez et débranchez la fiche d'alimentation de la prise.
2. Lorsque le cordon d'alimentation est endommagé, il doit être remplacé par un cordon d'alimentation spécial ou disponible auprès d'un autre fabricant ou service après-vente.



Avertissement : Ne pas démonter, modifier ou changer les composants par une personne non qualifiée pour éviter un choc électrique ou un incendie.

## SOIN ET ENTRETIEN QUOTIDIENS

#### Guide de stockage

- Ne démontez aucune pièce du fauteuil et n'apportez aucune modification. Des blessures graves peuvent se produire.
- N'essayez pas de réparer la machine par une personne non qualifiée pour éviter un choc électrique ou un incendie.
- Assurez-vous d'éteindre et de débrancher la fiche d'alimentation lors du nettoyage pour éviter tout risque d'électrocution ou de danger.
- Gardez le fauteuil de massage propre et exempt de poussière. Ne placez pas le fauteuil de massage dans un endroit humide.
- S'il n'est pas utilisé pendant une longue période, veuillez le couvrir avec un chiffon pour le protéger de la poussière.
- Ne placez pas le fauteuil de massage sous la lumière du soleil ou sous une source de chaleur comme un radiateur ou directement près d'une fenêtre exposée à la lumière directe du soleil.

#### Entretien

- N'utilisez qu'un détergent neutre sans acide ni alcool.
- Utilisez un détergent neutre pour nettoyer le coussin de dossier, le coussin de tête et le coussin de jambe. Laissez-le sécher.
- Avec un chiffon humide pour essuyer les pièces en plastique, les tuyaux et le cuir synthétique de la chaise.

- Assurez-vous de ne pas utiliser d'essence, d'huile de banane ou de nettoyants à base de benzène pour éviter la décoloration du cuir.
- Ne vaporisez pas de pesticides ou d'aérosols à proximité ou sur le fauteuil pour éviter un choc électrique ou un incendie.
- Veuillez nettoyer avec un chiffon sec pour éviter les pannes mécaniques.

#### Entretien du contrôleur

- Ne placez pas le fauteuil de massage près d'un radiateur ou d'un feu.
- Tenez à l'écart de l'humidité pour éviter les chocs électriques et les dommages au fauteuil.
- Veuillez nettoyer la poussière avec un chiffon doux ou une petite brosse à rampe.
- Assurez-vous de ne pas utiliser de détergents contenant du benzène, de l'essence, de l'huile de banane.

## DÉPANNAGE

La vérification est nécessaire en cas d'utilisation fréquente.

Assurez-vous que la machine fonctionne normalement avant utilisation, après une longue période d'inutilisation.

Situation d'anomalie	Guide des solutions
Défaut de démarrage et voyant éteint	<ul style="list-style-type: none"> <li>• Vérifiez que la prise est bien branchée.</li> <li>• Vérifiez que l'interrupteur du fauteuil est allumé en position «   ».</li> </ul>
Son en utilisation	<p>Les sons suivants sont normaux:</p> <ul style="list-style-type: none"> <li>• Le mécanisme produira un son pour pétrir ou frapper.</li> <li>• Le son change après le réglage de la vitesse.</li> <li>• Son lorsque les rouleaux montent ou descendent.</li> <li>• Lorsque la chaise effectue un massage par tapotement, elle la fait vibrer en émettant un son.</li> <li>• Lorsque l'air se gonfle et se dégonfle, il émet un bruit de bruissement.</li> <li>• Son pour le gonflage et la ventilation de l'airbag. Les airbags peuvent craquer.</li> <li>• Son pour le réglage des jambes.</li> <li>• Son du moteur lorsque le fauteuil de massage est chargé.</li> </ul>

## SPÉCIFICATION

Nom du produit	Chaise de massage
Modèle	JL10025
Source de courant	110V~60HZ
Puissance nominale	150W
Temps de travail nominal	15 minutes



## **Costway Massage Chair Customer Warranty**

Costway products include the following warranty:

This Costway massage chair has a three-year warranty for both parts and labor.

Costway customer service will not issue Return Material Authorizations (RMAs) for products due to buyer's remorse. RMAs will be issued only when product has quality problem. Costway products will be either repaired by the customer or by an in-home technician.

### **Service And Technical Support:**

Customers can contact Costway's customer service department at 213-401-2666 at any time Monday through Friday or via email at [topsupport@costway.com](mailto:topsupport@costway.com) for warranty or service issues.

Customers are required to provide dated proof of purchase (sales receipt) when they contact Costway service department regarding a repair.



A Costway customer service representative will attend to most customer inquiries, however, in some cases, when necessary, a technical service specialist will provide advanced support.

Non-warranty repair is provided on a "per incident" basis. Costway customer service will verify that the unit has failed and provide instructions for repairing a unit. All applicable repairs, parts, shipping, handling, local tax, and a "per incident" fee will be charged for non-warranty repairs.

You can visit [www.costway.com](http://www.costway.com) and [www.costway.ca](http://www.costway.ca) for the latest terms and pricing depending on the type of issue or incident.

Proof of purchase (sales receipt) is required for all warranty repairs or service.

## **Extended Warranties:**

Costway offers extended warranty programs to enhance ownership of Costway products.

Extended warranty provides: A maximum 2-year limited repair or



replacement massage chair warranty with on-site service in certain areas.

Please visit [www.costway.com](http://www.costway.com) and [www.costway.ca](http://www.costway.ca) for the latest terms for extended warranties.

## **Product Repairs**

Many Costway product repairs may be performed by the customer in their own home with parts and instructions supplied by Costway, such as remote controller replacements that don't require a technician.

Customers may contact Costway's customer service department at [topsupport@costway.com](mailto:topsupport@costway.com) for warranty or service issues.

Floor Models and Demonstration Units have a prorated warranty period that begins the day the model is placed on the floor and connected to an electrical outlet by the retail partner. Proof of purchase (sales receipt) is required in order to obtain warranty service and parts. Non-warranty parts and service are available at a "per incident" rate.

Warranty Coverage Period: Warranty coverage begins on the date of customer purchase. Proof of purchase (sales receipt) is required for all





warranty repairs. The warranty period is measured by continuous calendar days based on a seven-day week.

**Field Service:** The Costway customer service department will diagnose the problem and schedule an authorized service provider to repair a chair in the customer's residence. If the area is not covered by Costway official or authorized service provider, after the Costway service team diagnose the problem and provide approval, customers may find their own qualified technician. Customers will be reimbursement once an invoice and proof of the technician's qualifications are submitted to the Costway customer service department. The value of reimbursement should not exceed the cost of a Costway official or authorized service provider.

**Parts:** All parts deemed necessary for repairs will be shipped to the customer at no charge.

## **CUSTOMER WARRANTY LIMITATIONS AND EXCLUSIONS**

Warranties are not valid in certain areas. Invalid areas in Canada: NT, NU, YT.



Postcodes start with AOK, AOP, AOR, A2V, GOG, G4T, JOM, ROB, TOP, TOV, VOT, VOL, VOV, VOW, X0A, X0B, X0C, X0G, X0E, X1A, Y0A, Y0B, Y1A.

Invalid areas in US: Alaska, Hawaii, Puerto Rico, and Guam.

The warranty only applies to Costway products and does not include any accessories or enhancements.

Field service requires pre-approval and must be performed by qualified technicians. Costway official and authorized field service is only available in certain areas. Please visit [www.costway.com](http://www.costway.com) and [www.costway.ca](http://www.costway.ca) for the latest information regarding authorized field service.

Softening of foams and filling composites in pillows, pads, and memory foam occurs naturally and does not constitute a defect under this warranty.

Fading, wear, and piling of fabrics occurs naturally and does not constitute a defect under this warranty.

Natural markings, grain, and dye variations in leather do not constitute a defect under this warranty.



Warranties do not cover any loss or damage resulting from improper installation, unauthorized repairs or modifications, improper use of electrical/power supply, loss of power, dropped products, a malfunction of or damage to an operating part from failure to provide manufacturer's recommended maintenance, transportation damage, theft, abuse, misuse, neglect, vandalism, or environmental conditions (fire, floods, rust, corrosion, sand, dirt, windstorms, hail, earthquakes, or exposure to other weather conditions), loss of use during the period the product is at a repair facility, or otherwise awaiting parts or repair.

Damage due to shipping and handling does not constitute a defect under this warranty.

Under no circumstance shall Costway or its representatives be liable for indirect, consequential, or incidental damages (including damages for lost profits, business interruption, bodily injury, medical harm, and the like), even if any party has been advised of the possibility of such damages.

Warranties are non-transferable and shall be in lieu of any other warranty, express or implied, including but not limited to any implied



warranty or merchant ability or fitness for particular use.

Costway's sole liability and the purchaser's exclusive right shall be for the repair, or at Costway's option, for the replacement of defective part.

Notwithstanding the above, if replacements parts for defective materials are not available, Costway reserves the right to make substitutions in lieu of repair or replacement.

All warranties begin on the date of purchase; no allowance or extension is offered for delivery and/or installation.

Warranties do not apply to rental, business, commercial, institutional, or other non-residential users.

## **Extended Warranty**

LIMITED REPAIR OR REPLACEMENT MASSAGE CHAIR WARRANTY WITH  
ON-SITE SERVICE

If you have a warranty or product question, please contact Costway's support team at 213-401-2666 at any time Monday through Friday, or via email at [topsupport@costway.com](mailto:topsupport@costway.com).



In the event you detect and report a defect in the workmanship or material of the Equipment, during the Service Period, then the Administrator shall provide the services hereinafter described.

Your purchase of the Extended Warranty shall constitute your acceptance to the terms of this Limited Warranty including the indemnification provisions.

1) DEFINITIONS - For the purpose of this Limited Warranty, the following terms shall have the following meanings:

- (1) "Equipment" shall mean a Costway product or system;
- (2) "Customer" shall mean only the residential end-user of the Equipment who is the original purchaser of the equipment from the Distributor, from an authorized reseller.
- (3) Usages of "you" or "your" refer to the Customer;
- (4) "Commencement Date" shall mean the date on which the Equipment is first purchased by a Customer from the Distributor or from an authorized reseller;
- (5) "Service Period" shall mean the period commencing on the Commencement Date;



(6) "Administrator" shall mean Costway. Usage of "we," "us," or "our" shall mean the Administrator. You may contact the Administrator if you have questions regarding this coverage. We can be reached by phone at 213-401-2666.

2) COVERAGE - During the Service Period, we will repair or replace, at our sole discretion, any defective Equipment. We will return the Equipment to a properly functioning state. To obtain such service, you must be able to provide us with the original, dated proof of purchase (sales receipt) for the Equipment. This Limited Warranty extends only to Customers. Only our representatives may perform repairs on the Equipment under this Limited Warranty. Replaced parts shall be covered under this Limited Warranty for the remainder of the Service Period or for thirty (30) days, whichever is longer. We will provide on-site service as necessary on regular workdays. Submission of the Extended Warranty Card form is not a condition precedent to obtaining service under this Limited Warranty. If a particular replacement part is not available from the manufacturer, we will make reasonable efforts to locate a compatible replacement part. If we are unable to locate a compatible part, we may replace your Equipment with a similar product. Under no circumstances



shall the retail replacement value exceed the original net price paid for the Equipment. In the event you choose not to accept a replacement for your Equipment, we shall no longer be responsible for making repairs under this Limited Warranty.

3) EXCLUSIONS - This Limited Warranty does not include service needed on Equipment as a result of any of the following:

- (1) Installation, set-up, moving, or relocation from the originally installed location;
- (2) Cosmetic changes, tears, or failure of fabrics, woods, foam, pads, plastics, upholsteries, exterior coverings, and damages and changes resulting from normal wear and tear;
- (3) Negligence, misuse, abuse, improper maintenance, electrical disturbances and power surges, acts of nature, or work, attachments, additions, alterations, or modifications by persons other than authorized Administrator service providers;
- (4) Failure by the Customer to use a high-quality surge protector during the entire Service Period; (5) Improper operating environments;



- (6) Any problem not involving a defect;
- (7) Damage or malfunction whatsoever caused by an animal or pet;
- (8) Damage or malfunction whatsoever caused by liquids of any kind;
- (9) Rental, business, commercial, institutional, or other non-residential use;
- (10) Unnecessary service requirement. If no problem is found upon diagnosis by us or any other third party, you may be charged our standard rate for shipping costs and parts;
- (11) Dropped products or components (including remote controls);
- (12) Use of any item with the Equipment that is not designated for use with the Equipment; and
- (13) Field service requires pre-approval and must be performed by Costway's authorized field service personnel. Field service is only available in certain areas. Please visit [www.costway.com](http://www.costway.com) and [www.costway.ca](http://www.costway.ca) for the latest information regarding field service.

4) YOUR RESPONSIBILITIES - You shall:

- (1) Operate the Equipment in an environment meeting the





requirements delineated in the Equipment's owner manual and other provided instructions;

(2) Protect the supply of electricity to the Equipment through the use a high-quality surge protection device;

(3) Permit no work on the Equipment except by our authorized service providers;

(4) Have an adult representative present whenever we provide support services;

(5) Perform telephone or email diagnostic procedures as requested by us;

(6) Safeguard and return (at our expense) all replacement parts shipped to you. Either the part to be replaced or the replacement part or item shipped to you must be returned to the Distributor upon request.

5) EXCULPATION AND INDEMNIFICATION - Our maximum liability under this Limited Warranty is limited to the cost of repairing or replacing defective Equipment. We shall not be liable to you for incidental and



consequential damages. Under no circumstances shall you or anyone else ever be deemed to be a third-party beneficiary of the agreement. We shall not be liable for, and you hereby indemnify and hold us and every authorized service provider innocent from, any and all loss, damage, claim, or cause of action, direct or indirect, incidental or consequential, occurring to you, or to the employees or agents of you, or to any other third party, or to the property of any of the foregoing, which may arise as a result of any defect covered by this Limited Warranty or as a result of any service performed under this Limited Warranty.

Exclusions:

- Any malfunction that is caused by circumstance beyond Costway's control.
- Damage or malfunction resulting from misuse or abuse including, but not limited to, damage from liquids of any kind, transit, shipping, relocation damage, incorrect voltage, operation contrary to what is detailed in the Owner's Manual, modification or repair by the user, use by anyone (whether the product is open or stowed) over weight capacity, or any use by more than one person at a time, outdoor usage, and any flood, fire, or other Acts of God.
- Normal wear and tear and all cosmetic damage to fabric or other exterior parts of the chair.



- Under no circumstances whatsoever shall Costway be liable for special, incidental, or consequential damages.
- Rental, business, commercial, institutional, or other non-residential use