



**HALO<sup>®</sup>**  
**POWERSMART 10<sup>™</sup>**

---

**10,000 MAH PORTABLE POWER**

**OPERATING INSTRUCTIONS**

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

## **HALO POWERSMART 10**

Thank you for choosing HALO. Innovative and easy to use, the HALO POWERSMART 10 provides a powerful and universal charging source. The HALO POWERSMART 10 is equipped with dual USB ports to charge multiple devices simultaneously. Its compact size makes it easy to carry on the go making the HALO POWERSMART 10 the perfect power accessory.


Please read the operating instructions carefully before using the HALO POWERSMART 10.

## **TABLE OF CONTENTS**

Included Items	1
Operating Instructions	2-3
Safety Precautions	3-4
Specifications	4
Warranty and Contact Information	5

## INCLUDED ITEMS

- HALO POWERSMART 10
- Operating Instructions

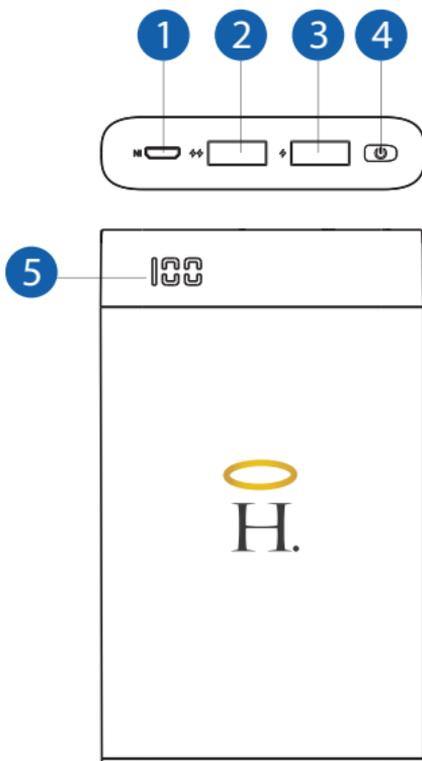

## LOCATION OF CONTROLS

- 1 | Micro USB Input Port
- 2 | USB Output Port 1
- 3 | USB Output Port 2
- 4 | Power ON/OFF Button
- 5 | LED Digital Battery Indicator

## **OPERATING INSTRUCTIONS**

Prior to first use, it is recommended to fully charge the HALO POWERSMART 10.

### **TURNING YOUR HALO POWERSMART 10 ON/OFF**

To turn ON, press the power button, and the LED Digital Battery Indicator will display how much battery percentage remains. Press and hold the power button for three seconds to turn off. Your HALO POWERSMART 10 is also equipped with an auto ON/OFF feature. Your charger will automatically turn ON and begin charging when an electronic device is plugged in and will automatically shut OFF after 30 seconds if not in use.

### **CHARGING THE HALO POWERSMART 10**

The HALO POWERSMART 10 operates on a rechargeable, Li-ion battery. First, use the Standard USB to Micro USB Cable (included) and connect the Micro USB tip into the Micro USB port on the HALO POWERSMART 10. Next, connect the Standard USB end into your computer's USB port or a USB adapter (not included).

While charging, the LED Digital Battery Indicator will turn on and display the battery percentage. When battery is fully charged, disconnect the Standard USB to Micro USB Cable.

### **CHARGING ELECTRONIC DEVICES**

The HALO POWERSMART 10 comes equipped with a Micro USB Cable.

To charge Micro USB compatible devices, plug the Micro USB tip of the provided cable into your electronic device. Next, plug the USB end of the Micro USB cable into the HALO POWERSMART 10 output port to begin charging.

If your electronic device does not have a Micro USB Input, use the charging cable provided with your electronic device. To use, plug

the Standard USB end of the cable into the USB Output located on your HALO POWERSMART 10.

## **MAINTENANCE AND CARE**

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the battery is very low, it will rapidly flash to alert you to recharge the internal battery as soon as possible.

To maximize battery life: once the battery is fully discharged, immediately recharge (regardless of whether you plan to use this unit or not). If you do not plan to use the battery for an extended period of time (one week or longer), we recommend that you fully charge the battery. For longer periods of storage, please recharge the battery at least every two months to maintain the battery in optimum condition.

## **SAFETY PRECAUTIONS**

This HALO POWERSMART 10 has been designed and manufactured to ensure your personal safety when used in the directed manner. Improper use can result in potential hazard.

Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference.

- The HALO POWERSMART 10 should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- To clean, use a damp cloth to gently wipe the surface of only the patch area of the HALO POWERSMART 10.
- To reduce the risk of fire or electric shock, do not expose the HALO POWERSMART 10 to rain or moisture. Keep the HALO POWERSMART 10 away from dripping, splashing, or any objects filled with liquids. Do not place anything on HALO POWERSMART 10.
- Keep away from heat sources, including but not limited to: open

flame sources, radiators, stoves, ovens, cars, and amplifiers that produce heat.

- Do not puncture, crush or subject to mechanical shock.
- Do not disassemble.
- Unplug the charger when batteries are fully charged or not in use.
- Li-ion batteries must be recycled. Do not dispose of in the trash

## SPECIFICATIONS

Model:	HALO-PS10
USB Output:	5V $\equiv$ 2.1A
Input:	5V $\equiv$ 2.0A
Battery Cell:	Lithium-Ion
Dimensions:	5 x 2.8 x .6 inches
Weight:	210 g

## COMPLIANCE WITH FCC REGULATIONS

“This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause

harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

“Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

“NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

## **LIMITED WARRANTY**

HALO International SEZC LTD warrants its products to be free from defects in material and workmanship under normal use.

Conditions are as follows:

- During the first 90 days from date of purchase, HALO International SEZC LTD will repair or replace the defective product.
- HALO International SEZC LTD will, subject to inspection, repair the defective product or replace it with a new or reconditioned unit.
- Where applicable, all requests for warranty returns must be accompanied by a proof of purchase.
- The warranty does not extend to the electronic equipment that is used or which incorporates with any of our products and accessories.
- HALO International SEZC LTD shall not be held responsible for the improper use of its products.
- In no event shall HALO be liable for any incidental, special, consequential or punitive damages arising out of the use of HALO's products.
- For all questions or exchange requests, please call 888-907-6274, or email us at [support@BestHALO.com](mailto:support@BestHALO.com)

This Limited Warranty sets forth the full scope of HALO's obligations and liabilities with respect to the product. All implied warranties, including, without limitation, implied warranties of merchantability and fitness for a particular purpose, are limited to

the duration of this Limited Warranty. In no event shall HALO be liable for any incidental, special, consequential or punitive damages or any damages or losses of or to electronic equipment or products that are used with any of HALO's products.



FOR TECHNICAL SUPPORT PLEASE  
EMAIL US AT:

**SUPPORT@BESTHALO.COM**

OR

CALL US AT: **888-907-6274**

**HALO INTERNATIONAL SEZC LTD  
90 NORTH CHURCH STREET,  
GEORGE TOWN, GRAND CAYMAN**

**WWW.BESTHALO.COM**