


HALO[®]
POWERBUDS™

The perfect accessory for anyone who wants to be truly wireless

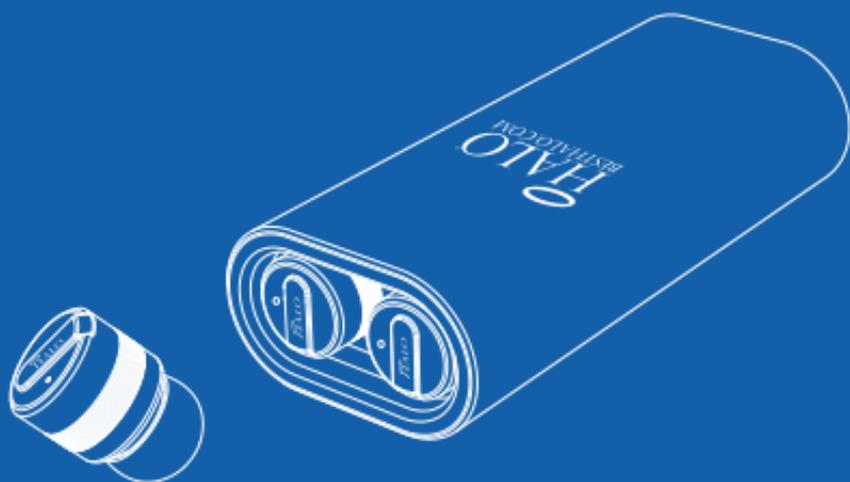

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

HALO POWERBUDS

Thank you for choosing HALO. The HALO POWERBUDS are the perfect accessory for anyone who wants to be truly wireless! The HALO POWERBUDS feature ultra small, hassle-free, Bluetooth wireless earbuds and a convenient, compact 2100mAh portable charger. The innovative HALO POWERBUDS design allows you to quickly and easily recharge the Earbuds with a unique magnet design and built-in Power Bank function within the Earbud Case. The HALO POWERBUDS portable power source allows you to charge any small electronic device, including mobile phone, camera, iPod, and gaming system. Its Micro USB charging input allows for a quick seamless charge so that you can take it with you and use it over and over again!


Please read the operating instructions carefully before using the HALO POWERBUDS.

TABLE OF CONTENTS

Included Items	1
Operating Instructions	2
Maintenance and Care	6
Safety Precautions	7
Specifications	8
Warranty and Contact Information	10

INCLUDED ITEMS

- HALO POWERBUDS
- Standard USB to Micro USB Cable
- Additional Ear tip sizes
- Operating Instructions

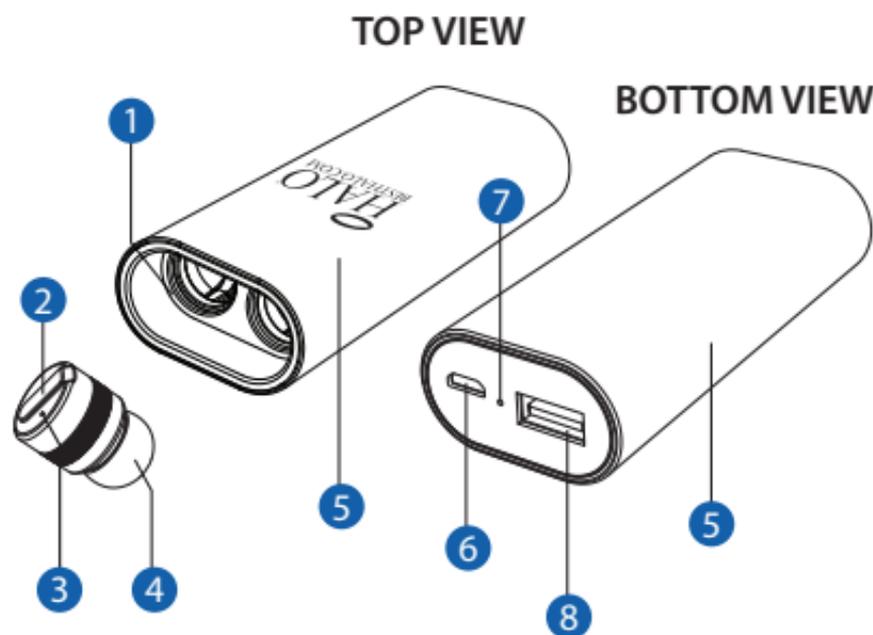


LOCATION OF CONTROLS

- 1 | Earbud Charging Socket
- 2 | Earbud Multifunction Button
- 3 | Earbud LED Indicator/Microphone
- 4 | Ear Tips
- 5 | Power Bank/Earbud Case
- 6 | Micro USB Charging Input
- 7 | Power Bank LED Battery Indicator
- 8 | USB Output Port

OPERATING INSTRUCTIONS


Prior to first use, it is recommended to fully charge the HALO POWERBUDS (Earbuds and Power Bank).

In order to get the best audio performance, try every ear tip (small, medium, large). The correct ear tip will help achieve optimal fit and stability.

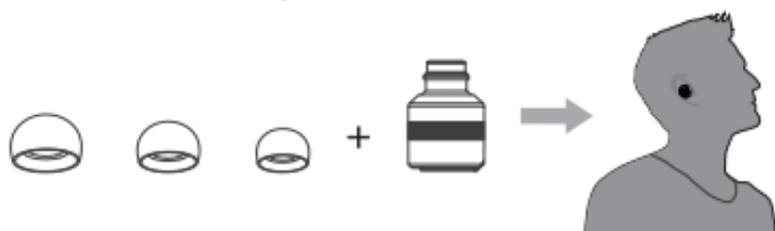

CHARGING THE HALO POWERBUDS

The HALO POWERBUDS operate on a rechargeable, Li-ion battery. First, use the Standard USB to Micro USB Cable (included) and connect the Micro USB tip into the Micro USB Charging Input on the Power Bank / Earbud Case. Next, connect the Standard USB end into your computer's USB port or a USB adapter (not included).

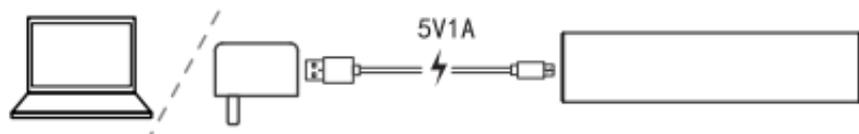


While charging, the Power Bank LED Battery Indicator will flash BLUE. When battery is fully charged, the LED Battery Indicator will turn solid BLUE.

Note: The Micro USB Charging Port located on this unit is only used for charging the internal battery of the Power Bank/Earbud Case.


CHARGING THE HALO POWERBUDS EAR BUDS

The HALO POWERBUDS ear buds are charged via magnetic contact recharging. Push up on the internal sleeve of the Power Bank Case so that the Earbud Charging Sockets are flush with the top surface. See diagram below. Then, simply place the earbuds facing down onto the charging sockets of the Power Bank/Earbud Case. The Earbud LED Indicator will be solid red when charging and will turn off automatically when the earbuds are fully charged.

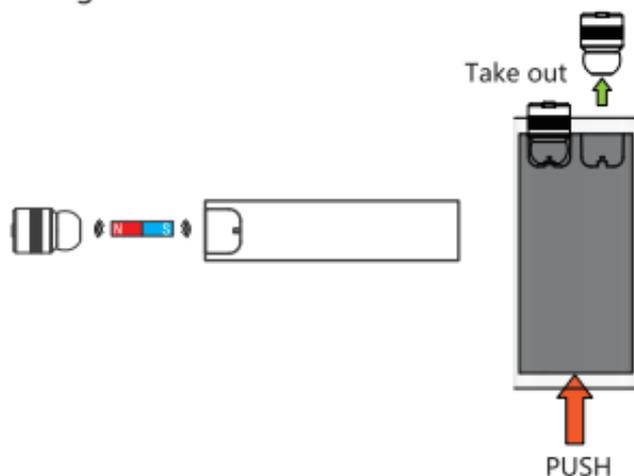

HALO POWERBUDS POWER LEVEL INDICATORS

The BLUE LED light will flash different times according to how much battery remains.

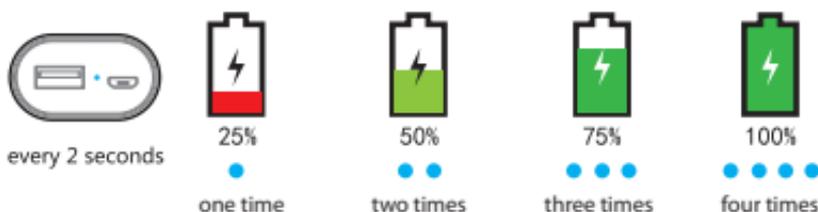


Note: To tell the Power Bank charge level without charging it:
A. Remove and reinsert one Earbud, the LED Battery Indicator will flash.

B. There is a motion sensor built inside the Power Bank. Tap the Power Bank with your hand or push up the internal sleeve of the Power Bank Case. The LED Battery Indicator will flash.


TURNING HALO POWERBUDS ON/OFF FOR FIRST TIME PAIRING

To turn ON, first remove the Earbuds from the Power Bank/Earbud Case, then long press the Multifunction button for 4 seconds until the indicator light flashes BLUE. To turn OFF, long press the Multifunction button for 4 seconds until the indicator light flashes RED, or simply dock ear buds in Earbud Charging Socket.

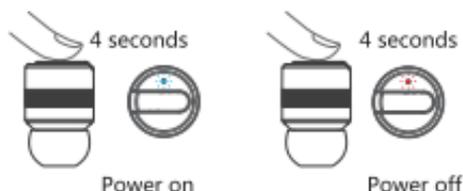

PAIRING VIA BLUETOOTH

With the Earbuds off, simultaneously long press the multifunction button on each of the Earbuds for 6 seconds until the indicator light on each of the Earbuds begins to flash red and blue. Turn on your device's Bluetooth and search for "HALO powerbuds". Click to connect. If prompted to enter a passkey, enter "0000".

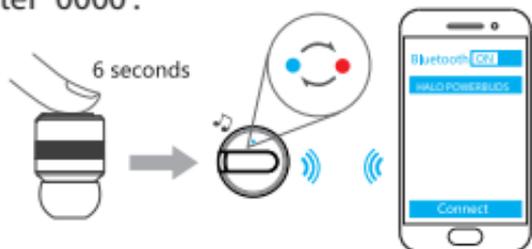

- **WAIT 10-15 seconds** while HALO POWERBUDS synchronize and only one HALO POWERBUDS is showing on Bluetooth connection screen.
- Once the HALO POWERBUDS are successfully paired and connected with your mobile phone, you can use it to make calls and listen to music.
- To answer/end calls, click the multifunction button once to answer the incoming call. Click the multifunction button once to end a call.
- To reject a call, hold the multifunction button for 2 seconds to reject the incoming call.
- To redial, double click the multifunction button to redial the last number on your phone.
- To play or pause your music, click the multifunction button.

WHICH IS LEFT/RIGHT CHANNEL

After the Earbuds are successfully connected, the RIGHT channel will flash the blue LED twice continuously, the LEFT channel will flash the blue LED once continuously.

TROUBLESHOOTING

Problem	Reason	Solution
Start up failure	Low Battery	Recharge the HALO POWERBUDS
No sound after pairing	Pairing failed	Try pairing again
Red light flashes during call	Low Battery warning	Recharge the HALO POWERBUDS
No lights while charging	Ear buds were not placed into carrying case properly	Make sure Ear Buds are placed in slots correctly
Shuts down automatically	Low Battery	Recharge the HALO POWERBUDS
Sound Echoes	Volume is too high or environment is too noisy	Adjust volume or change environment
Noise during phone calls	Strong interference or the smartphone is too far away from the Ear Buds	Move away from the interference source or put the smartphone closer to the Ear Buds
Low volume during call	Ear Buds are worn incorrectly	Adjust headphone position
Signal is weak, Interruption during a call or music	Strong interference or the smartphone is too far away from the Ear Buds	Move away from the interference source or put the smartphone closer to the Ear Buds
Connects to Music Only	Default Bluetooth option only enables for use with "Media audio"	In order to enable it for "Call audio", go into phone's Bluetooth setting and enable this after pairing

MAINTENANCE AND CARE

After prolonged use, the internal battery will become weak and the operation may become intermittent.

To maximize battery life: once the battery is fully discharged, immediately recharge (regardless of whether you plan to use this unit or not). If you do not plan to use the battery for an extended period of time (one week or longer), we recommend that you fully charge the battery. For longer periods of storage, please recharge the battery at least every two months to maintain the battery in optimum condition.

SAFETY PRECAUTIONS

This HALO POWERBUDS has been designed and manufactured to ensure your personal safety when used in the directed manner. Improper use can result in potential hazard.

Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference.

- It is recommended not to listen to music at high volumes as it can cause damage to hearing
- The HALO POWERBUDS should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming, or pools.
- To clean, use damp cloth to gently wipe the surface of the HALO POWERBUDS.
- To reduce the risk of fire or electric shock, do not expose the HALO POWERBUDS to rain or moisture. Keep the HALO POWERBUDS away from dripping, splashing, or any objects filled with liquids. Do not place anything on HALO POWERBUDS .
- Keep away from heat sources, including but not limited to: open flame sources, radiators, stoves, ovens, cars, and amplifiers that produce heat.
- Do not puncture, crush or subject to mechanical shock.
- Do not disassemble .
- Unplug the charger when batteries are fully charged or not in use.
- Li-ion batteries must be recycled. Do not dispose of in the trash.

SPECIFICATIONS

Battery Capacity:	2100mAh
Micro USB Input Charging:	5V \equiv 1.0A
USB Output:	5V \equiv 1.0A
Dimensions (W x H x D):	23.5 mm x 41 mm x 91 mm
Weight:	94.2 g
Working Temperature:	0°C to 45°C
Working Humidity:	Max 85%
Total Use Time:	3 hours

COMPLIANCE WITH FCC REGULATIONS

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause

harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

"NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY

HALO INTERNATIONAL SEZC LTD warrants its products to be free from defects in material and workmanship under normal use.

Conditions are as follows:

- During the first 90 days from date of purchase, HALO INTERNATIONAL SEZC LTD will repair or replace the defective product.
- HALO INTERNATIONAL SEZC LTD will, subject to inspection, repair the defective product or replace it with a new or reconditioned unit. The return must be accompanied by a Return Merchandise Authorization (RMA) number to be issued upon request, and must be shipped prepaid. We do not offer shipping rebates at this time.
- Warranty is void if the product has been improperly handled or misused in any way, or if the label and/or bar-coded warranty label has been removed or tampered with.
- Where applicable, all requests for warranty returns must be

accompanied by a proof of purchase.

- The warranty does not extend to the electronic equipment that is used or which incorporates with any of our products and accessories. HALO INTERNATIONAL SEZC LTD shall not be held responsible for the improper use of its products.

- For all questions or exchange requests, please call 888-907-6274, or email us at support@BestHALO.com

This Limited Warranty sets forth the full scope of HALO's obligations and liabilities with respect to the product. All implied warranties, including, without limitation, implied warranties of merchantability and fitness for a particular purpose, are limited to the duration of this Limited Warranty. In no event shall HALO be liable for any incidental, special, consequential or punitive damages or any damages or losses of or to electronic equipment or products that are used with any of HALO's products.



FOR TECHNICAL SUPPORT PLEASE
EMAIL US AT:

SUPPORT@BESTHALO.COM

OR

CALL US AT: **888-907-6274**

HALO INTERNATIONAL SEZC LTD
68 WEST BAY ROAD
GEORGETOWN, GRAND CAYMAN, KY1-1003

WWW.BESTHALO.COM