


LIGHT / LOCK WIRING DIAGRAM.

NOTE. The lock feature is for use on swing gate installations only

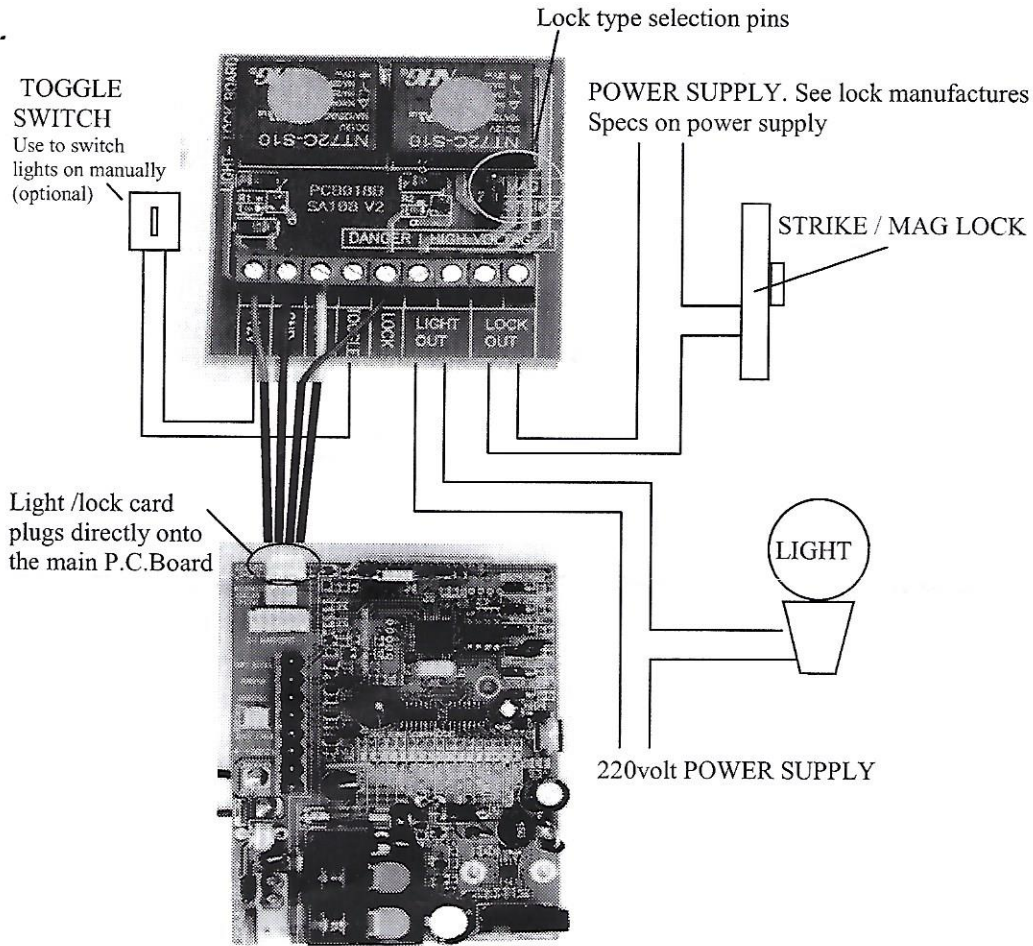

NOTE. Ensure that all power is switched off before any connections are done. The light lock card is plugged on to the main P.C.CBoard. It is designed to operate pillar lights and /or an electric lock whenever the P.C.Board receives a trigger. The lights will remain on for a period of four minutes. There is an option which allows a switch to be connected to the light / lock card to switch on the lights for as long as is required.

The lock section is applicable on swing gates only. The lock type can be selected by placing the jumper over the relative pins marked MAG / STRIKE. Please note that Magnetic locks require a dedicated power supply, using the motor battery may lead to battery problems.