

## PICTAR APP GLOSSARY - MAIN FEATURES

Step 1. Choose your "Status" (type of activity). Click on the icon to continue.						
Status icons are available when turning on the app / at the setting area under the "Smiley" icon 			PRO	FAMILY	TRAVEL	SOCIAL
Step 2. Choose between 20 pre-set modes.						
Follow the chart to learn which mode is available in each of the 4 status.			PRO	FAMILY	TRAVEL	SOCIAL
Auto		The app does it all. Simply point, focus and shoot and let the app create the perfect image for you.	V	V	V	V
ISO Priority		Choose your desired ISO value (20-2000) to determine how receptive of light you want the camera's sensor to be. The app will compensate the shutter speed for optimal exposure.	V			
Shutter Priority		Choose your desired shutter speed (1/2 -1/8000 sec.) for freezing or blurring the object. The app will compensate the ISO value for optimal exposure.	V			
Manual		Manual adjustment of ISO, Shutter Speed and the Manual Focus option, for maximum control.	V			
Sport		Choose Sport Mode to capture fast moving objects. The app will automatically set a faster shutter speed.	V			
Macro		The manual focus option is unlocked, allowing focus point selection while shooting macro.	V			
Video (Pro status)		Video camera is activated. Useful features like Grid, Horizon, Stabilization, Focus lock, Frame rate (24-240 fps) and more are unlocked. <u>Note:</u> Some of the advanced video features are available only in the "Pro" mode.	V			
Video (Travel / Family / Social)		Auto Video modes - Just point and shoot.		V	V	V
Selfie		The app switches between front and rear cameras.	V			
Filters		Go crazy with 38 different filters. Control filter intensity - before taking the shot - by using the slider.	V			
Baby		Makes any baby picture softer and brighter. Control filter intensity using the slider.		V		
Party		Add eye-popping colors and enhance contrast for party pictures that makes you go 'wow'. Control filter intensity using the slider.		V		
B&W		The Black & White outline effect turns pictures into detailed pencil-like drawings.		V	V	V
Retro		Add monochromatic warmer tone to your image. Control filter intensity by using the slider.		V	V	V
Loop		Capture a short video clip and watch it repeat itself again... and again... and again...		V	V	V
Boomerang		Capture a short video clip and watch it go back and forth.		V	V	V
Beach		Enhances red tones for dramatic beach shots.			V	
Snow		Overexposes the image for a more natural, white snow tone. Control filter intensity using the slider.			V	
Tan		Capture your desired skin tone when shooting portraits. Control filter intensity using the slider.			V	
Food		Enhances color and adds contrast for richer food shots. Control filter intensity using the slider.			V	V
Landscape		Activates horizon and grid indicators - for better landscape composition.			V	

### Step 3. Enter the "Settings" screen to adjust the camera settings

Settings		Press the Settings icon located on the upper right corner of the screen.
----------	---	--

### Step 4. Camera Settings



Follow the chart to learn which settings are available in each of the 4 activities

			PRO	FAMILY	TRAVEL	SOCIAL
Flash		Choose between 5 flash options.	V	V	V	V
White Balance		Choose between 6 WB options.	V			
Aspect Ratio		Choose between 3x4, 16x9 and 1:1 aspect ratios.	V	V	V	V
Timer		Choose between 0, 3, 5, 10, 15 second self-timer options.	V	V	V	V
Grid		Activates an on-screen 3x3 grid for better composition.	V			
Filters		Choose between 38 exciting filters. Control filter intensity using the slider.	V			
Face detection		Automatically recognizes and locks focus on human faces.	V	V	V	V
Zoom		Choose between slow to fast zoom speed (6 speed levels).	V	V	V	V
Horizon		On-screen indicator will assist you in levelling the picture/video.	V			
Histogram		Shows histogram, for a graphical representation of the tonal values of your image.	V			
Format		Choose between JPEG and TIFF formats.	V			
Live view		Capture photos that come alive when you touch them.	V			
Focus		Choose between Auto and Manual Focus.	V			



