







Product Manual for SHS1500

Specification

Model	: SHS1500
Voltage	: 12V
Power	: 9W
Size	: 154*70*214mm
Product Weight	: 5.2kg
Material	: Anodized Aluminum
Coverage	: 1200 - 1700m ³
Bottle	: 180ml

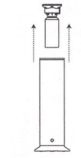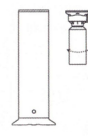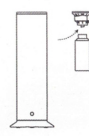

- 
- 
- 
- 
1. Lift upwards to remove the oil bottle.
 2. Rotate counterclockwise to extract the oil bottle and proceed to pour oil into it.
 3. Rotate clockwise once you've finished pouring the oil.
 4. Place the bottle inside the machine, connect it to a power source, set the time and begin operation.

Operating Steps:

1. **Power connection** - To supply power to this device, connect the power via a wire to the 12V power socket labeled [DC POWER IN] on the device.



1. When "ON" is displayed, the device is in an active state.



2. The "OFF" display indicates that the device is powered off.



3. WORK indicates the machine is in the spraying state



 
4. PAUSE indicates the machine is in a paused state

2. **Setting Work Periods** - The device can be programmed for four distinct work periods, allowing users to select specific workdays as per their preferences.

MODE	: To change from one event to another event
SET	: Pressing it to adjust time, workdays and more settings
UP/DOWN	: Adjust time, scent strength and choose workdays
ON/OFF	: To activate or deactivate the device
DONE	: To finalize the settings after configuring them

When you press [ON/OFF] and [DONE], a sound from the device indicates successful reception. If there's no sound, it means the command hasn't been received.

Execution of the [DONE] command should follow after activating the device. If the device remains inactive, a sound will occur but no action will be executed.

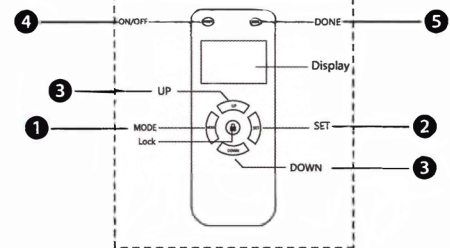

A. Set System Time

1. Align the system time with the local time, using 24-hour format.
2. Upon pressing [SET] initially, the hour digits will start flashing, allowing you to use the [UP/Down] buttons to adjust the hour.
3. Upon pressing [SET] for the second time, the hour setting concludes and the minute digits start flashing. Press [UP/DOWN] buttons to adjust the minutes.
4. Upon pressing [SET] for the third time, the minute setting concludes, prompting the workday indicator to flash. Use [UP/DOWN] to adjust the workdays. Press [SET] for the fourth time to finalize the system time and workday settings.





B. Configure the Operating Timeframes

1. When **[MODE]** is pressed, the LCD screen illuminates and shows "EVENT ON," indicating that Event 1 is activated.
2. When you press **[SET]**, the hour display will start flashing, letting you adjust the initial time for period 1. Press **[UP/DOWN]** buttons to set the hour as needed.
3. Press **[SET]** to save the hour setting, move to the minutes. Use the **[UP/DOWN]** buttons to set the minutes.
4. Press the **[SET]** button to configure the workday; the workday options will start flashing. Use **[UP/DOWN]** buttons to navigate and choose the workday options. Finally, press **[SET]** to save your selection.



Example: setting the start time to 1.30pm on Wednesday

Points to remember:

- * When establishing the work period, it's imperative that the closing time isn't designated to precede the opening time.
- * Should the work period span past the '00:00' point, it's necessary to configure it as two distinct events.

5. Press **[MODE]** and the LCD screen will show "EVENT 1 OFF". Repeat steps 2-3 to establish the end time for period 1.



C. Configure the Scent Strength

6. Upon pressing **[MODE]**, the LCD screen will indicate "SCENT WORK". Use **[UP/DOWN]** buttons to adjust the desired spraying duration, ranging from a minimum of 10 seconds to a maximum of 300 seconds.
7. Activate the "SCENT PAUSE" mode by pressing **[MODE]**. The LCD screen will show the prompt. Use **[UP/DOWN]** buttons to adjust the pause duration in seconds, ranging from a minimum of 10 seconds to a maximum of 300 seconds.



Example: setting the diuser work time to: 10 secs on (WORK), 300 secs off (PAUSE)

During its operation period, the diffuser will switch between active mode (SCENT WORK) and stand-by mode (SCENT PAUSE). To intensify the scent concentration, adjust by either increasing the work time or decreasing the pause time.

Use the **[MODE]** button to finalize the setup for all Events. Repeat the preceding steps (2 through 7) for each additional event, up to a maximum of 4.

D. Upload Settings

Press **[Done]** to transfer and apply the settings to the diffuser.

E. Lock & Unlock

To activate the Lock/Unlock feature, press and hold the Lock Button for 5 seconds on the Remote Control.

F. Reset

Press **[MODE]** button for 15 seconds to Reset. The default setting mode is only 1 event: Work every day, Working period 08:00-22:00, working 60 seconds, pause 60 seconds.

Important Reminder:

- * Ensure timely refills of the essential oil and avoid running the device without oil for extended periods
- * Refrain from tilting the device while replacing the essential oil
- * Do not mix essential oil with water
- * Ensure the essential oil bottle is securely tightened when replacing it
- * Perform device cleaning every 2-3 months during operational periods by running the device with alcohol-filled bottles for 10-15 minutes.