




RELIABLE 8000/9000 SERIES BOILERS MAINTENANCE SCHEDULE

AT END OF DAY:

RELEASING STEAM PRESSURE

To prolong the life of the boiler and its components, we recommend that this task be performed at the end of the day.

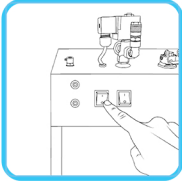

1. Turn off the boiler switch.



2. Press the pedal until the pressure drops to zero.



3. To complete the shutdown of the boiler, turn the steam switch off.


EVERY WEEK:

FLUSHING THE BOILER OUT


To prevent limescale deposits, the boiler should be drained every week.





1. Should be completed in the morning or when the boiler is cold with zero pressure.

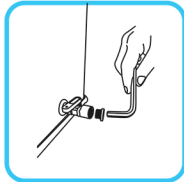


2. Remove the plug (using an 8mm allen key) from the drain valve.

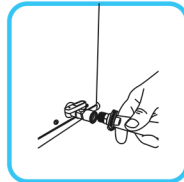


3. Attach the supplied clear drain hose to the drain valve.

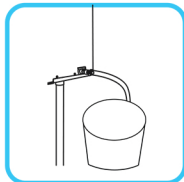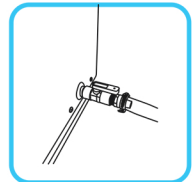


4. Open the drain valve and allow the water to be emptied into a large container.

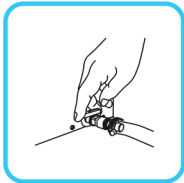

5. When completely emptied, close the drain valve.

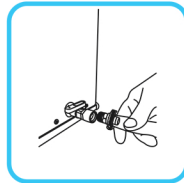

6. Remove the hose and reattach the plug at the end of the drain valve.

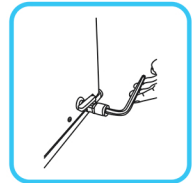

7. The unit is now ready to be filled with water.




RELIABLE BOILER UNIT LOW WATER WARNING & RESET

DAILY USE:

REFILLING YOUR BOILER

Use tap water or 50/50 tap/distilled water in the appliance. Do not use perfumed or products containing alcohol in the appliance.

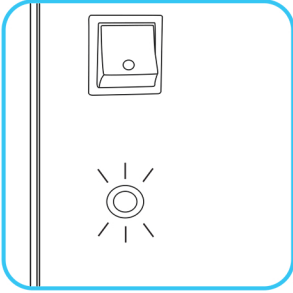

Low Water Indicator

TIP:

Filling your tank before the low water indicator light flashes will prolong the life of your boiler.

Example: If your boiler runs out of water everyday at 2pm, ensure you refill at noon everyday.


CAUTION:

Prolonged periods of time with no water or low water can be harmful to the boiler or element.


Important: The low water indicator is a safety, not a function.

RESETTING YOUR BOILER (IF REQUIRED)


If the water light is on too long, the safety thermostat reset will engage. If it engages, follow these instructions:

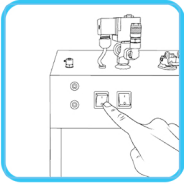


1. Turn off the boiler switch.

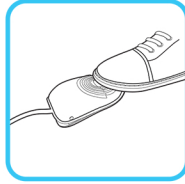

2. To ensure your safety, press the steam pedal until the pressure drops to zero.

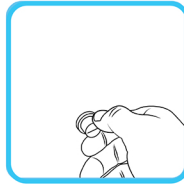


3. Unscrew the reset button cover.

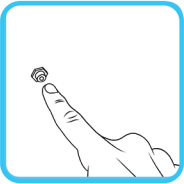

4. Press the reset button.



5. Screw on the reset button cover.

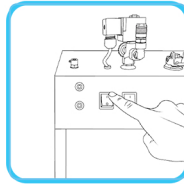

6. Turn on the boiler switch.

Reliable Support & Service
1-800-268-1649
support@reliablecorporation.com