

FOR AGES

14+

Alpha Z PRO



2.4GHZ
EDITION

Please read the instructions carefully before use (Please read carefully for details and warnings) Save this manual for future reference

Important safety information

(1) The product is not a toy, but the mechanical, electronic, aerodynamics, high-frequency transmission and other professional knowledge into one of the fine Dense equipment, the need for proper assembly and commissioning to avoid accidents. The product holder must use a safe way. Operation control: improper operation, may cause serious personal injury or property damage. We are not responsible for this, Because we can not control the assembly, use, operation process.

(2) This product is suitable for people with operating model experience, the age of not less than 14 years of age.

(3) The flight site must be a local legal remote control model flight site.

(4) Once the product is sold, we will not be responsible for any safety and safety arising from operation and use, control, etc.

(5) If any using, operating and measuring problems, please contact with local distributors, for we have assigned those distributors to provide technical support and after sales service.

2. Safety Precautions:

Remote control model aircraft is a high-risk goods, must be away from the crowd when flying. Artificial assembly or body damage, electronic control. Improper equipment, and operation are not familiar with, are likely to cause damage to the aircraft or personal injury and other unpredictable accidents. please. Pilots must pay attention to safety, and need to understand due to their own negligence caused by accidental responsibility.

(1) Away from obstacles and crowds

The flight of the remote control flight has an uncertain flight speed and state, there is a potential risk. Fly away from the flight. People, high-rise buildings, high-voltage wires, etc, while avoiding wind and rain thunderstorms and other bad weather flight to ensure that pilots, The surrounding population and the safety of the property.

(2) Away from the damp environment

The interior of the aircraft is made up of many sophisticated electronic components and mechanical parts, so it is necessary to prevent the aircraft from wet or into the body, so as to avoid mechanical, electronic components failure caused by accidents !

(3) Safe operation

Please operate the remote control aircraft according to your own status and flight skills. Fatigue, poor spirit or improper operation will increase. Probability of accidental risk

(4) Keep away from high-speed rotating parts


When the propeller in the high-speed flight, the pilot, the surrounding crowd and objects away from the rotating parts, so as to avoid danger and damage.

(5) Keep away from heat

Remote control aircraft is composed of metal, fiber, plastic, electronic components and other materials, so as far as possible away from heat, to prevent day. Drying, to avoid deformation caused by high temperature or even damage.

 
The plant is made of lithium polymer battery (LiPo)

Lithium batteries are different from the general battery, which consists of a thin layer of thin paper wrapped with its chemical endoplasm. This can be great. To reduce its weight, but it makes it more vulnerable in the face of rough or inappropriate operations. Like the same. There is a battery, as inappropriate operation will cause a fire explosion.

-  ● Do not put the battery in the model for charging, which may cause the battery to fire and damage you of the aircraft.
- If you plan to use this product for one week or more, keep the battery 50% Increase the battery life. Keep the battery 50% of the battery, just use the battery when fully charged Half of the time to charge
- Please use the original professional charger to charge the battery.
- Do not charge the carpet to prevent fire.
- Lithium battery in the storage for more than three months after the need to charge to maintain the voltage to ensure that it should have of life.

Remote control and aircraft battery installation and charging instructions


Remote control battery installation:

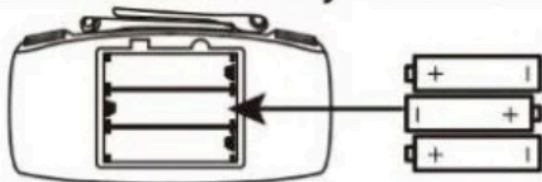

As shown in the figure according to the electrode box electrode instructions (+ / -) Place the battery correctly (as shown).



The aircraft battery is charged

 1. Connect the USB cable to the computer to charge: USB charging end connected to the aircraft battery plug, the other end can be connected to the computer USB port to charge the battery, charging lights, full when the lights off.

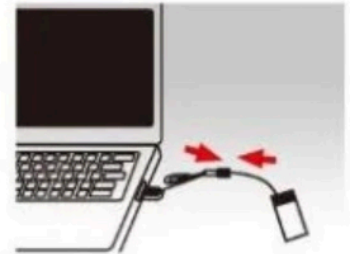

2. Connecting the aircraft power supply:

  
Put the charged battery into the battery holder of the aircraft, and then place the battery plug at the power supply on the vehicle Into the socket for power connection, connected to open the aircraft power, then the aircraft lights

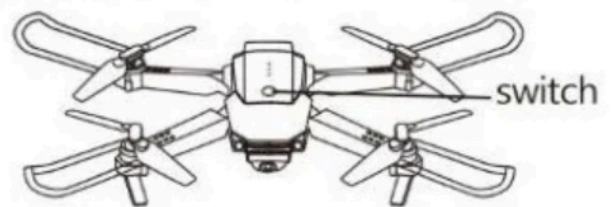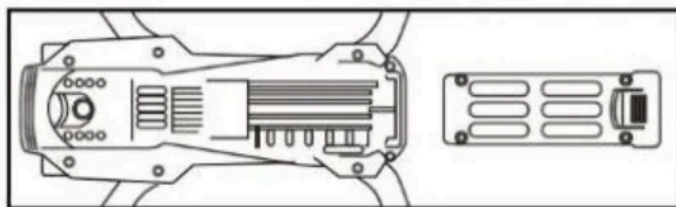

Aircraft installation


1、 Folding function display

 When folding, please fold the back Show arms. and then folded in front of the arm, Expand the opposite!

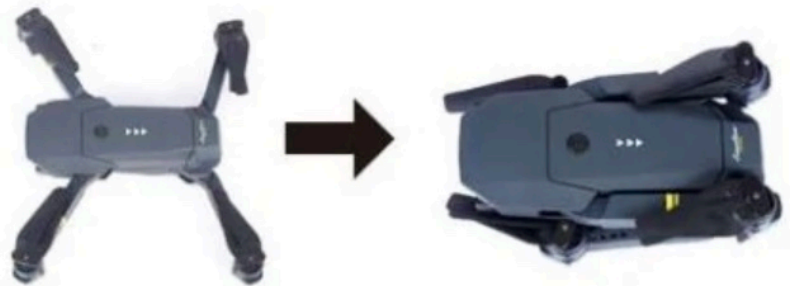


2、 Aircraft fan installation

 Please follow the correct direction to install the propeller, propeller on the sign Installed to the upper left corner of the aircraft and the lower right corner of the arm, with the phase. With the propeller on the sign B mounted to the upper right corner of the aircraft and the lower left corner of the arm, the installation of the fan folder when the alignment of the cone assembly Square accessories, installed in place after the locking screw!

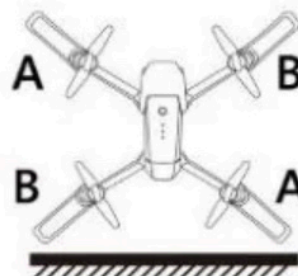


3、 Aircraft protection rack installation

 The protective frame at the aircraft arm position (pictured) Install fastening.

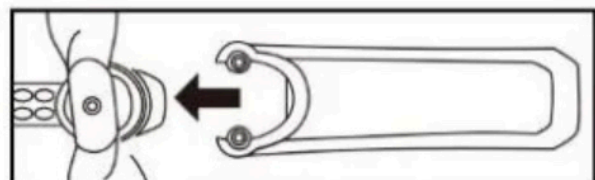


Remote control function name

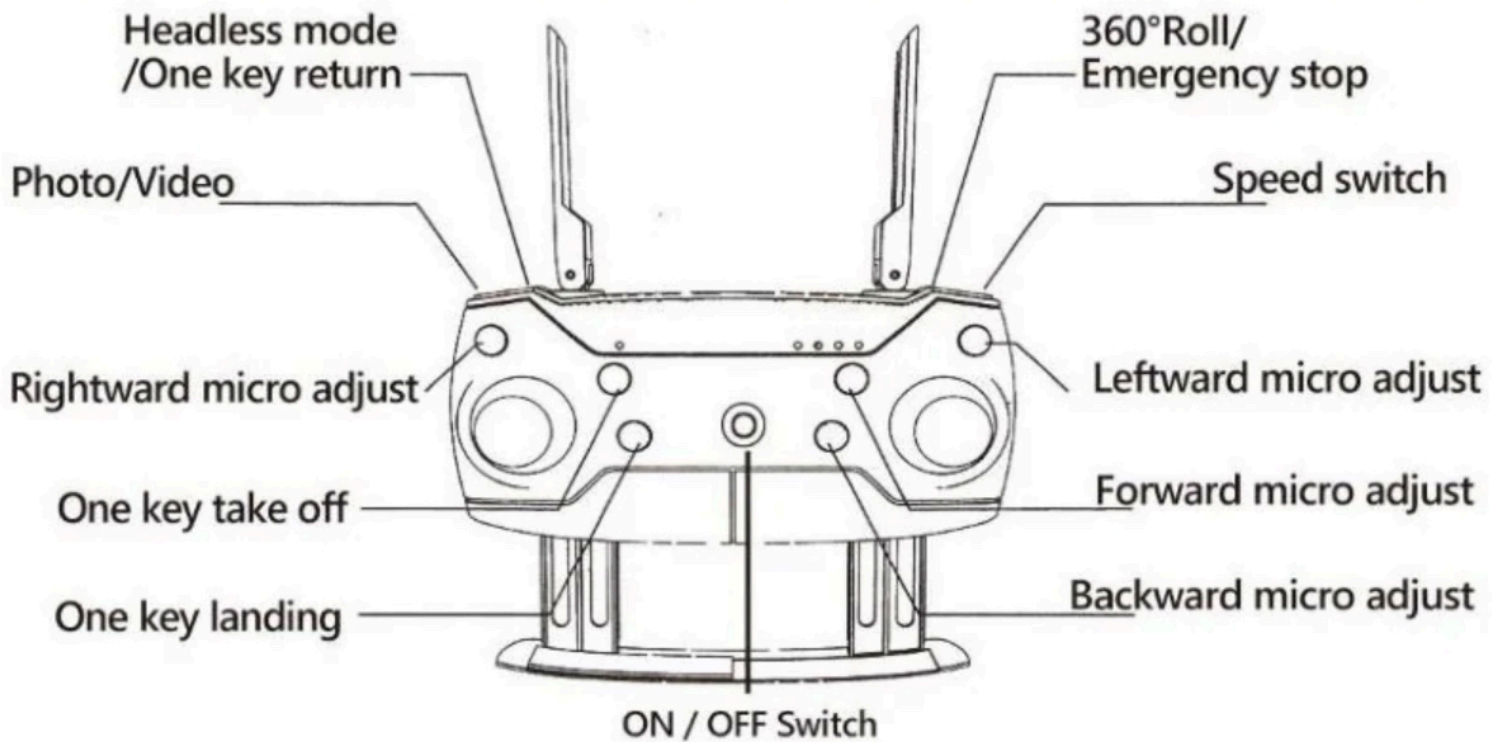 

Remote control


1、 Mobile phone rack

 Pull out the remote control lower bracket, clamp the phone.

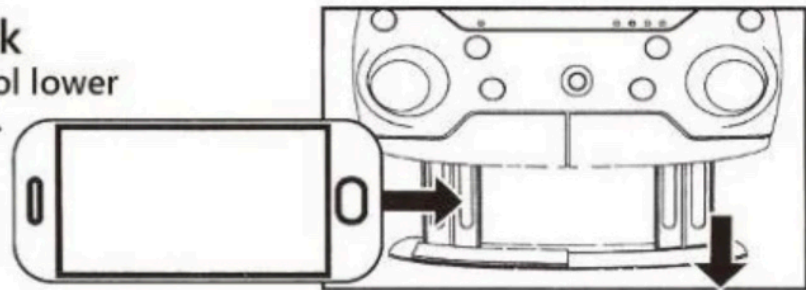


2、 2.4 G frequency

 Open the aircraft power switch, the aircraft placed in the flat Ground, then the aircraft indicator light flashes, open the remote control power Source switch, the throttle joystick pushed to the highest after the pull to the lowest, Buzzer prompt "tick" sound! The aircraft indicator light is on right Frequency to complete, then you can take off!

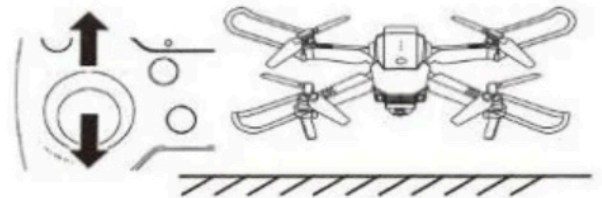


3、 A key to start and a key landing

 Tip: This product is determined by the barometer. In a variety of environmental temperature and other factors, The aircraft will automatically start when flying or low voltage. Appear high and low changes are normal!

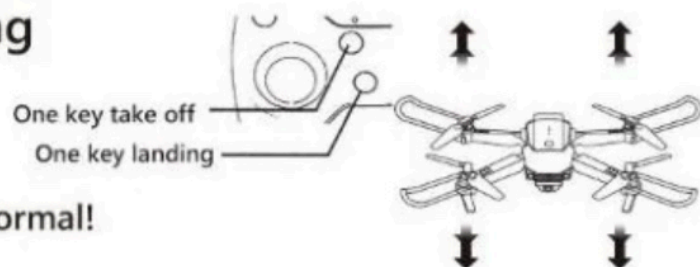


4. Flight control

 
A. Throttle (left lever)

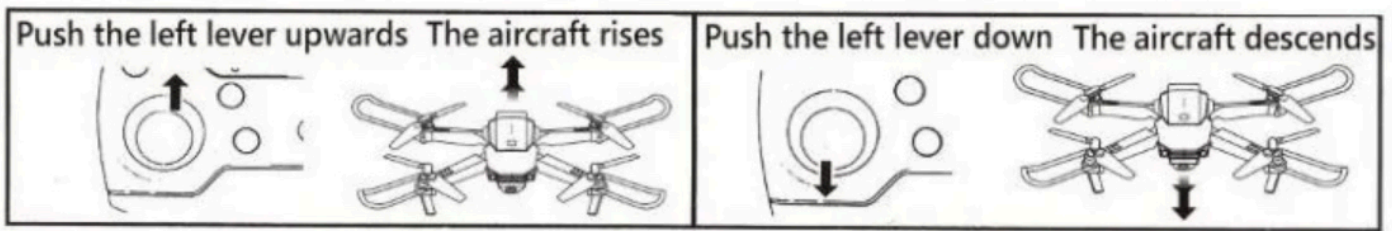

 
B. Forward and backward (right lever) (with camera front side)

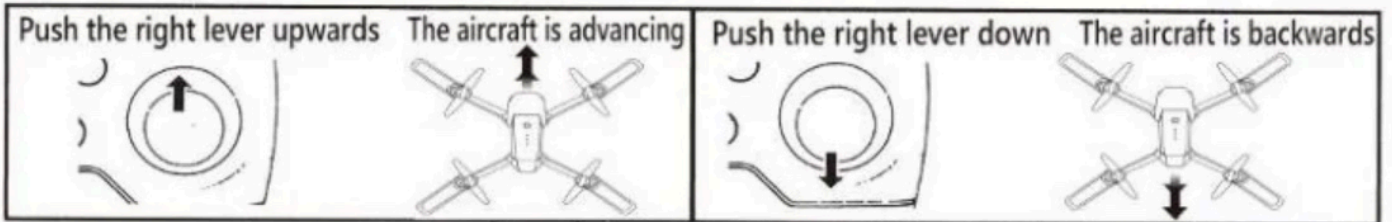


 
C. Left and right side fly

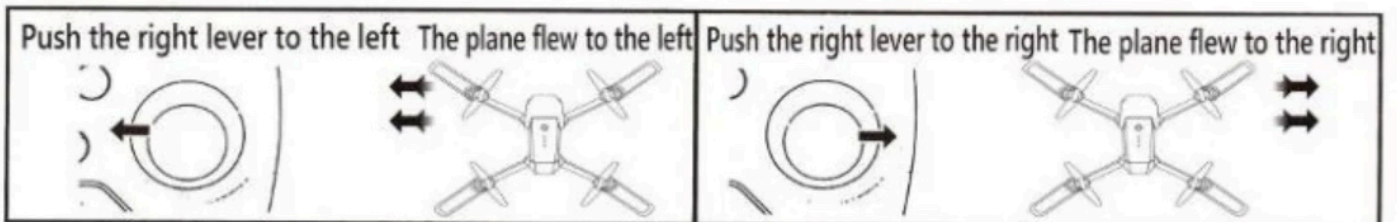

 D. Turn left and right (with camera front side)

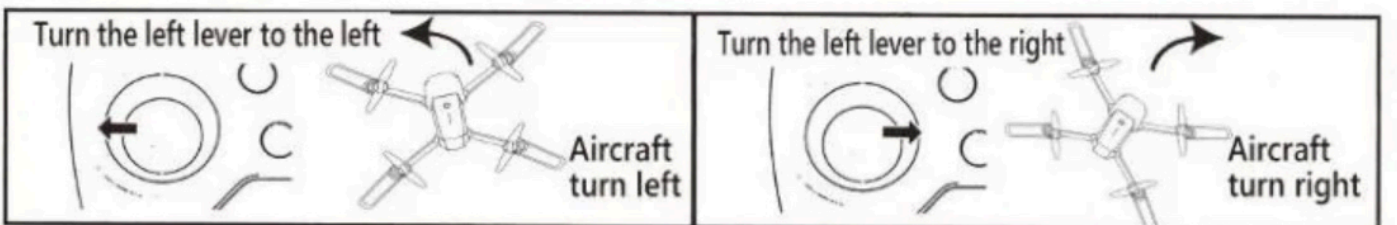


  5. Fine-tuning control (with camera front side)

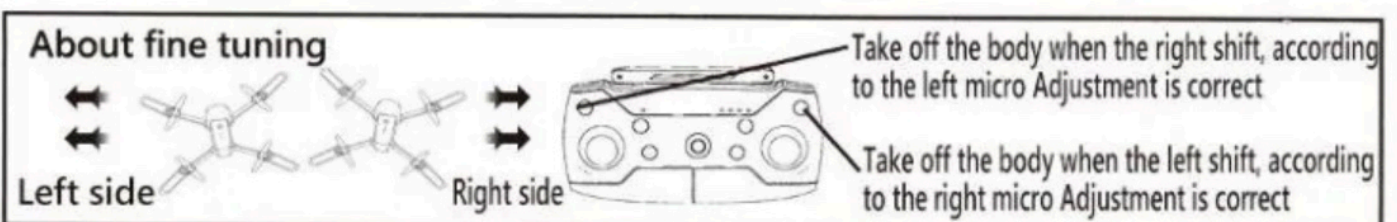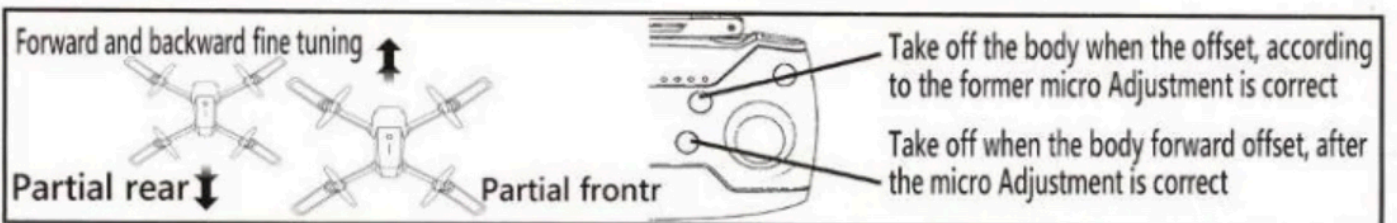


Directional definition and mode selection of headless mode

 When converting to headless mode, the aircraft will give up its front and rear azimuths, and reposition the front and rear with the remote control as a reference point. Such as: when the right lever to push forward, the aircraft will fly away from the remote control; when the right lever to pull back, the aircraft will fly to the remote control. (With camera front side)

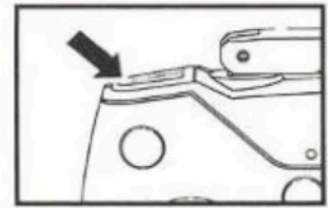


1. The direction of the aircraft before departure: the direction of the aircraft forward in front of you, (With the camera side for the front) remote control to the end of the direct flight and then press a key. Take off, that is, to complete the flight headless mode direction definition.

 2. When flying by the headless mode of the remote control issued a "flute, flute" twice, the aircraft lights Light flashing into the headless mode. And then press the remote control issued a "flute" sound Exit the headless mode.

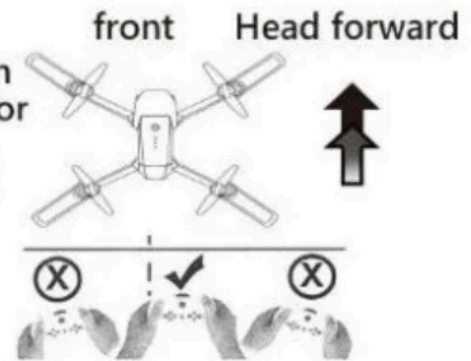


A key return

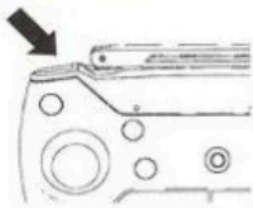 

Press a key return, the aircraft will give up their own front and rear left and right direction, automatically defined by the headless mode of backward direction of flight, when the control of the right lever when the stop this function


* Note: This feature can only be done automatically and the flight can not be reached automatically.

 Speed selection

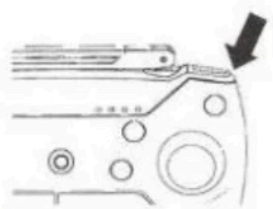

Speed file is to advance, back and left and right side of the flight is divided into third gear speed, the remote control is turned on by default when the slow power, press the remote control button issued a "flute" "flute" twice as midfielder, "flute" "Flute" press three times for the fast file, "flute" soon return to slow file. (Recommended beginners with slow operation)

 The remote control controls the recording

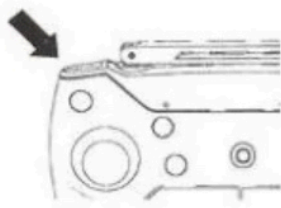


Video, camera keys (and mobile phone APP on the video, take pictures of a key, when using the remote control to control the aircraft through the remote control on the video, like the camera can also start WIFI film video or camera) prompt:

1. WIFI aerial version of the phone after 20 seconds after the phone can find WIFI connection and remote control to start the video or take pictures

2. When there is no connection to the APP must be guaranteed WIFI flight card on the SD card storage space remote control camera on the camera button has a role.


Aircraft settings reset

 1. The reset setting is a horizontal reset of the six-axis gyroscope on the aircraft, and the micro adjustment of the remote control.
2. The operation before the aircraft in the horizontal position, Push the stick as the picture, 2 seconds after the remote control issued (flute) sound, the aircraft quickly flashing lights a few times that the reset set successfully.
3. This function is generally not used, only for aircraft maintenance adjustment or aircraft when a serious offset

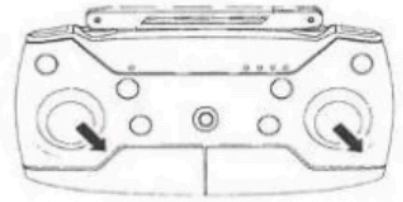

* Emergency landing

 1. During the flying time if need urgent stop , press the button (as picture shown) ,the drone will stop working. (Please do notattemp this operation while the drone regular flying in high altitude)
2. When the drone lean over 45 degrees , it will stop for protect the engine.
3. When use the App control the drone , slide the throttle down , and press the one key take off button , it will emergency landing.

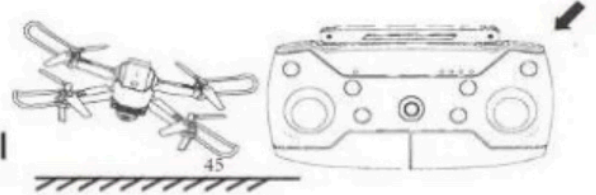

Problem guide

Ask questions	The original for	Approach
Connect the flying saucer batteries and fly The indicator light on the dish continues Flicker,operation no response	Remote control and UFO is not successful	Please re-perform the remote control and the flying saucer
Connect the flying saucer battery,There's nothing wrong with the orbiter should.	<ol style="list-style-type: none"> 1. Check if the remote control and the flying saucer are powered on 2. Check whether the remote control and the UFO battery are in, a low power state 3. Is the battery positive and negative 	<ol style="list-style-type: none"> 1. Turn on the remote control and insert the UFO battery. 2. Use full charge Full battery 3. Reinsert the battery and confirm that the battery and battery are positive or negative Pole piece of contact is normal.
Push the throttle lever,The motor does not turn and flies The indicator light on the disc starts flashing	UFO lithium battery power shortage	Charge the battery or replace another fully charged battery
The flying saucer main rotor continues Turn but cannot take off	<ol style="list-style-type: none"> 1. The main rotor deformation 2. UFO battery power shortage 	<ol style="list-style-type: none"> 1. Replace the main rotor 2. Charge or replace the battery with another battery
The flying saucer vibrates badly	Main rotor deformation	1. Replace the main rotor
The flying saucer will still go on or on After moving	The gyroscope is not at all right	The remote control can be automatically corrected mode, or restart the re-frequency
The flying saucer fell behind and lost flat On the fly.	The gyroscope is not at all right	The remote control can be automatically corrected mode, or restart the re-frequency