


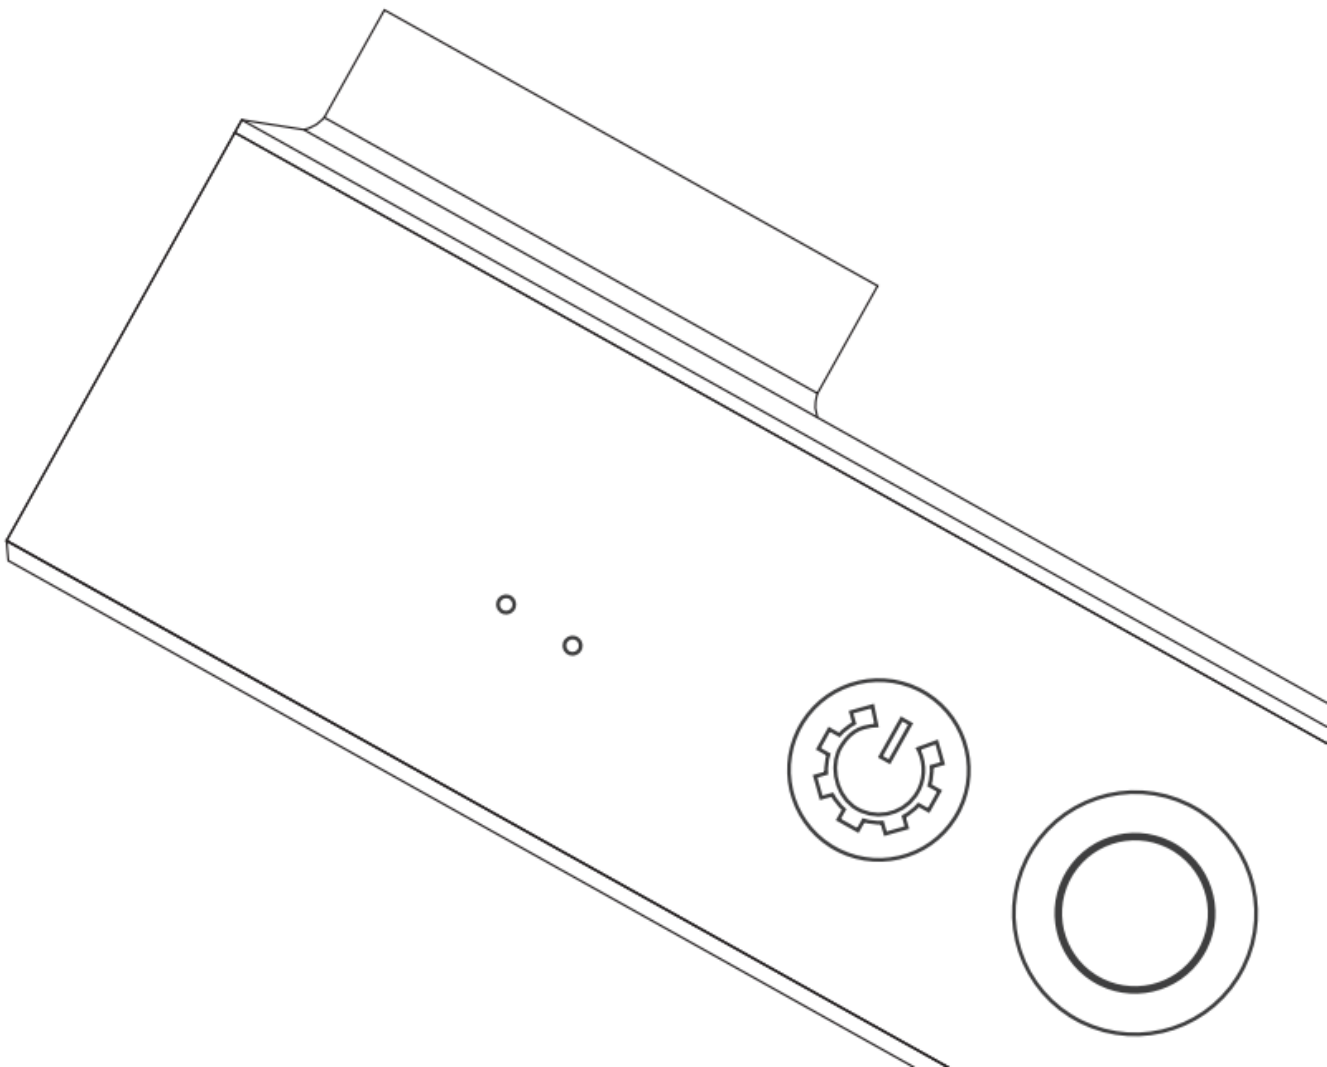

User Manual


moment 4




OVERVIEW

[] Shutter/Select Button

[] Power/Mode Button

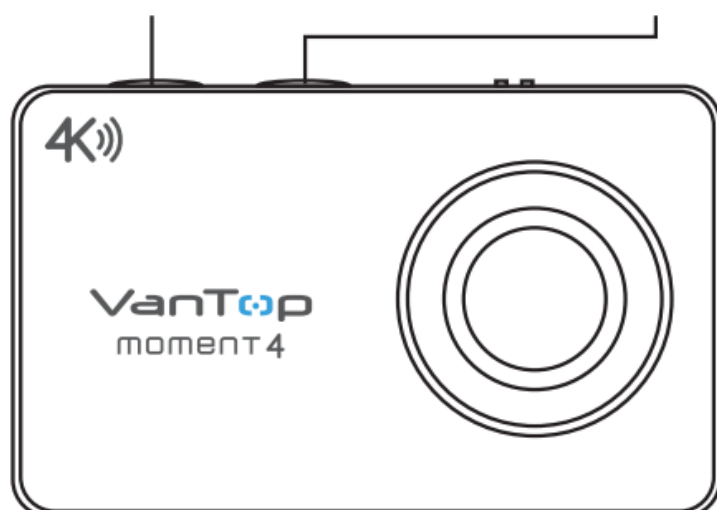


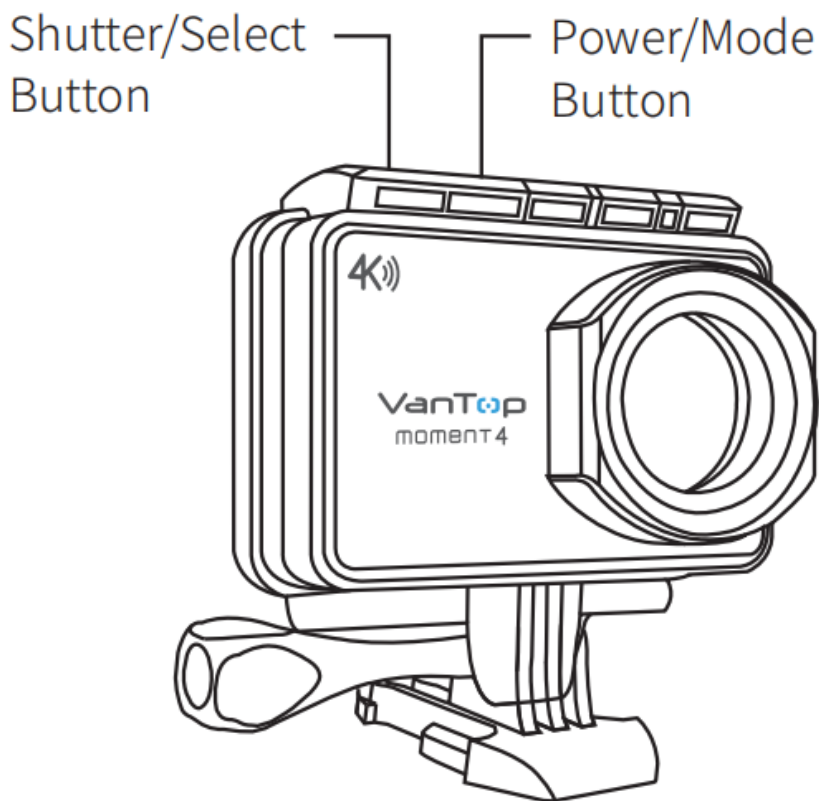
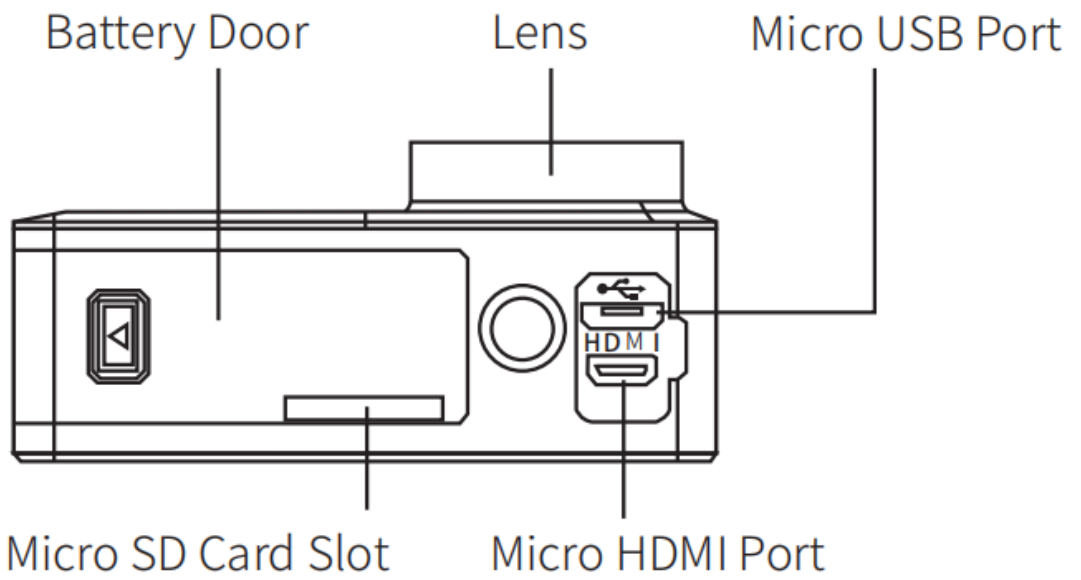
[] Microphone

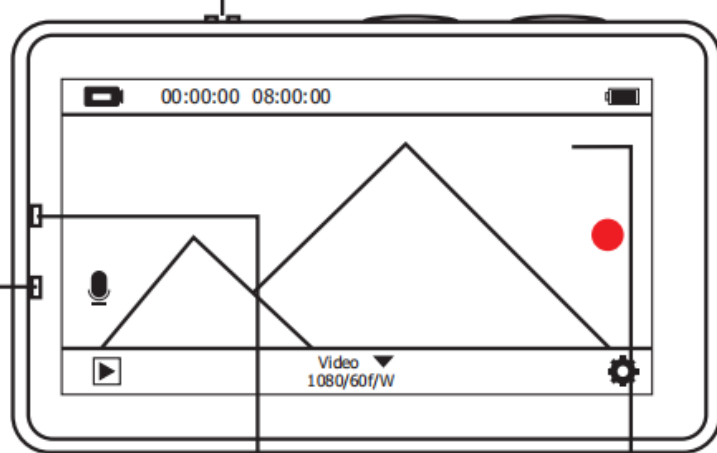

[red]
Charging
Indicator Light

[blue]
Working
Indicator Light

[]
Touch Display





Waterproof Housing



Long Connector



Short Connector 1



Short Connector 2



Surface J-Hook Buckle



360° Adapter



Tripod Mount Adapter



Bicycle Handlebar



Helmet Mounts



USB Cable



Cable Ties



Cleaning Cloth



2.4GHz Remote



Wrist Strap Of Remote Control



Helmet Belt



2*Batteries



2*Adhesive Pads



Folding backpack



APP





Camking



Camking Pro




How to Connect WIFI

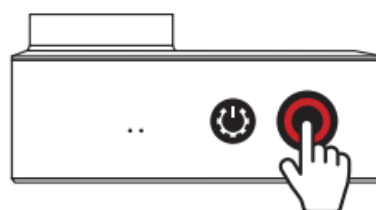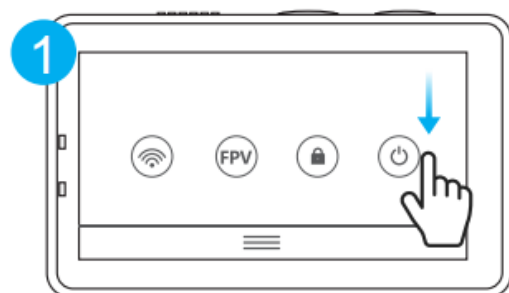


Swipe down from the top to enter main menu

Or press Shutter/Select Button for 3 seconds to turn on/off WIFI

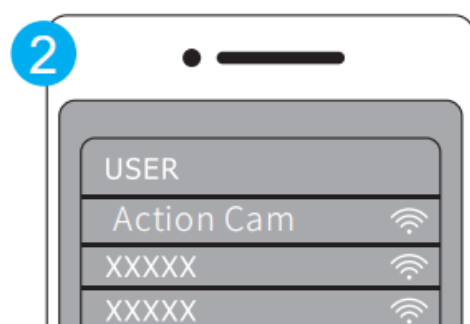

Find WiFi "Action Cam" in your mobile device's WiFi settings, then input password 12345678 to get connected.

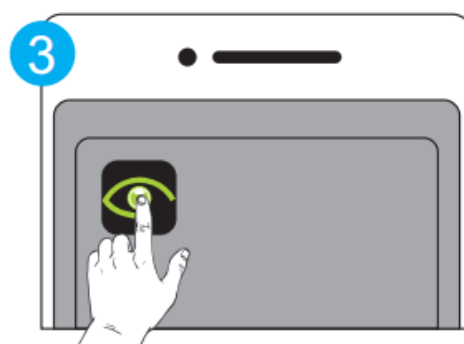

Open the app in your mobile device.

Camera Modes



Video

Record video



Photo

Capture a single photo

Motion
Detection

Start recording when any movement detected



Car Mode

Work as driving recorder

Video
Lapse

Record a series of videos at set time intervals

Slow
Motion

Record video in -2X slow motion

Photo
Lapse

Shoot a series of photos at set time intervals

Burst
Mode

Capture photo bursts

Under
Water














Take pictures or record videos under water




Time Lapse Photo and Time Lapse Video Intervals

Time Lapse Photo: Available intervals for Time Lapse Photo are 3, 5, 10, and 20 seconds.



Time Lapse Video: Available intervals for Time Lapse Video are 1, 2, 5, 10, 30, and 60 seconds.

| Interval | Examples |
|---------------|--|
| 1 seconds | Surfing, biking or other sports |
| 2 seconds | Busy street corner |
| 5-10 seconds | Clouds or outdoor scenes with long durations |
| 10-60 seconds | Lengthy activities, such as construction or art work |

| MODE | Function | WITH Remote | WIHOUT Remote |
|---|--------------------------|---|---|
|  | Start/Stop Recording |  |  |
|  | Take a Photo |  | |
|  | Take Time Lapse Photo(s) | | |
|  | Take Burst Photos | | |
|  | Start/Stop Recording |  | |
|  | | | |
|  | | | |
|  | | | |
|  | | | |

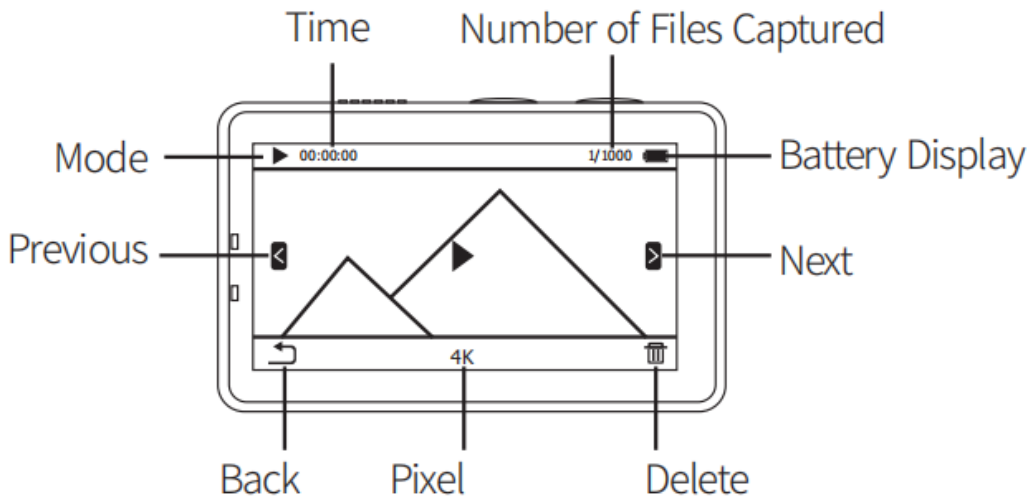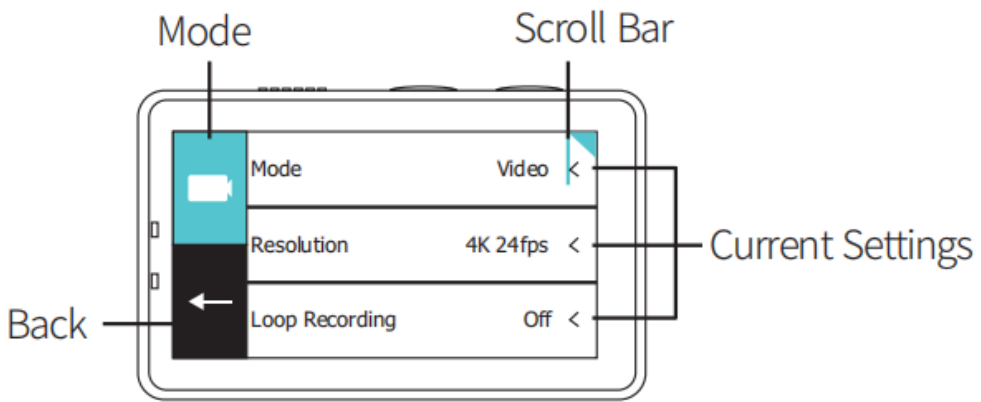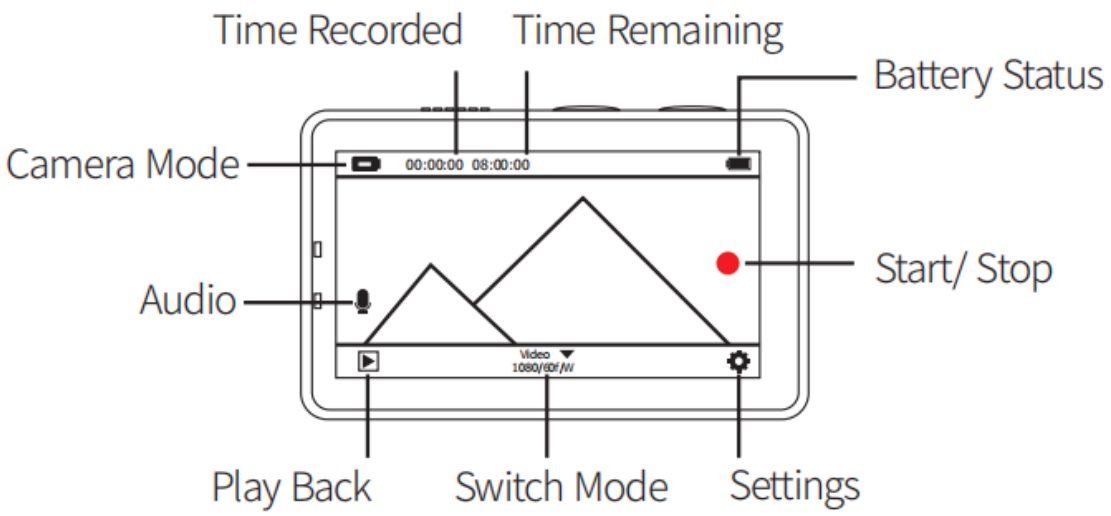



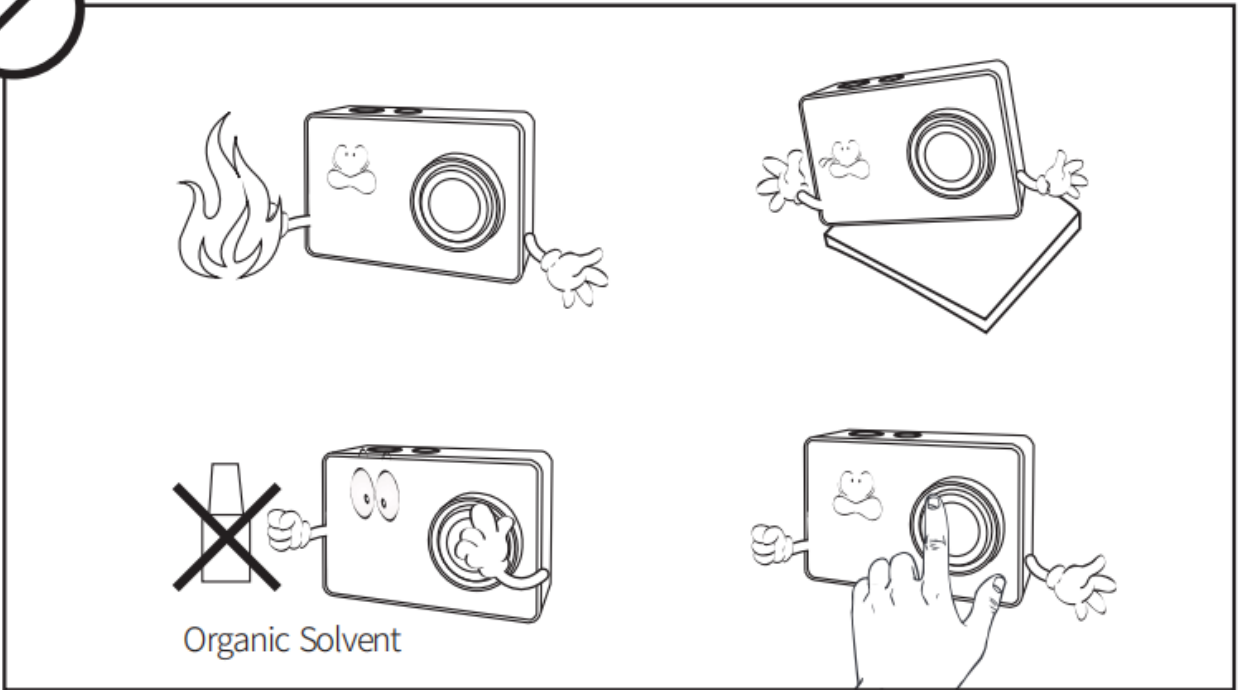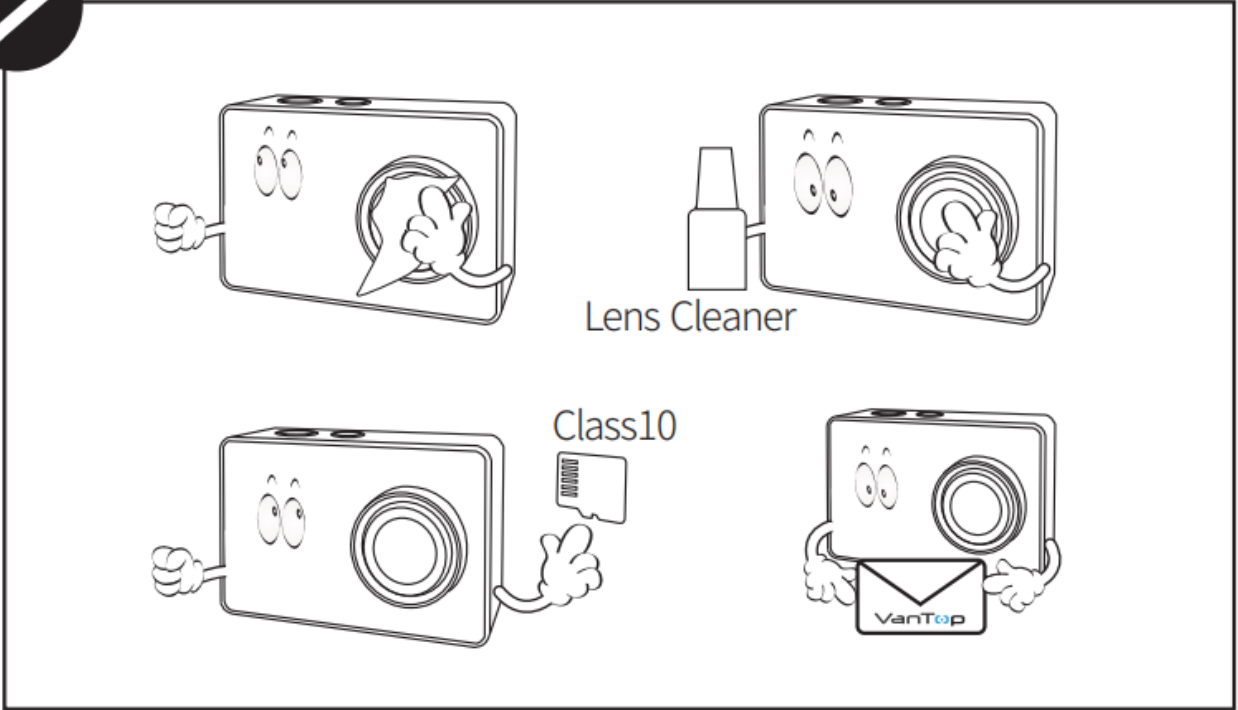





MAINTENANCE



SPECIFICATION

| | | | |
|--------------------------------|--|--------------------------|---------------|
| CPU | NT96660 | WIFI Module | RT8189ES |
| RAM | 2GB/DDR III | USB Interface | USB 2.0 |
| Flash | 8M SPI | Video Output | MICRO HDMI |
| Sensor | OV4689 (1/2.3"CMOS) | Operating Voltage | 4.0V |
| Lens | 170° HD Wide-angle Lens | Operating Current | 420 mA |
| Color | Black | Charging | DC 5V/1A |
| Battery Type/ Capacity | 3.7V/1050mAh | Waterproof | 100ft |
| Video Format | MP4 | Storage Temperature | (-10°C~+50°C) |
| Image Format | JPG | Operating Temperature | (-20°C~+60°C) |
| Battery Endurance | 70 mins(4K24fps/2K30fps/1080P60&30fps) | | |
| Record Interval | 25mins | | |
| Charging Time | 2 Hours | | |
| Storage | Micro SD card up to 128G supported | | |
| System Support | Windows XP/7/8 SP3/Vista and Mac 10.5 or above | | |
| Weight/Size | 76.2g/2.45 " | | |
| Video Size/ FramePer Second | 4K24fps/2K30fps/1080P60&30fps/ 720P120fps&60fps&30fps/VGA240 fps | | |
| Image Resolution | 20M(5120x3840)/16M (4608x3456) /12M (4032x3024)/ 10M(3648x2736)/8M (3264x2448)/5M(2592x1944)/ 3M(2048x1536)/VGA(640x480) | | |
| LCD Screen | 2.45"(432*240)TFT LCD +Touch Screen | | |



- | | |
|--|--|
|  US: support@vantop.com |  FR: support.fr@vantop.com |
|  CA: support@vantop.com |  ES: support.es@vantop.com |
|  UK: support.uk@vantop.com |  IT: support.it@vantop.com |
|  DE: support.de@vantop.com |  JP: support.jp@vantop.com |