


# LGX Wiring Instructions


Do not connect an **LGX**<sup>®</sup> stepper motor to a printer's cable without checking the wires and pins of the connection cable.

Not all printers are ready for a direct connection with the **LGX**<sup>®</sup>. Some use stepper drivers with no protection and this may damage them.

Before connecting a **LGX**<sup>®</sup> to any 3D printer check if the connector pins are wired as shown below:

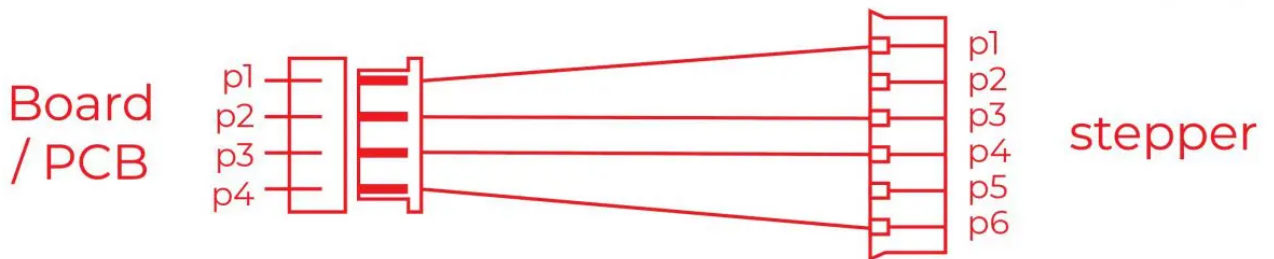

After the start of service, if the **LGX**<sup>®</sup> is turning in the wrong direction, swap the top (or bottom) pair of wires to make a correction:

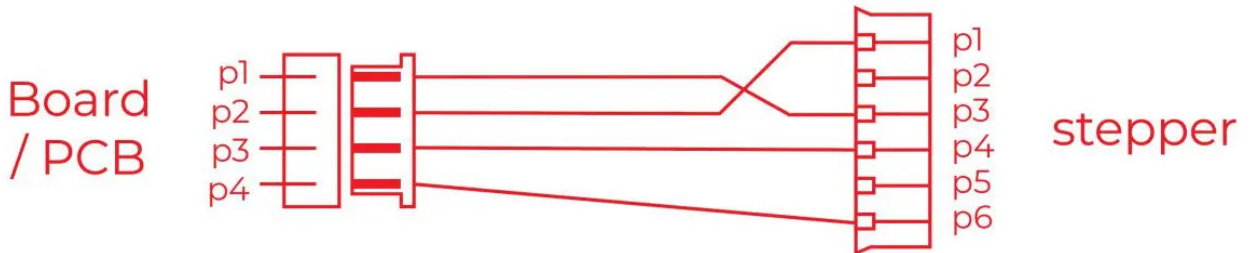

Other Information:

- [How to Identify the Coils on a Creality Stepper Motor](#)
- [How to Identify the Coils on a Bondtech Stepper Motor](#)
- [Reversing Feeding Direction by Swapping the Coils' Wires](#)