MQ-2 Gas Sensor

Features

- Sensitive for LPG, propane, hydrogen
- Output voltage boosts along with the concentration of the measured gases increases
- Fast response and recovery
- Features boost circuit
- Adjustable sensitivity
- Signal output indicator

Specification

- Power: 2.5V ~ 5.0V
- Dimension: 40.0mm * 21.0mm
- Mounting holes size: 2.0mm

Pinouts

PIN Description

DOUT Digital data output

AOUT Analog data output

- GND Ground
- VCC Power input (2.5V~5.0V)

Configure Pico

MicroPython and C examples are provided for this sensor, to use it with Pico, you need to first flash firmware to the Pico according to the example.

Please refer to the guides of Raspberry Pi about how to flash the firmware. We recommend you use the firmware from the Demo codes archive.

- C/C++ guide of Pico
- Micropython guide of Pico

Hardware connection



Hardware Connection-Pico

MQ-2	Pico	Description
VCC	3.3V	Power input
GND	GND	Ground
AOUT	GP26	Analog data output
DOUT	GP22	Digital data output

Examples

Download the example

Open the terminal of Raspberry Pi and run the following command to download the example:

```
sudo apt-get install p7zip-full
cd ~
sudo wget https://www.waveshare.com/w/upload/f/f2/MQ-2-Gas-Sensor-code.7z
7z x MQ-2-Gas-Sensor-code.7z -0./MQ-2-Gas-Sensor-code
cd ~/MQ-2-Gas-Sensor-code
```

С

Here we use the Raspberry Pi board to flashing the Pico.

- Compile the c examples
 - Go into the directory of C examples

```
cd ~/MQ-2-Gas-Sensor-code/Pico/c/
```

• Go into the build folder and add the sdk; ../../pico-sdk is the path of the SDK, if may be different if you have saved the SDK in other path.

```
cd build
export PICO_SDK_PATH=../../pico-sdk
```

• Generate Makefile by cmake command

cmake ..

• Compile the codes by command make

```
make -j9
```

Note: If you use Pi zero, please run make only.

- After compiling, a uf2 file is generated.
 - Hold the button of Pico board, connect the Pico board to Raspberry Pi by USB cable
 - After connecting, release the button and a portable disk (RPI_RP2) is recognized.
 - Copy the main.uf2 file generated which locates in build folder to the portable disk (RPI-RP2)

```
cp main.uf2 /media/pi/RPI-RP2/
```

Python examples

In windows PC

- Hold the BOOTSET button of the PICO board, connect the Pico board to Raspberry Pi by USB cable
 - After connecting, release the button and a portable disk (RPI-RP2) is recognized.
- Copy the rp2-pico-20210418-v1.15.uf2 file to the portable disk (RPI-RP2).
- Open the Thonny IDE (Please install the newest version which supports Pico board or update).
- Choose Tools -> Options -> Interpreter, choose the Pico and the port

General	Interpreter	Editor	Theme & Font	Run & Debug	Terminal	Shell	Assistant
Which	interpreter or	device	should Thonny u	se for running ye	our code?		
Micro	Python (Raspl	berry Pi P	Pico)				-
(lool	nect your devi to for your dev	ice name	e computer and s e, "USB Serial" or y need to install j	r "UART").	0.776	below	
Port							
USB	串行设备 (CO	M4)					•
USB		M4)					•
USB		M4)					•
USB		M4)					•
USB		M4)			install or	update	IJ

- Download the demo codes, unzip and find the MicroPython example
- Choose File -> Open -> MQ2 Gas Sensor.py and run it.

Shell X
ticroPython v1.13-290-g556ae7914 on 2021-01-21; Raspberry Pi Pico with RP2040 Type "help()" for more information. >>> %Run -c \$EDITOR_CONTENT

In Raspberry Pi

- Flash the uf2 file to the Pico board just like in the Windows PC
- Open the Thonny IDE of Pi, make sure that it is the newest version, or update it.
- Choose Tools -> Options... -> Interpreter
 - Choose Pico and the Port

			Thors	ny options	_		~	^
General	Interpreter	Editor	Theme & Font	Run & Debug	Terminal	Shell	Assistant	L
Which	interpreter o	r device	should Thonny	use for running	your code?	6		
Microf	Python (Ras	oberry P	i Pico)					•
(look If you	for your dev	ice nam	e computer and e, "USB Serial" o ay need to instal	or "UART").		below		
Port Boar	d in FS mod	e - Boar	d CDC (/dev/tty/	ACM0)				-
								-
					Install	or upd	ate firmwar	24

• If your Thonny IDE cannot support the Pico board, you can update it and try again.

sudo apt upgrade thonny

 Choose File -> Open... -> python/MQ2 Gas Sensor.py and run it.

Expected result

- The sensor needs to preheat for about a minute to heat the internal sensitive materials of the sensor.
- Put the sensor inside the device containing sensitive gas, and the indicator on the module lights up. The indicator goes off when the sensor is removed from the device.

The examples provided are based on the STM32F103RBT6 and the STM32H743, the connection provided is based on the STM32F103RB.

If you want to use other STM32 boards, please change the connection and you may need to port the codes yourself.

Hardware connection



Hardware connection-STM32

Connect to STM32F103RBT6

MQ2	STM32	Description
VCC	3.3V	Power input
GND	GND	Ground
AOUT	PA6	Analog data output
DOUT	PA4	Digital data output

Examples

The examples are based on the HAL library. Please download the demo codes, unzip them and find the STM32 examples.

- Open the project from MQ-2-Gas-Sensorcode\STM32\STM32F103RB\MDK-ARM by Keil.
- Build the project and program it to the STM32 board.
- connect the UART1 of the STM32 board to the PC and check the serial data by SCCOM software.

A ssco	M V5.13.1	串口/网	诸数据	调试器,作者	t:大aFJ]	,26180	958@qq.com. QQ群: 52502449(最新版本)	875		×
通讯跳口			发送		小工具	帮助	联系作者			
[11:45:26.	714]收←◆	Gan not	t leaka	ge!!!		_				^
[11:45:27.	237]收+◆	Gas not	t leaks	ge! []						
[11:45:27.	758]收↔◆	Gas not	t leaka	gel 11						
[11:45:28.	281]收+◆	Gas not	t lesks	gelll						
[11:45:28.	803]收++◆	Gaz not	t lesks	gelli						
[11:45:29.	324]收↔◆	Gas not	t leake	gelli						
[11:45:29.	847]收+◆	Gas not	t leaks	gel 11.						
[11:45:30.	369]收←◆	Gas not	t leaks	gellt	1					
[11:45:30. ad_value:3	.892]4≵↔♦ 3.15V	Gan le	akaga! !	1						
[11:45:31 ad_value:3	426]收+◆ 3.30V	Gas le	akage! !	£						
[11:45:31. ad_value:3	.961]收+◆ 3.19V	Gas le	akage!!	1						
[11:45:32. ad_value:3	495]4∦z++ 3.04V	Gas le	akage!!	1						
[11:45:33. ad_value:2	.031]收+◆ 2.70V	Gaz le	akagu!!	1						
[11:45:33.	566]收+◆	Gas not	t leaka	gel !!						- 1
111:45:34	088]收+◆	Gas not	t leaks	ge!!!						
[11:45:34	610]Ute+◆	Gas not	t leaka	get 11						
[11:45:35.	132]收++◆	Gas not	t leaks	ge!!!						
[11:45:35.	654]收++	Gas not	t leaks	get ft						
表除窗口	1 訂單文件	ENT.	1月1月1日	1助手\SAVE	2019 11 2	15-33	-32.jpg 波法文件 傳止 寄发误区 厂 最前 厂	English (194	en solg	- sel _ l
And Distanting to a second	M22 Silies	and the second second	the second s		1日示		and a second sec	000 mx/次	and the second second	10.0
	80 6		多串口i	and a second			元 細时时间:20 ms 第1 字节 至末尾 → 加快		Ŧ	3
T RIS F	TOTA 波特	章: 96	00	• 0						0
1 J. J. JUL 11 19	发展sscong 立创P结尾等		发	iš.						
【升级到的	SCOM5 13.1)	★ 2.	TRT-T	aread中国人	的开源关	廣播作	系统 ★新一代WiFi芯片兼容8266支持AT-Thread ★	SWich距离NiP	词自细	9
www.daxia	a.com S:0		R:1	495	COM22	已关闭	9600bps,8,1,None,None			

Expected result

- The sensor needs to preheat for about a minute to heat the internal sensitive materials of the sensor.
- Put the sensor inside the device containing sensitive gas, and the indicator on the module lights up. The indicator goes off when the sensor is removed from the device.

The examples provided are based on the Arduino UNO, if you need to use other Arduino boards, please check if the board is compatible with the UNO.

Hardware connection



Hardware connection-Arduino

Connect to Arduino UNO

MQ2	Arduino	Description
VCC	5V	Power input
GND	GND	Ground
AOUT	A0	Analog data output
DOUT	D2	Digital data output

Examples

• Please download and install Arduino IDE to your PC.

• Arduino Website

- Download the demo codes, unzip and find the Arduino examples
- Open the Gas_Sensor.ino file by the Arduino IDE
- Build and upload the codes to the UNO board

• After uploading, you can open the Serial Monitor of IDE and check the data

Expected result

- The sensor needs to preheat for about a minute to heat the internal sensitive materials of the sensor.
- Put the sensor inside the device containing sensitive gas, and the indicator on the module lights up. The indicator goes off when the sensor is removed from the device.

Resources

- Datasheet
- User Manual
- Schematic
- Demo Code
- Software