# MQ-3 Gas Sensor

### Features

- Sensitive for alcohol, ethanol
- Output voltage boosts along with the concentration of the measured gases increases
- Fast response and recovery
- Adjustable sensitivity
- Signal output indicator

# Specification

- Power: 2.5V ~ 5.0V
- Dimension: 40.0mm \* 21.0mm
- Mounting holes size: 2.0mm

# Pinouts

### PIN Description

DOUT Digital data outputAOUT Analog data outputGND GroundVCC Power input (2.5V~5.0V)

# Configure Pico

MicroPython and C examples are provided for this sensor, to use it with Pico, you need to first flash firmware to the Pico according to the example.

Please refer to the guides of Raspberry Pi about how to flash the firmware. We recommend you use the firmware from the Demo codes archive.

- C/C++ guide of Pico
- Micropython guide of Pico

### Hardware connection



Hardware Connection-Pico

MQ-3	Pico	Description
VCC	3.3V	Power input
GND	GND	Ground
AOUT	GP26	Analog data output
DOUT	GP22	Digital data output

### Examples

### Download the example

Open the terminal of Raspberry Pi and run the following command to download the example:

```
sudo apt-get install p7zip-full
cd ~
sudo wget https://www.waveshare.com/w/upload/1/13/MQ-3-Gas-Sensor-code.7z
```

```
7z x MQ-3-Gas-Sensor-code.7z -o./MQ-3-Gas-Sensor-code
```

```
cd \sim/MQ-3-Gas-Sensor-code
```

cd Pico/c/build/

### С

Here we use the Raspberry Pi board to flashing the Pico.

- Compile the c examples
  - Go into the directory of C examples

```
cd ~/MQ-3-Gas-Sensor-code/Pico/c/
```

• Go into the build folder and add the sdk; ../../pico-sdk is the path of the SDK, if may be different if you have saved the SDK in other path.

```
cd build
export PICO_SDK_PATH=../../pico-sdk
```

• Generate Makefile by cmake command

```
cmake ..
```

• Compile the codes by command make

```
make -j9
```

Note: If you use Pi zero, please run make only.

- After compiling, a uf2 file is generated.
  - Hold the button of Pico board, connect the Pico board to Raspberry Pi by USB cable
  - After connecting, release the button and a portable disk (RPI\_RP2) is recognized.
  - Copy the main.uf2 file generated which locates in build folder to the portable disk (RPI-RP2)

```
cp main.uf2 /media/pi/RPI-RP2/
```

### Python examples

#### In windows PC

- Hold the BOOTSET button of the PICO board, connect the Pico board to Raspberry Pi by USB cable
  - After connecting, release the button and a portable disk (RPI-RP2) is recognized.
- Copy the rp2-pico-20210418-v1.15.uf2 file to the portable disk (RPI-RP2).
- Open the Thonny IDE (Please install the newest version which supports Pico board or update).
- Choose Tools -> Options -> Interpreter, choose the Pico and the port

hould Thonny use for running your code?	General Interpre	ter Editor	Theme & Font	Run & Debug	Terminal	Shell	Assistant	L
ico)  computer and select corresponding port below , "USB Serial" or "UART"). need to install proper USB driver first.   Install or update firmware OK Cancel	Which interprete	r or device	should Thonny u	se for running ye	our code?			
computer and select corresponding port below , "USB Serial" or "UART"). need to install proper USB driver first.	MicroPython (Ra	aspberry Pi	Pico)				-	}
computer and select corresponding port below , "USB Serial" or "UART"). need to install proper USB driver first.	Details							
, "USB Serial" or "UART"). need to install proper USB driver first.	Connect your	device to th	e computer and s	select correspon	ding port b	below		
need to install proper USB driver first.	(look for your	device nam	e, "USB Serial" of	r "UART").				
Install or update firmware	If you can't fin	d it, you ma	y need to install	proper USB driv	er first.			
Install or update firmware OK Cancel	Port							
Install or update firmware OK Cancel	USB 串行设备	(COM4)					•	
Install or update firmware OK Cancel								
Install or update firmware OK Cancel								
Install or update firmware OK Cancel								
Install or update firmware OK Cancel								
Install or update firmware OK Cancel								
Install or update firmware OK Cancel								
OK Cancel								
OK Cancel					Install or	update	firmware	
					Install or	update.	firmware	

- Download the demo codes, unzip and find the MicroPython example
- Choose File -> Open -> MQ3 Gas Sensor.py and run it.



#### In Raspberry Pi

- Flash the uf2 file to the Pico board just like in the Windows PC
- Open the Thonny IDE of Pi, make sure that it is the newest version, or update it.
- Choose Tools -> Options... -> Interpreter
  - Choose Pico and the Port

			Thora	ny options			~	^
General	Interpreter	Editor	Theme & Font	Run & Debug	Terminal	Shell	Assistant	L
Which	interpreter o	r device	should Thonny	use for running	your code	,		
Microf	ython (Ras	pberry P	i Pico)					•
Conn (look If you Port	ect your dev for your dev I can't find it	ice to th ice nam , you ma	e computer and e, "USB Serial" o ay need to instal	select correspo or "UART"). I proper USB dr	inding port	below		
Boar	d in FS mod	e - Boar	d CDC (/dev/tty/	ACMO)				•
					Install	or upd	ate firmwa	<u>ne</u>
						OK	Can	cel

• If your Thonny IDE cannot support the Pico board, you can update it and try again.

sudo apt upgrade thonny

 Choose File -> Open... -> python/MQ3 Gas Sensor.py and run it.

### Expected result

- The sensor needs to preheat for about a minute to heat the internal sensitive materials of the sensor.
- Put the sensor inside the device containing sensitive gas, and the indicator on the module lights up. The indicator goes off when the sensor is removed from the device.

The examples provided are based on the STM32F103RBT6 and the STM32H743, the connection provided is based on the STM32F103RB.

If you want to use other STM32 boards, please change the connection and you may need to port the codes yourself.

### Hardware connection



Hardware connection-STM32

Connect to STM32F103RBT6

MQ3	STM32	Description
VCC	3.3V	Power input
GND	GND	Ground
AOUT	PA6	Analog data output
DOUT	PA4	Digital data output

## Examples

The examples are based on the HAL library. Please download the demo codes, unzip them and find the STM32 examples.

- Open the project from MQ-3-Gas-Sensorcode\STM32\STM32F103RB\MDK-ARM by Keil.
- Build the project and program it to the STM32 board.
- connect the UART1 of the STM32 board to the PC and check the serial data by SCCOM software.

SSCC	M V5.13.1	串口/网	诸数据	调试器,作者	大师丁丁	,26180	058@qq.com. QQ群: 52502449(最新版本)	100		×
通讯跳口	用口设置	显示	发送	多亨符串	小工具	帮助	联系作者			
[11:45:26	714]收←◆	Gas not	t leaka	ge!!!!		_				^
[11:45:27	.237]收+◆	Gas not	t loaks	gell1						
[11:45:27	758]收↔◆	Gas not	t leaka	gel 11						
[11:45:28	281]收+◆	Gas not	t lesks	gelll						
[11:45:28	803]收++	Gaz not	t lesks	gelli						
[11:45:29	324]收←◆	Gas not	t leaks	gellt						
[11:45:29	847]收+◆	Gas not	t leaks	gs111						
[11:45:30	369]收+◆	Gas not	t leaks	gellt						
[11:45:30 ad_value:	.892]4≵↔♦ 3.15V	Gas le	drage! !	1						
[11:45:31 ad_value:	. 426]4≵↔♦ 3. 30V	Gas le	skage! !	£						
[11:45:31 ad_value:	.961]4次↔◆ 3.19V	Gas le	akage!!	1						
[11:45:32 ad_value:	. 495]4∦z++∳ 3. 04V	Gas le	akage!!	1						
[11:45:33 ad_value:	.031]收+◆ 2.70V	Gas le	drags!!	1						
[11:45:33	566]收+◆	Gas not	t leaka	gel 11						- 1
11:45.34	068月版+-●	Gas not	t leaka	gelli						
[11:45:34	610]\k+◆	Gas not	t leaka	get 11						
[11:45:35	132]收++◆	Gas not	t leaka	ge!!!						
[11:45:35	654]收+◆	Gas not	t leaka	get ft						
清除窗L	1 打开文件	ŧ[小I	月、串口	助手\SAVES	019_11_7	_16-33	-32. jpg 演漫文件 傳止 清发误区 厂 最前	∏ English (∰	1 1 1 1 1 1 1 1 1 1	~ 「房 —
日号   00	M22 Silies	a Labs	CP210x	- IT HE	電示 (	¥存款者	g   「 接收数据到文件   HEX发送   定时发送	1000 =x/次	厂 加回	车换行。
• ITH	80 0	Æ	多串口道	ot 되 물을	时间徽和	分包显示	元 細助时间:20 ms 第1 字节 至 末尾 ▼加	校验None	*	-
T RIS A	P DIA 波特	室: 96	00	. 0				-200-12		0.
为了更好货 青店主册源	大概SSC000 立创P结尾等	2件 第户	发	送						÷
【升级至修	SCOM5. 13. 1	<b>1 ★</b> 2.	*RT-Th	wead中国人	的开源免	廣操作	系统 ★新一代WiPi芯片兼容8266支持AT-Thread	★88M远距离#i	Fi可自细	9
www.daxi	a.com S:0		R:1	495	COM22	已关闭	9600bps,8,1,None,None			

### Expected result

- The sensor needs to preheat for about a minute to heat the internal sensitive materials of the sensor.
- Put the sensor inside the device containing sensitive gas, and the indicator on the module lights up. The indicator goes off when the sensor is removed from the device.

The examples provided are based on the Arduino UNO, if you need to use other Arduino boards, please check if the board is compatible with the UNO.

### Hardware connection



Hardware connection-Arduino

**Connect to Arduino UNO** 

MQ2	Arduino	Description
VCC	5V	Power input
GND	GND	Ground
AOUT	A0	Analog data output
DOUT	D2	Digital data output

### Examples

• Please download and install Arduino IDE to your PC.

#### • Arduino Website

- Download the demo codes, unzip and find the Arduino examples
- Open the Gas\_Sensor.ino file by the Arduino IDE
- Build and upload the codes to the UNO board
- After uploading, you can open the Serial Monitor of IDE and check the data

## Expected result

- The sensor needs to preheat for about a minute to heat the internal sensitive materials of the sensor.
- Put the sensor inside the device containing sensitive gas, and the indicator on the module lights up. The indicator goes off when the sensor is removed from the device.

### Resources

- Datasheets
- User Manual
- Schematic
- Demo Code
- Software