

Safety Park

The S7 REMOTE trolley is fitted with a Safety Park feature. The Safety Park is designed to stop the trolley from responding to short commands sent from the remote control handset; preventing the trolley from being started inadvertently.

We recommend Safety Park is activated before placing the remote in the cradle or whenever the trolley is left unattended e.g. whilst putting out.

Safety Park can be activated whilst in remote or manual mode.

To activate Safety Park, turn the dial on the trolley anticlockwise until 'P' flashes on the trolley's screen. This indicates Safety Park has been initiated (fig. 1).

If activating Safety Park in manual mode, stop the trolley first and then turn the dial anticlockwise until the speed reduces and 'P' flashes on the trolley's screen.

To restart the trolley when in Safety Park using the remote control handset, hold down the +, -, < or > button (fig. 2) for two seconds. The trolley will restart in the direction of the button held down.

To restart your trolley in manual mode turn the dial clockwise and press the button.

N.B. if Safety Park has been applied in manual mode whilst the trolley is moving, adjusting the speed will result in the trolley restarting without pressing the button.



Fig 1



Fig 2