



52" Banner Paper

INSTRUCTIONS FOR BEST RESULTS:

1. Place the label media into the multipurpose tray of the iColor® printer.
 - ⚠ The shiny side of this media is the print side.
 - iColor 500 / 600: Print side face up in Multipurpose Tray
 - iColor 350 / 550 / 540 / 800: Print side face down in Multipurpose Tray
2. Printer Settings:
 - iColor 500 / 600: Set media type to 'Heavy' and media weight to 'Plain'
 - iColor 350 / 540 / 550 / 800: Set media type to 'Thick to 163g'
 - ⚠ Page size should be set to 'Banner'. If printing banners outside the ProRIP software, a custom size may need to be set.
 - ⚠ Specific print modes and sizes for this media are available when using the iColor ProRIP software. Listed as Banner Paper
3. Use of the RIP software is not required since the use of white toner is not needed.
 - If your printer is equipped, you may print using the CMYK cartridges from your favorite graphics program.
 - If using the RIP, do not use white toner. Print either from the CMYK queue or shut off white and print with CMY (composite black).
 - ⚠ DO NOT set the job to mirror print
4. Print the image.
5. Cut if necessary and apply as desired.

FOR TIPS AND TECHNIQUES VISIT:

www.garmentprinterink.com/pages/transfer-media-tech-tips