



Magnetic Media

INSTRUCTIONS FOR BEST RESULTS:

1. Place the label media into the multipurpose tray of the iColor® printer.
 - △ The white side of this media is the print side.
 - iColor 500 / 600: Print side face up in Multipurpose Tray
 - iColor 550 / 540 / 800: Print side face down in the Multipurpose Tray
 - △ Letter sized media can be fed either portrait or landscape when using the iColor 600 & 800 models.
2. Printer Settings:
 - iColor 500 / 600 - Set media weight to 'Ultra Heavy 3' and media type to 'Labels'
 - iColor 550 / 540 / 800 - Set paper type to 'Thick to 220g'
 - Page size should be 'Letter' or 'Tabloid', depending on the media size used.
 - △ Specific print modes and sizes for this media are available when using the iColor ProRIP software. Listed as Magnetic Media.
 - △ DO NOT set the job to mirror print.
3. When printing on this media, using the RIP software is not required since the use of white toner is not needed.
 - If your printer is equipped, you may print using the CMYK cartridges from your favorite graphics program.
 - If using the RIP, do not use white toner. Print either from the CMYK queue or shut off white and print with CMY (composite black).
4. Load the image, adjust as necessary and print.
5. Cut if necessary and apply as desired.

FOR TIPS AND TECHNIQUES VISIT:

www.garmentprinterink.com/pages/transfer-media-tech-tips