

Waterslide 1-Step Media

INSTRUCTIONS FOR BEST RESULTS:

1. Place the transfer sheet into the appropriate tray of the iColor printer.
 - ⚠ The glossy side of this media is the print side.
 - iColor 500 / 600: Print side face up in Multipurpose Tray
 - iColor 550 / 540 / 800: Print side face down in the Multipurpose Tray
2. Printer Settings:
 - iColor 500 / 600 - Set media weight to 'Ultra Heavy 1' and media type to 'Transparency'
 - iColor 550 / 540 / 800 - Set paper type to 'Thick to 220g'
 - Page size should be 'Letter';
 - ⚠ Specific print modes and sizes for this media are available when using the iColor ProRIP software. Listed as AquaClear.
 - ⚠ DO NOT set the job to mirror print.
3. If using the iColor TransferRIP or ProRIP Software, add 200% - 300% white underprint if applying to clear or dark surfaces.
 - Completely black images do not require a white underprint, and it is suggested to print in rich black (CMYK) or composite black (CMY) for best results.
4. Print the image.
5. Cut out the desired image as closely as possible
6. Dip the image in water for approximately 60 seconds.
 - ⚠ The paper will roll up once it gets wet; this is normal.
7. Remove from the water and hold the image between your thumb and pointer finger.
 - Move your fingers in an opposite motion to remove the liner slightly from the top of the image
8. Affix the top of the image to the substrate where the liner was removed.
 - Hold the image on the substrate at the point of contact and slowly pull the liner away in one smooth motion.
9. Align the image on the substrate as desired
 - Brush it with your finger or a piece of plastic to remove any creases or air bubbles.
10. Use a towel to remove any excess water and let dry for at least three hours. May require 12-24 hours to dry completely.

FOR TIPS AND TECHNIQUES VISIT:

www.garmentprinterink.com/pages/transfer-media-tech-tips

Garment Printer Ink | [631-858-0114](tel:631-858-0114) | www.garmentprinterink.com