

MotionGrey

# Assembly Instruction - Ergo2 Series Pro

## SCREW ACCESSORIES

S1

Bracket & Motor Screw (M8x16) **x14**

S2

Wood Screw (M4x14) **x24**

S3

Table Top Connector **x3**

S4

Footer **x4**

S5

Cable Hook **x3**

S6

3mm Allen Key **x1**

S7

6mm Allen Key **x1**

S8

Foot Base Screw (M8) **x8**

S9

Wire Hook **x4**

## PARTS ACCESSORIES

A

Central Bracket **x2**

B

Right Side Frame with Motor **x1**

C

Left Side Frame with Motor **x1**

D

Short Foot Base **x2**

E

Table Top **x1**

F


Motor Cover **x2**

G

Motor Cable **x1**

H

Power Cord **x1**

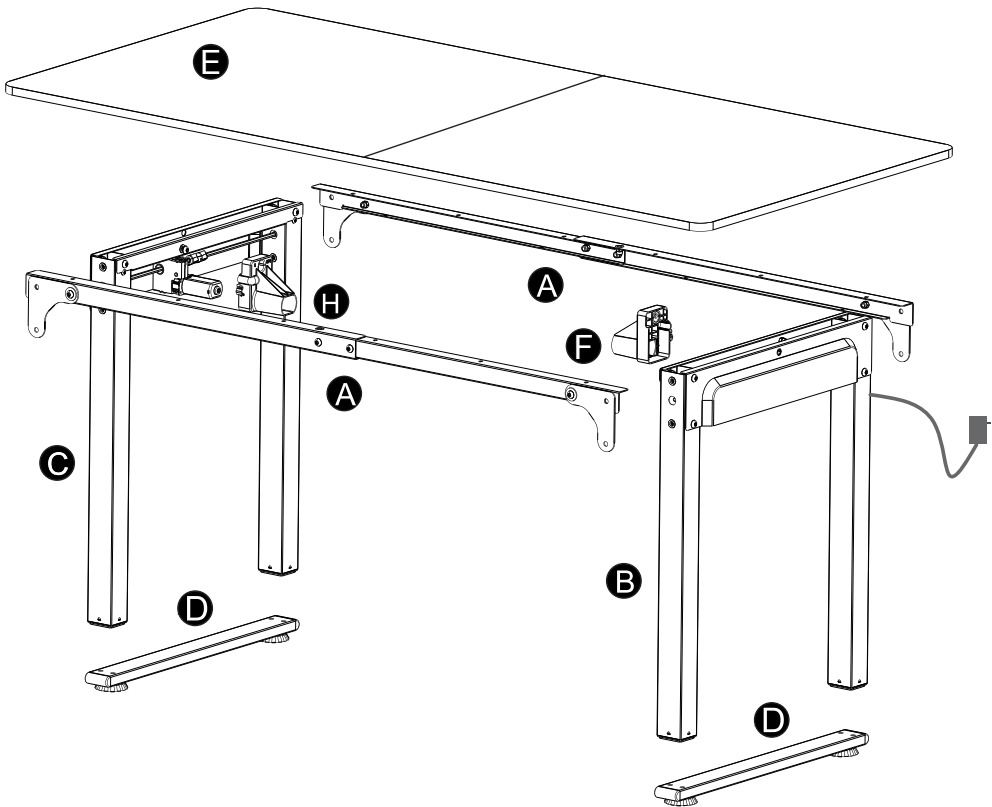

## STEP 1

Ax2

S1x2

x2

## STEP 2

B

C

Dx2

S8x4

S8x4

S8x8

S7x1

## STEP 3

Fx2

S1x1


B/C x1

1


2

3


## STEP 4

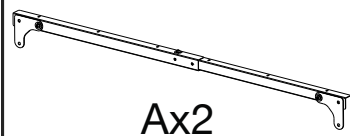

Ax2

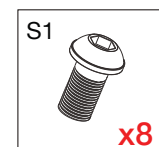


x8

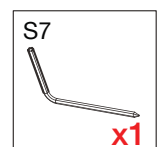


x1




Please ensure that the table legs are aligned vertically with the connecting rod. Afterward, tighten all the screws.

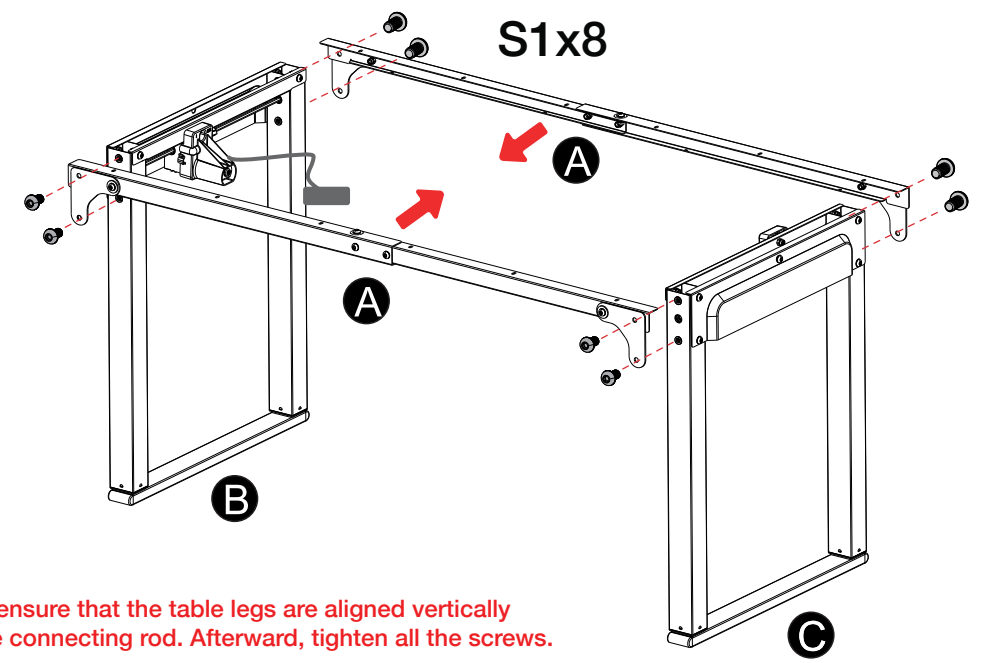


## STEP 5

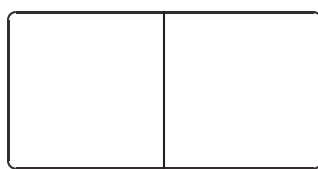


E

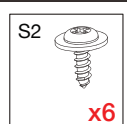

x6

 


x3

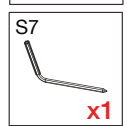


x1



Make sure the two boards are aligned seamlessly, and then tighten the screws securely.

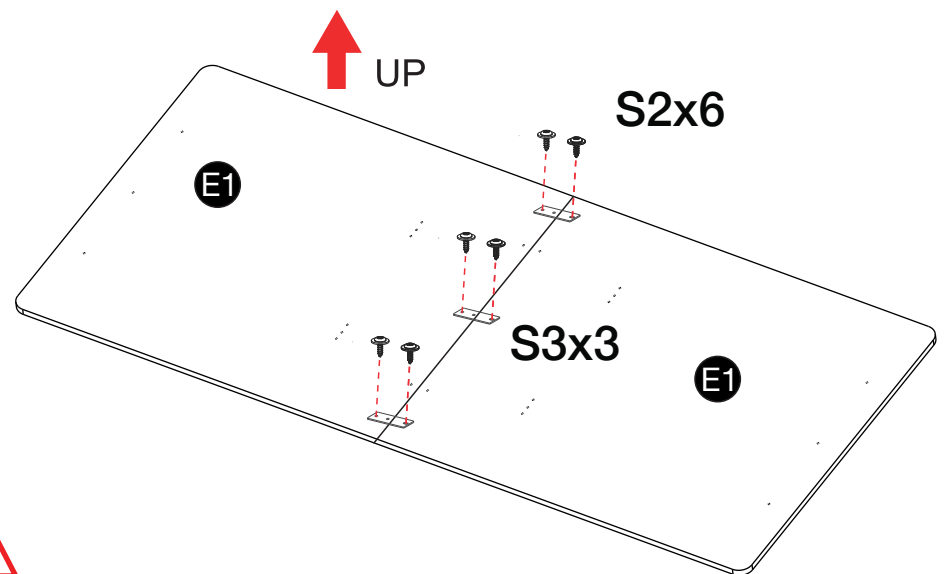


## STEP 6

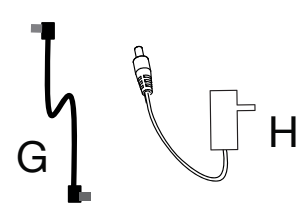


G

 
H




S9x4

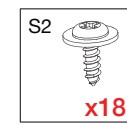


x18

 


x1

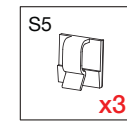



x3

 

x4

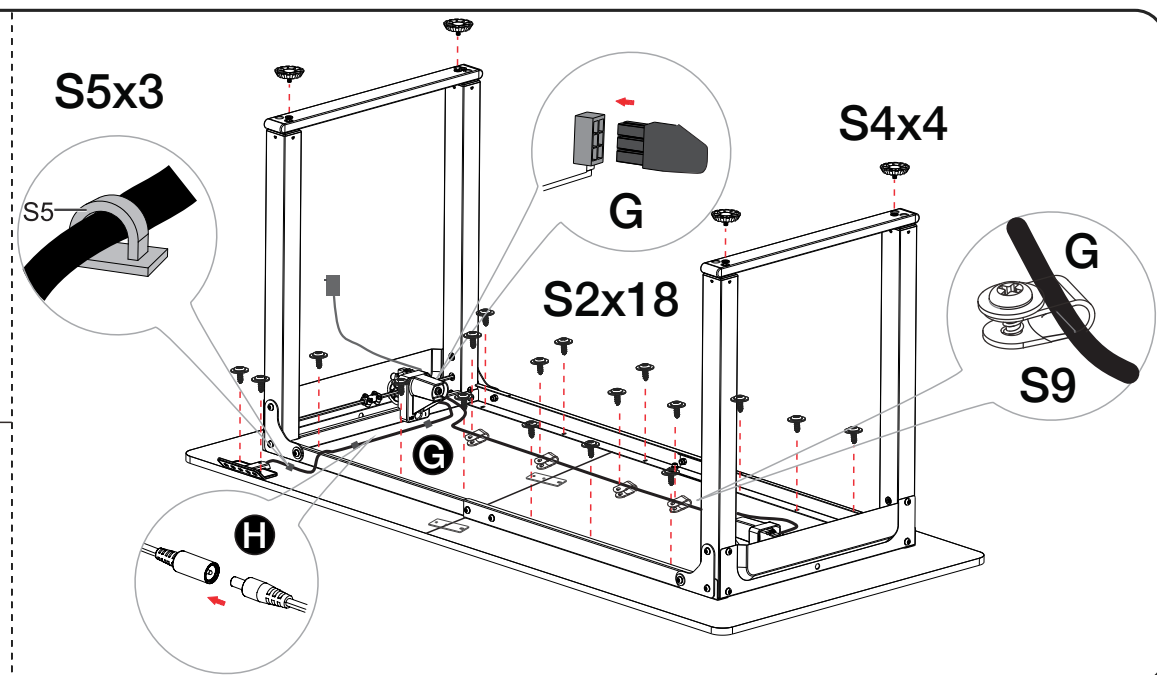


## STEP 7

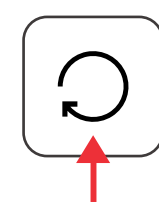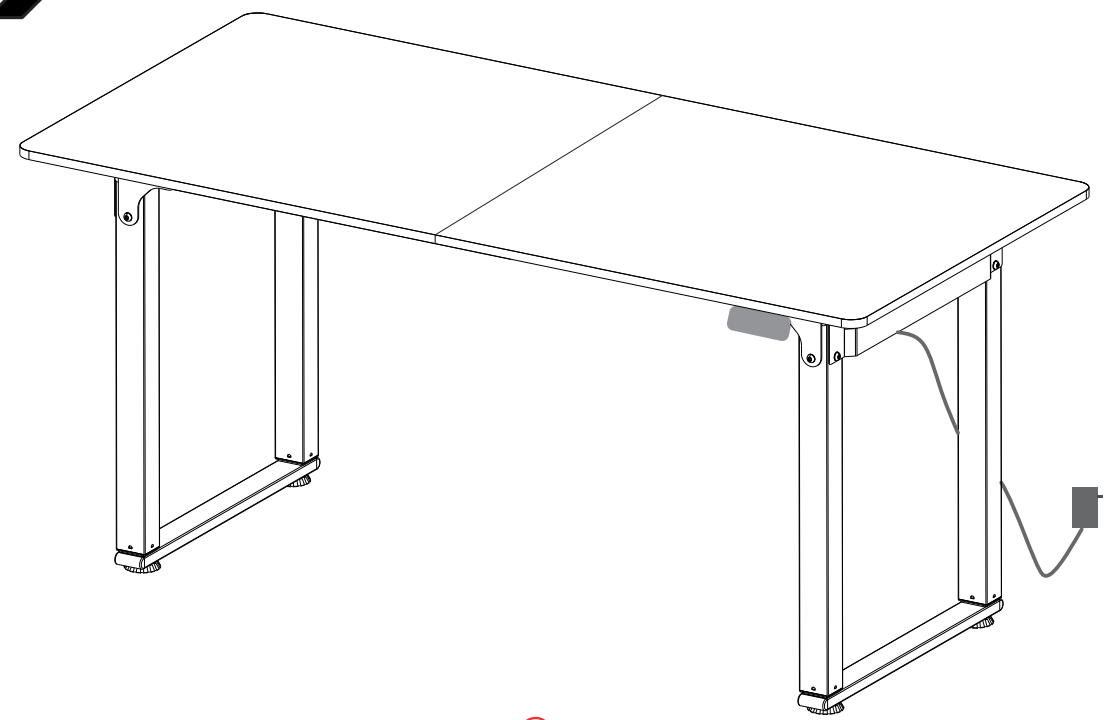

After the table is installed, press the  button.

The table will go down to the lowest position, pause for 5 seconds, then go up to the highest position. The desk will then go back to the original position, confirming a successful installation.


## User Manual

 

UP: Up Button



DOWN: Down Button

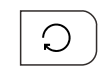

Reset Button







STAND: Saving Button 1


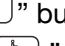
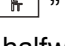
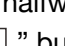


SIT: Saving Button 2


### UP and DOWN Button Operation

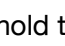- Press the “” button to raise the desk.
- Press the “” button to lower the desk.
- Press and hold the “” or “” button for 3 seconds, then release it, to automatically raise or lower the desk to the highest or lowest position.
- While the desk is raising or lowering, you may press any button to stop the desk.

### Memory Location Operation

- Storage of standing position: Press and hold the “” button for 5 seconds to save the current standing position.
- Storage of sitting position: Press and hold the “” button for 5 seconds to save the current sitting position.
- Standing Memory Position Operation: Press the “” button for the desktop to run automatically to the height of the memory position and press any button to stop halfway.
- Sitting Memory Position Operation: Press the “” button for the desktop to run automatically to the height of the memory position and press any button to stop halfway.

### Reset Operation

- Press and hold the “” button for 5 seconds. The table will descend to the lowest position, Pause for 5 seconds, then rise to the highest position. The desk will then return to the initial position.