





KEEP ME SAFE FOR FUTURE REFERENCE DATE: 29/12/17

#### **PITCHING INSTRUCTIONS**

- Kangri pitches inner first. If you have a footprint now is the time to peg it out. Ensure the ground is free from sharp objects and rocks that may damage your groundsheet.
- 2. Lay the inner tent out on the ground and peg it out.

Introducing your new Kangri tent. A roomy 2 person (or cosy 3 person), 4 pole geodesic mountain tent with an excellent strength-to-weight ratio. Think of it as your personal fortress to shield you from the worst weather the mountains can throw at you, that is also light enough to carry.

#### **IMPORTANT:**

Thank you for purchasing the Alpkit Kangri. Please curtail your excitement and do not use this product until you have read, understood, and complied with all the instructions and warnings contained within this manual, even if you are a bloke. Signed Date

- Assemble all poles and thread them through the colour coded pole sleeves and insert one end of each pole into the eyelets at the pegout points (1). It does not matter which of the eyelets the poles go into.
- 4. Erect the inner by carefully pushing into the sleeves from the other end, long gold poles first, then the shorter grey poles.



#### WARNING

- This tent is **NOT** fireproof and will burn in seconds if exposed to flame or excessive heat.
- Do not cook in your tent.
- Do not place hot appliances close to the walls or roof of your tent, observe safety warnings for any appliances and do not allow children to play near them.
- Keep exits of tent free from obstructions and woodland creatures, they will steal your food.
- Maintain adequate ventilation at all times, death by suffocation is possible. Always store any cheesy socks in vestibules or outside tent.
- Anchor your tent carefully at all times: the use of tent pegs is recommended, anchors are very heavy.
- Choose your campsite wisely, be aware of the possibility of falling rocks and trees, lightning, flash floods, avalanches and airborne whales.
- Using an additional footprint provides extra protection if pitching on rough or boggy ground.



If this product does not meet your expectations upon delivery or does not live up to the demands placed upon it, please return it within 3 years of purchase for repair, replacement or refund. If the problem is our fault then we will do this to your satisfaction, if it's your fault we will help the best we can!

#### Email: support@alpkit.com

Phone: 01773 417007

Website: www.alpkit.com/support

- 5. Clip the plastic pole clips on the inner canopy to the poles (2).
- 6. Place the tent outer over the top of the inner canopy, connect the outer tent to pegout points using the buckles.
- Fig 2

# 7. Tension the tent by adjusting the buckles at the pegout points (3), peg and tension the guylines as required.

8. Happy camping!



#### **CARE AND MAINTENANCE**

- Iclean and dry tent thoroughly after each use.
- Never use a washing machine or tumble dryer to clean your tent. Car washes are also frowned upon.
- Spot clean with mild detergent and warm water.
- Air dry only.
- Pack tent carefully to avoid punctures.
- Avoid prolonged UV exposure.

#### **FIELD REPAIRS**

- If you are unlucky enough to rip your tent, duct tape or StormSure Tough Tape will do the trick for field repairs.
- If a pole breaks, use a splint or pole sleeve as a temporary repair.

Drop us a line when you get home and we will help you to find a cost effective way of getting it fixed.

### SPECIFICATION

Sleeps: 2 - 3 Outer: 40D Si/PU Nylon ripstop Inner: 20D Nylon ripstop Floor: 70D/210T Poles: 4 poles, DAC NSL Featherlite Green Pegs: 20 pegs; Aluminium Buckles: Duraflex Zips: YKK

## Happy camping!

#### **CONTINUE THE JOURNEY**

When your partnership with this product is over please don't leave it hidden in a cupboard, never to see another adventure. Wash it, pass it on, give to a friend, sell it, donate it to charity, make it into something else or recycle it and let someone else live their dream.



In store service for your kit: alpkit.com/stores



