

**LUCELL**

**USER MANUAL**

**ICB-020, ICB-040**



## Safety Precautions

Safety precautions are to prevent any unexpected risk or damage. Please read before use.



- Be careful when opening and closing door. Finger or objects may get stuck.
- Keep away from children.
- Do not hit edge of safe to avoid injury.



- Safe is heavy. be careful when moving or installing safe to avoid any injury.
- Firmly fix safe to ground when installing. When moving safe, inquire a professional if needed.
- Improper handling of safe can cause damage to floor or table.



- Avoid placing fragile objects, such as ceramic or glass, on safe. They may fall and cause injury.



- Place safe on flat surface. Otherwise, safe door may not close.

## Before Use

- Product may malfunction if any foreign metal substances or moisture enter keypad.
- Do not scratch keypad with any sharp material.
- Do not apply excessive force to keypad.
- Avoid exposure to any chemicals (gasoline, benzene, solvent, acetone, thinner, etc.)
- Avoid direct fire or heat.
- Remove batteries when safe is not used for long time.
- Excessive force to safe handle may cause breakage.
- Safe can be broken into by using cutting or welding tools. Our company is not liable for any stolen items.

## Opening / Closing Door



- 1 Press START button.
  - "-----" will be displayed on screen.
- 2 Input 4~20 digit password.
  - Input factory password "1,2,3,4,5,6" for User 1, "OPeN" will be displayed on screen along with beep sound.



- Press START button to cancel password entry.
- Safe must be opened within 3~4 seconds
- "Err-03" indicates incorrect password.
- 5 consecutive incorrect passwords will sound alarm for 3 minutes. Press START button and enter correct password to stop alarm.

- 3 Pull door open
- 4 Push door close

## Keypad Overview (ICB-020, ICB-040)

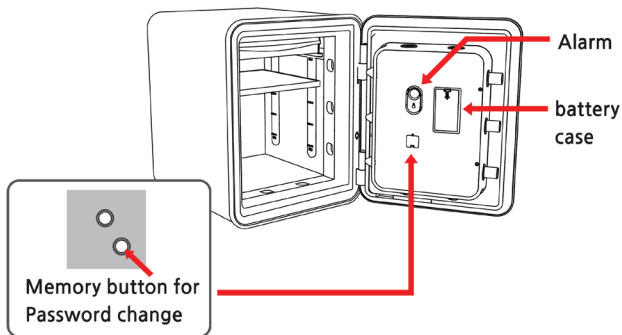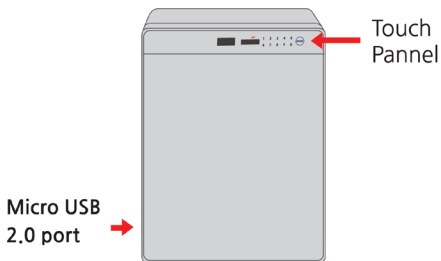

## Keypad Lock Mode

1. Press START for more than 10 seconds until "Act" appears. "Act" message signifies activation of keypad lock mode. Any keypad input will only display "Act."
2. To deactivate keypad lock mode, press START for more than 3 seconds until "dEAct" appears.



**Notice!!** Keypad lock mode will remain despite removal of batteries.

## Security Mode

Press START button twice for security mode to hide password.

## How to use Alarm

1. Use the "ON/OFF" switch on the Alarm to control the Alarm.
2. Use 9V battery for alarm.




## Changing Password

### Attention

After having changed the password, please confirm the safe is properly working before closing the door.

- 1 Enter current password and open door.
- 2 Press memory button located inside door.
  - “-CodE-” will be displayed, then “USEr\_” will be displayed.
- 3 Press 1 then START button.
  - “-----” will be displayed.
- 4 Enter new 4~20 digit password.
  - “AgAin” , then “-----” will be displayed.
- 5 Enter new password again.
  - “USer\_1” will be displayed.
- 6 New password is set.
  - Confirm new password works with door open.

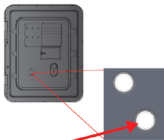

Memory button  
for password change

## Sound Effect ON/OFF

1. Open door and press memory button for 3 seconds. After “beep” message appears, “On-OFF” will be displayed.
2. Press 0 then START for sound ON. Press 1 then START for sound OFF.

## Replacing Batteries

- ▶ Replace batteries immediately when
  - screen displays "Lo\_bAt."
  - safe door fails to open when "OPEn" message appears after password is entered.
  - "good" appears on display along with "beep beep" sound after password is entered.
  - screen fails to turn on after you press START button.
  - touch button is not clear enough
  - there is no response or malfunction

## How To Replace Batteries

- ① When the door can be open
  - Open the battery cover on the backside of the door, then insert batteries with proper direction
- ② When the door cannot be open due to low battery power
  - Micro USB 2.0 port can be used to open the door

Micro USB 2.0 port



### Attention

- After battery replacement, confirm safe is properly working before closing door.
- Use 1.5V alkaline batteries(AA X 6).
- Proper insertion of the batteries is confirmed once screen displays "SAFE" ▶ "\_O..." ▶ "good" message appears and beep is heard.

## Trouble-shooting

Situation	Possible Cause	Measures
No response when START button pressed	• Dead battery	• Replace new batteries
	• Incorrect insertion of batteries	• Confirm correct insertion of batteries
	• Keypad lock mode ON	• Press START for 3 seconds to deactivate keypad lock mode
	• Circuit error	• Contact store where the safe was purchased
Alarm continues ringing and safe does not work	• 5 times wrong password input	• Enter correct password or wait 3 minutes until automatic alarm stops
"Err-03" message appears	• Incorrect password	• Enter correct password
Green light ON, does not open when "OPEN" is displayed	• Low battery	• Replace new batteries
	• Lock equipment error	• Contact store where the safe was purchased
Cannot change password	• Exceeded time limit during password change	• Enter password within 5 seconds
	• Keypad malfunction	• Contact store where the safe was purchased
	• Button error	• Contact store where the safe was purchased
"Lo_bAt" message appears	• Low battery	• Replace new batteries
"Act" message appears	• Keypad lock mode ON	• Press START for 3 seconds to deactivate keypad lock mode
Forgot password		• Contact store where the safe was purchased



The logo for LUCELL, featuring the word "LUCELL" in a white, sans-serif font. The letter "C" is stylized as a circle with a horizontal line through its center, and the "E" has a horizontal line through its center as well. The logo is set against a solid red rectangular background.

[www.lucell.sg](http://www.lucell.sg)

Distributed by:  
**DURO INTERNATIONAL PTE LTD**

Hotline: 6745 6800  
email: [enq@duro.com.sg](mailto:enq@duro.com.sg)