 





OWNER'S MANUAL

Art.155

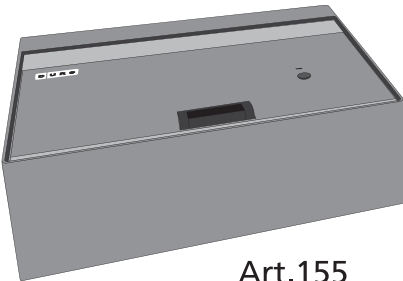

 Art.155

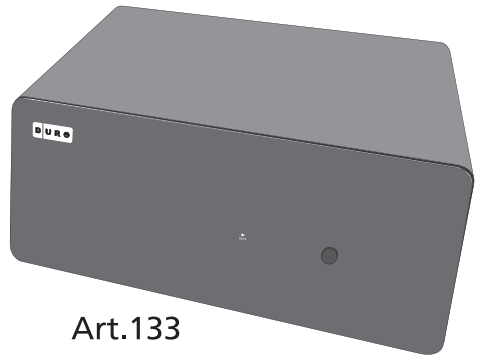

Art.133

<<< IMPORTANT >>>

**DO NOT RETURN SAFE TO THE STORE WHERE IT
WAS PURCHASED.**

If you experience any problems or challenges with
your safe, please contact us. Many issues
can be resolved quickly without
the product being returned.

Hotline: +65 6745 6800

Thank you for purchasing this Duro product.

12 months limited warranty

This product (the "Product") is warranted to the original purchaser for twelve (12) months from the date of purchase to be free of structural and mechanical defects due to faulty material or workmanship. If a structural or mechanical defect occurs during the warranty period, DURO or its designee will repair or replace the defective part(s) of the Product, at its own option.

Warranty Service

Warranty service may be obtained by contacting Duro Sales & Service Centre or your local distributor with your name, eWarranty Acknowledgment, original sales receipt and a description of the problem.

See Duro International Pte Ltd office contact information noted on the back of this Owner's Manual.

eWarranty Registration

To be eligible for warranty coverage, the original purchaser must register the product online at www.duro.com.sg within 14 days from the date of purchase.



WARNING

This product is not intended for the secure storage of all materials. Items such as firearms, other weapons, combustible materials, or medication should NOT be stored in this unit.



WARNING

Your safe is only part of your total security protection.

DURO recommends that you store your safe in closets, offices, bedrooms and any other locations that are convenient for you but out of direct line of sight from prying eyes. The location of the safe does not affect the safe's ability to protect your valuables inside.



WARNING

Batteries

To power the lock, four (4) alkaline AA batteries (**not included**) are required.

 
Note: Non-alkaline and rechargeable batteries **ARE NOT RECOMMENDED**.

Please change your batteries periodically before it leaks. Warranty will be void when battery leakage occurs.

Contents Include:

- Security safe
- Bolt-down screws (4)
- Master Override keys (2)
- Auxiliary Battery Pack
Requires 4 AA Batteries (not included)
- Owner's Manual

Top Panel:

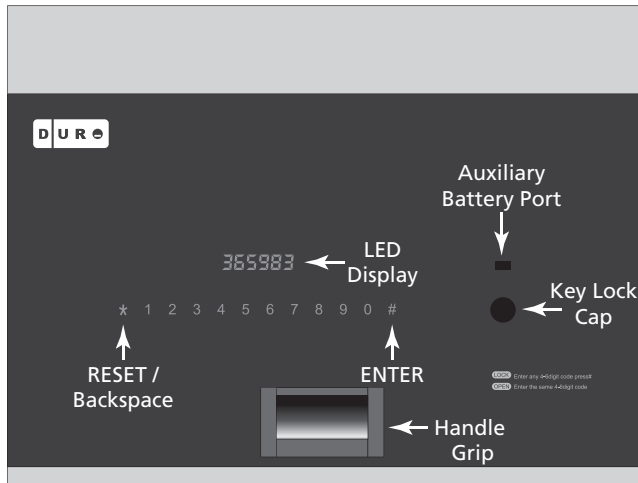

Factory setting code: **1234**

Preparing the safe for first time use

- 1) Install 4 AA batteries into the Auxiliary Battery Pack, remove cover of Auxiliary Battery Port and insert plug.
 - 2) Input Factory Setting Code 1234 The LED Display will show *OPEN* if the code is valid, then *OPERED*. When the code is wrong, it will show *E-CODE* (Error-Code).
 - 3) Lift open the top panel by the Handle Grip.
 - 4) Remove the Auxiliary Battery Pack from the port and re-install the port cover.
 - 5) Install batteries into the Battery Compartment on the underside of the top panel.
- Now you can use the safe without external power supply.

Changing your Personal Code

- 1) Use two or more fingers, touch the number pad to activate the safe. Enter your 4-6 digit Personal Code and press #. The LED Display will show *CLOSE*, then *365983*. It will flash the Personal Code again. The locking bolts will engage at the same time.
- 2) Activate the safe. Enter your 4-6 digit Personal Code. The LED Display will show *OPEN*, then *OPERED*. The locking bolts will dis-engage.



WARNING

Test your code several times before putting valuables inside.
Do not remove Override Key in the UNLOCK position.

Changing your Master Code

Factory Master Code: **888888**

- 1) With the safe in open position, press **888888** and *****. The LED Display will flash *NEW*. You will hear 1 short beeps.
- 2) Enter your new 6 digit Master Code and press **#**. When the LED Display flash *RSRCH*, enter your new Master Code and press **#**. You will hear 2 short beeps. When the LED Display flash *DONE*, you had successfully changed the Master Code.

The Master Code will remain when you change the Personal Code.

You are strongly advised to change this Factory Master Code.

The Master Code can override your Personal Code programmed and open the safe.

To lock your safe

Use two or more fingers, touch the number pad to activate the safe. Enter your 4-6 digit Personal Code and press **#**. The LED Display will show *CLOSE*, then *CLOSEd*. It will flash the Personal Code again. The locking bolts will engage at the same time.

If you press **#** within 10 minutes after opening your safe, the safe will lock with your last entered Personal Code.

If you were to lock your safe 10 minutes after opening, you have to enter your Personal Code and press **#**.

To unlock your safe

- 1) Activate the safe. Enter your 4-6 digit Personal Code. The LED Display will show *OPEN*, then *OPEND*. The locking bolts will dis-engage.

“Hidden Code” mode

Press *** * #** to trigger the mode. The LED Display will flash *ON*.

In this mode, the LED Display will flash *0000* when you enter your Personal Code.

To exit the mode, press *** * #**. The LED Display will flash *OFF*.

“Hold” mode

The safe automatically enters a 30 minutes “Hold” mode after an invalid code has been entered 3 consecutive times. In this mode, the safe will not respond to any key and the LED Display will flash *HOLD30*, where the 30 is the holding time.

After 30 minutes, the safe will return to normal operation.

Override Key

If the electronic lock fails, or you do not have the Personal Code available, you may use the Override Key to open the safe.

 
Remove the Key Lock Cap and insert the Override Key. Turn anti-clockwise and lift up the top panel.

Reprogramming safe lock after Override Key use

- 1) Leave Override Key in unlocked position.
 - 2) Touch the number pad to activate the safe.
 - 3) Press 1234 #. The LED Display will flash **CLOSE**. Turn Override Key clockwise to engage the locking bolts.
 - 4) Activate the safe and press 1234 # to dis-engage the locking bolts. The safe is now returned to normal operation.
- To lock the safe, enter you 4-6 digit Personal Code and press #.

Bolt-Down the safe

- 1) Select a suitable and convenient location for your safe.
- 2) Open your safe and remove the carpet. Secure the safe into position with the Bolt-down Screws through the pre-drilled holes at the bottom of the safe.

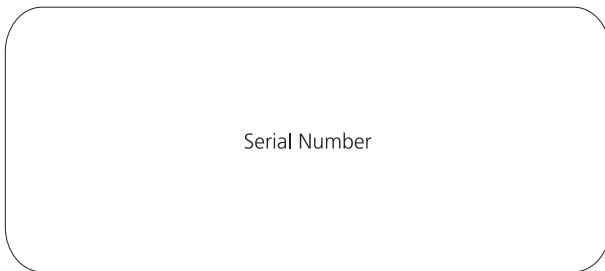

CAUTION

DO NOT keep the override keys inside this safe.

Note:

Bolting / unbolting of the safe is at the expense and discretion of the owner. DURO or your local distributor is not responsible for any cost incurred if the safe is to be moved or replaced.



www.duro.com.sg

Duro International Pte Ltd
61, Kaki Bukit Ave 1,
#04-33, Shun Li Industrial Park,
Singapore 417943.