

GUMMY S

PD 20W + 15W Wireless 10000mAh Power Bank

User Manual

Packaging Contents

- 10000mAh Power Bank
- USB Charging Cable
- User Manual

Appearance & Interface Description

1. Type-C Input / Output
2. USB-A Output
3. Micro USB Input
4. Power Button
5. LED Battery & Status Indicator
6. Wireless Transmission Pad

Specifications

Battery Type	: Lithium Polymer
Capacity	: 10000mAh
Input	: Micro USB : 5V=2A / 9V=2A
	USB-C : 5V=2.8A / 9V=2A
Output	: USB-A (QC 3.0) : 5V=2.4A / 9V=2A / 12V=1.5A
	USB-C (PD 3.0) : 5V=3A / 9V=2.22A / 12V=1.67A
Wireless	: 5W / 7.5W / 10W / 15W
Material	: ABS + PC (V0 Fire-proof)
Net Weight	: 230g
Dimension	: 141 x 69 x 18.5mm (L x W x H)
Recharge Time	: 3.5 to 5 Hours

Operation Instructions

Fully charge your power bank before first use.

 
- Connect the Micro-USB / USB-C charging cable to a USB charger or charging port.
- Connect the other end to the Micro-USB (3) / USB-C (1) input port on the power bank.
- Unplug the power bank when fully charged.

LED Indicator : ○ ○ ○ ● = 25% ○ ● ● ● = 75%
 ○ ○ ● ● = 50% ● ● ● ● = 100%

Note :

Recharge the power bank in 4 hours or less with a USB-C to C cable and an 18W or higher USB-C Wall Charger with Power Delivery.

Charging USB Chargeable Devices By Using GUMMY S Power Bank

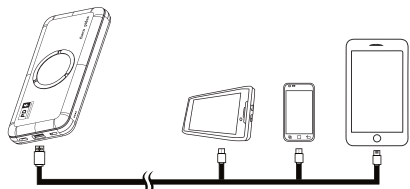


- Plug a USB cable into the USB A (2) or Type C (1) output port on GUMMY S and the other end to the device, the chargeable device will begin charging automatically.

Warranty Terms & Conditions

The product comes with a twelve (12) months factory warranty from the date of purchase. Your product is in perfect condition. In the event where a replacement unit is needed, the owner must provide the original receipt of purchase in order to grant replacement, providing the defect falls under warranty terms. If your unit has been disassembled or repaired without the manufacturer's authorization, the warranty will be immediately voided. The owner is responsible for any fee and charges of delivering the unit back to the agent or manufacturer.

 Charging Wirelessly

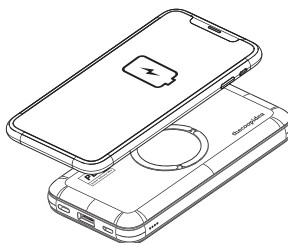

- Place your mobile device on the top of anti-slip circle and press power button, charging will start automatically.

Note :

- * Please make sure your device is placed properly and centered to the receiver of mobile phone.
- ** Please make sure your device support wireless charging functions.

LED Indicator in Wireless Mode :

○ ○ ○ ●
 Red LED = Fast charging mode activated

● ○ ○ ○
 Breathing Green LED = Wireless charging in progress

Precautions

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

- Do not disassemble the product or attempt to fix it.
- Kindly use an original charging cable provided to charge the product.
- Do not attempt to replace any part of this product or battery inside.
- Do not crush, puncture, dispose of in fire, short the contacts or expose the product to water or other liquids.
- Do not connect input and output in reverse.
- Do not store or use the product in a high temperature environment, including intense sunlight or heat.
- Avoid drops, bumps, abrasions and impacts.
- If there is any reason to believe that there is damage to the product, discontinue use immediately.
- If you find that the product is too hot, or is emitting an odor, or is deformed, punctured or exhibits any suspicious or abnormal behavior, discontinue use immediately.
- Always charge this product before extended storage.

Explanation Of Warning Symbols & Notes

 
CE This product is compliant with the CE directive.

This symbol indicates uninsulated material within your unit may cause an electrical shock. For safety, please do not remove product covering.

This symbol indicates direct current.

This symbol indicates attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

Do not dispose of your product with other household waste. Please act according to local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of those products helps prevent potentially negative consequences on the environment and human health.

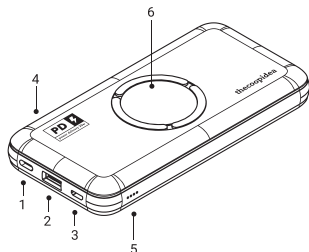

GUMMY S

PD 20W + 15W Wireless 10000mAh 無線移動電源

User Manual

包裝內容

- 10000mAh 移動電源
- USB 充電線
- 用戶指南

外觀及說明

1. Type-C 輸入 / 輸出
2. USB-A 輸出
3. Micro USB 輸入
4. 電源按鈕
5. LED 電池及狀態指示燈
6. 無線傳輸墊

規格

電池類型	: 可充式鋰離子電池
內部電芯容量	: 10000mAh
輸入: Micro USB	: 5V=2A / 9V=2A
USB-C	: 5V=2.8A / 9V=2A
輸出: USB-A (QC 3.0)	: 5V=2.4A / 9V=2A / 12V=1.5A
USB-C (PD 3.0)	: 5V=3A / 9V=2.22A / 12V=1.67A
無線輸出	: 5W / 7.5W / 10W / 15W
主要成份	: 丙烯腈-丁二烯-苯乙烯共聚物
淨重	: 230g
尺寸	: 141 x 69 x 18.5mm (L x W x H)
充電時間	: 3.5 至 5 小時

操作說明

 
首次使用前請為您的行動電源充滿電。

- 將 Micro-USB / USB-C 充電線連接到 USB 充電器或充電口。
- 將另一端連接到移動電源的 Micro-USB (3) / USB-C (1) 輸入口。
- 充滿電後拔出移動電源。

LED 指示燈: ○ ○ ○ ● = 25% ○ ● ● ● = 75%
○ ○ ● ● = 50% ● ● ● ● = 100%

注意: 如要在四小時或更短的時間內為移動電源充滿電, 請使用 USB-C 轉 C 充電線和 18W 或更高功率 USB-C 充電器。

使用 GUMMY S 移動電源 為可 USB 充電設備充電

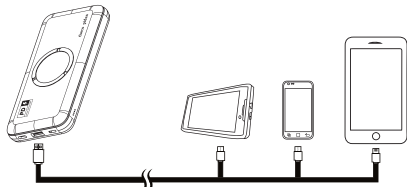


- 將 USB 線插入 GUMMY S 上的 USB A (2) / Type C (1) 輸出口, 另一端插入設備, 可充電設備將自動開始充電。

保固條款與條件

本產品自購買日起隨附十二 (12) 個月原廠保固。本產品狀態良好。故障屬於保固條款範圍的情況下, 若需更換裝置, 擁有人必須提供原廠購買收據才可進行更換。若裝置在未經製造商授權的情況下拆解或修繕, 保固將立即失效。擁有人需自行負責將裝置退回代理或製造商的任何費用。

 使用無線充電

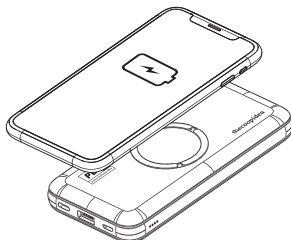

- 將行動裝置放在防滑圈頂部並按下電源按鈕, 無線充電將自動開始。

注意:

* 請確認你的設備正確擺放至中心並對準無線充電輸出位置。

** 請確認你的設備支援無線充電功能。

無線充電模式下的 LED 指示燈:

○ ○ ○ ●
紅色 LED 燈亮起 = 快速充電模式已啓用

● ○ ○ ○
閃爍的綠色 LED 燈 = 正在進行無線充電

警告

在使用本產品之前, 請仔細閱讀所有安全說明和警告。不當使用本產品可能會損壞本產品或附屬產品。

- 請勿拆卸或試圖修理本產品。
- 請使用本產品提供的原裝充電線為產品充電。
- 請勿嘗試更換本產品或內部電池的任何部分。
- 請勿擠壓、刺穿、投入火中、使接觸點短路或將本產品暴露於水或其他液體中。
- 輸入/輸出口不能交換使用。
- 請勿在高溫環境下存放或使用本產品, 包括在強烈的陽光或高溫地方。
- 避免跌下、碰撞、磨損和撞擊。
- 如果發現本產品有損壞, 請立即停止使用。
- 如果您發現本產品過熱、散發異味、變形、破裂或有任何可疑或異常行為, 請立即停止使用。
- 長期存放前, 務必為本產品充電。

警告符號及注意事項說明



本產品符合 CE 指令。



此符號表示裝置內的非絕緣材料可能會導致觸電。為了安全起見, 請勿拆下產品外殼。



此符號表示直流電。



此符號表示請仔細閱讀隨附文字並應注意功能, 以免發生操作及保養問題。



請勿將本產品連同其他家庭廢棄物一起丟棄。請遵守當地電子與電氣產品及電池分類回收的規則。正確丟棄此類產品可避免對環境及人類健康產生潛在的負面影響。