


# thecoopidea

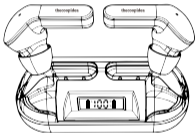

## BEANS X ENC


TRUE WIRELESS EARBUDS

真無線藍牙耳機

### USER MANUAL

### 用戶手冊

# 1. Product Overview

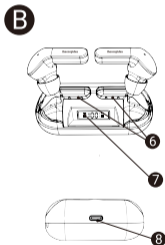

## A. True Wireless Earbuds

1. Multi-function Button
2. LED Light
3. Microphone
4. Sound Output
5. Charging Interface

## B. Charging Case

6. Magnetic Closure
7. LED Light
8. TYPE-C Input

## 2. Inside the Box



1



2





3



4


1. BEANS X ENC Wireless Earbuds
2. Type-C Charging Cable
3. Charging Case
4. User Manual

### 3. How to Charge

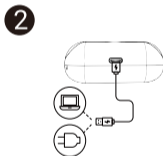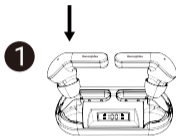


1. Place the earbuds in the charging case.
2. Connect charging case to a USB power supply or device with USB port.

## 4. Battery Status

 


 - When each earbuds charging that the left or right light is running, When fully charged the light off.





- 1.LCD battery capacity (%) is Charging case battery capacity indicated (0-100%).
- 2.When the charging box is charging the earbuds, the capacity % will decrease gradually.
- 3.When used cable to charge the charging box, the power will increase incrementally, and it will display 100% when fully charged.

## 5. How to Wear

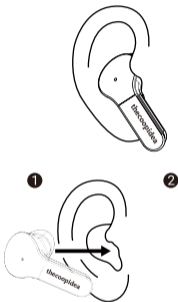


1. Insert the earbud into your ear.
2. Move slightly to get better fit and performance.

## 6. How to Pair (Auto-pairing)

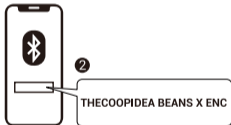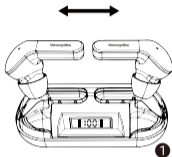

1. Pick up the earbuds from charging case.
2. Turn on Bluetooth of your device.  
Search and connect to Earbuds (first time).

## 7. How to Turn On / Off Earbuds

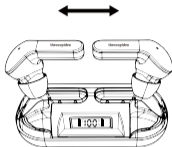

### Auto On / Off

- On – Pick up the earbuds from charging case.
- Off – Place the earbuds back to charging case.






### Manual On / Off



- Off – Hold both button for 5 sec.

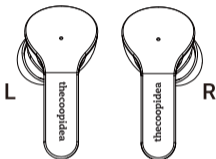



## 8. Call






L or R  × 1 ▶ 

L or R  × 1 ▶ 

L or R  × 2 sec ▶ 

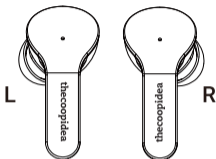

## 9. Music






L or R  × 1 ▶ 

R  2 sec ▶ 







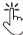



L  2 sec ▶ 

R  × 2 ▶ 

L  × 2 ▶ 

L or R  × 3 ▶ assistant

## 10. Full Control List

				
Pick up call		●	or	●
Hang up		●	or	●
Reject call		■ (L)	or	■ (L)
Play/Pause		●	or	●
Next track				■ (L)
Previous track		■ (L)		
Volume up				●●
Volume down		●●		
Siri/Assistant		●●●	or	●●●
	● TAP	■ HOLD		(L) 2SCE

## 11. Specification

Frequency Range	: 20-20KHZ
Wireless Version	: 5.3
Battery	: 300mAh (Charging Case) 30mAh (Earbuds)
Input	: 5V/1A (Type-C)
Case Dimensions	: 72.4 x 30 x 30 mm (LxWxH)
Case Net Weight	: 34g
Earbuds Net Weight	: 3.5g ( Each Earbuds)
Waterproof Rating	: IPX4
Stand by Time	: 60 Hrs
Playtime	: Up to 6 Hrs Up to 18 Hrs On-The-Go
Recharge Time	: 1 Hrs (Earbuds) 1.5 Hrs (Charging Case)
Driver Size	: 8 mm
Impedance	: 32 $\Omega$
Safety Protections	: Short Circuit, Over Charge, Over Discharge
Support Codex	: SBC, AAC
Support Profile	: HSP/HFP/A2DP/AVRCP
Mic	: Yes




## 12. Warning

- 01 Always store the earbuds in the charging case and safely protected.
- 02 Avoid storing the earbuds in hot or cold environments to prevent depletion of the battery capacity.
- 03 Avoid storing the earbuds for extended periods of time without recharging them.
- 04 If the earbuds or the charging case become dirty, it is recommended to clean them with a soft cloth that has been dampened with clean water.
- 05 The OS version of mobile devices may affect performance of earbuds, it is recommended to update the OS of your mobile device to the latest version before use.
- 06 It is strongly recommended to clean and dry the earbuds properly when it has been exposed to water and sweat.
- 07 Don't put the earbuds into charging case while there is moist. Doing so can cause severe damage to the product. Earbuds charging case is not waterproof.
- 08 Remove from power source once the product is fully charged. Extended periods

of over-charging will decrease battery life.

- 09 Store the product in a dry area. Keep away from fire, heat, moist and erosive materials.
- 10 Do not use rough chemical such as soap or cleanser to scrub the product.
- 11 Do not disassemble, damage, or expose the product to water or fire. Warranty will be voided by any misuse of the product.
- 12 If the battery is expanded or emits smell, stop using the product immediately.

## 1. 產品概述

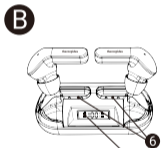

### A. 真無線藍牙耳機

1. 多功能按鈕
2. LED 燈
3. 麥克風
4. 出聲口
5. 充電介面

### B. 充電盒

6. 磁扣
7. LED 燈
8. Type-C 充電輸入孔

## 2. 隨盒附屬內容



1



2



3





4

1. BEANS X ENC 真無線藍牙耳機
2. Type-C 充電線
3. 充電盒
4. 說明書




### 3. 如何充電

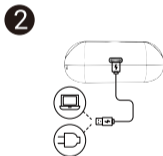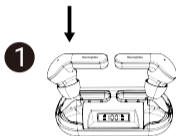



1. 將耳機放在充電盒中。
2. 充電盒連接USB充電線後透過電源供應器或USB孔的充電裝置。

## 4. 電池狀態

 


-  當每個耳塞充電時，左或右指示燈會開始亮起運行，充滿電後，指示燈熄滅。

 

-  1.LCD 畫面的電池容量 (%) 是充電盒電池容量指示 (0-100%)。
- 2.當充電盒在充耳機電量時，電容量(%)會遞減。
- 3.插上電線充充電盒時，電量(%)會遞增，充滿電時會顯示100%

## 5. 如何配戴

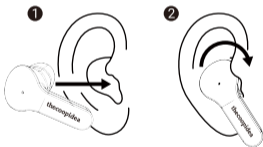


1. 將耳機放進耳窩內
2. 輕輕轉動至舒適的位置。

## 6. 如何配對 (自動配對)



## 7. 如何啟動 / 關閉耳機

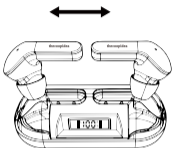

### 自動開 / 關

啟動 — 從充電盒中取出耳機。


關閉 — 將耳塞放回充電盒。





### 手動開/關

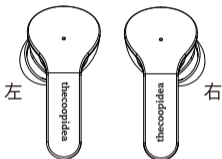

關閉 — 緊按兩個按鈕 5 秒。

## 8. 致電






左 或 右  × 1 ▶ 



左 或 右  × 1 ▶ 

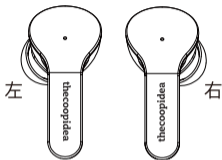左 或 右  × 2 秒 ▶ 



## 9. 音樂





左 或 右  × 1 ▶ 

右  2 sec ▶ 









左  2 sec ▶ 

右  × 2 ▶ 

左  × 2 ▶ 

左 或 右  × 3 ▶ Siri / 語音助理

## 10. 控制清單

	左	thecoopidea	右
接收來電		●	或 ●
掛斷來電		●	或 ●
拒絕來電		■ (長按) ⌚ (按兩秒)	或 ■ (長按) ⌚ (按兩秒)
播放/暫停		●	或 ●
下一曲目			■ (長按) ⌚ (按兩秒)
上一曲目		■ (長按) ⌚ (按兩秒)	
調高音量			● ●
降低音量		● ●	
Siri / 語音助理		● ● ●	或 ● ● ●
<p>● 輕按    ■ 長按    ⌚ 按兩秒</p>			



## 11. 規格

頻寬	: 20–20KHZ
無線版本	: 5.3
電池	: 300mAh (充電盒) 30mAh (耳機)
輸入	: 5V/1A (Type-C)
充電盒尺寸	: 72.4x30x30毫米 (長x寬x高)
充電盒淨重	: 34 克
耳機淨重	: 3.5克
防水等級	: IPX4
待機時間	: 60小時
播放時間	: 長達 6 小時 長達 18 小時續航時間
充電時間	: 1小時 (耳機) 1.5小時 (充電盒)
單元尺寸	: 8 毫米
阻抗	: 32 Ω
安全防護	: 短路保護/過充保護/放電保護
支援編解碼器	: SBC, AAC
支援設定檔	: HSP/HFP/A2DP/AVRCP
麥克風	: 有



## 12. 警告

- 01 請務必將耳機存放在充電盒中並妥善保護。
- 02 請避免將耳機存放在炎熱或寒冷環境中，以防止電池電量快速耗盡。
- 03 請避免長時間存放耳機而不充電。
- 04 如果耳機或充電盒變髒，建議用沾有清水的軟布輕力擦拭。
- 05 行動裝置的作業系統版本可能影響 Candy 2 的性能，建議在使用前，將行動裝置的作業系統更新至最新版本。
- 06 BEANS DON 接觸到水或汗水時，強烈建議以正確方式清潔並擦乾。
- 07 潮濕時，請勿將 BEANS DON 放入充電盒，否則可能導致 BEANS DON 的電子元件或外殼嚴重損壞。BEANS DON 充電盒不防水。
- 08 產品充飽電後，請從電源移除。長時間過度充電將縮短電池壽命。
- 09 請將產品存放在乾燥處，遠離火、熱、濕氣和腐蝕性物質。
- 10 請勿使用肥皂或清潔劑等粗糙的化學品擦洗產品。
- 11 請勿拆解、損壞產品或使其接觸水或火。不適當使用產品將使保養失效。
- 12 如果電池膨脹或散發異味，請立即停止使用產品。

# ***BOLD TO BE FREE DARE TO BE DIFFERENT***

For other languages and  
soft copy of the manual, please scan:



Find out more at:  
**[www.thecoopidea.com](http://www.thecoopidea.com)**



Inspirations from New Zealand. Designed in Hong Kong.  
Produced in China. Copyright 2023 The Coop Idea Ltd.