
thecoopidea Model: CP-PB24

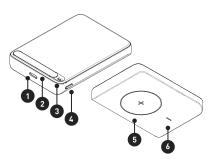

STACK+

5000mAh MAGNETIC WIRELESS POWERBANK

1 USB-C Port (Output & Input)

- 2 Foldable Stand
- LED Indicator
- Power Button
- 6 Wireless Power Transmission Area
- 6 Alignment Magnet

Technical Specifications


Input(USB-C):	5V=2.5A / 9V=2.0A / 12V=1.5A
Output(USB-C):	5V=3.0A / 9V=2.0A / 12V=1.5A
Output(Wireless):	5W / 7.5W / 10W
Capacity:	5000mAh
Battery Type:	Li-Polymer
Dimensions:	86 x 64 x 13mm (L x W x D)
Net Weight:	124g
Material:	ABS

Content

User Manual x 1

STACK+ Powerbank x 1


30cm USB-A To USB-C Cable x 1

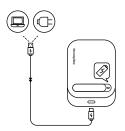

To Charge The Powerbank


Connect the powerbank to power sources or USB port of a computer via Type-C port. LED indicator will be light up if it is charging.

 Once the powerbank is fully charged, please remove the charging cable from the product



To Charge Mobile Devices

 
By Cable: Connect your mobile device to the USB-C port of the powerbank via charging cable press power button to start charging.



Wireless: Press the power button and the green LED will light up. Match the wireless transmission area to the

Match the wireless transmission area to the middle of a MagSafe device's back, the magnet will snap the powerbank on the device.

 Power Indication



Press Once:	White LED on / Green LED flashes 3 times,
	Wireless Charging activated
Battery Low:	White LED flashes 3 times, then goes off
Recharge Mode:	White LED flashes slowly
Fully Charged	White LED stay on
Wireless Charging:	White LED stay on / Green LED flashes

Safety Notes

- · Protect the product from dirt, moisture and overheating and use it in dry rooms only.
- \cdot Do not drop the product and do not expose it to any major shocks
- \cdot Do not operate the product outside the power limits given in the specifications.
- · Do not modify the device in any way. Doing so voids the warranty.
- · Do not continue to operate the device if it becomes visibly damaged.
- Use the product for its intended purpose only.
- \cdot Keep this product, as all electrical products, out of the reach of children.
- $\cdot \ \mathsf{Do} \ \mathsf{not} \ \mathsf{use} \ \mathsf{the} \ \mathsf{product} \ \mathsf{in} \ \mathsf{the} \ \mathsf{immediate} \ \mathsf{vicinity} \ \mathsf{of} \ \mathsf{heaters} \ \mathsf{or} \ \mathsf{other} \ \mathsf{heat} \ \mathsf{sources} \ \mathsf{or} \ \mathsf{in} \ \mathsf{direct} \ \mathsf{sunlight}.$
- · Lay all cables so that they do not pose a tripping hazard.
- · Do not bend or crush the cable.
- \cdot Always pull directly on the plug when disconnecting the cable, never on the cable itself.
- $\cdot \ \mathsf{Dispose} \ \mathsf{of} \ \mathsf{packaging} \ \mathsf{material} \ \mathsf{immediately} \ \mathsf{according} \ \mathsf{to} \ \mathsf{locally} \ \mathsf{applicable} \ \mathsf{regulations}.$
- $\cdot \ \text{When charging batteries built into a device, pay attention to the maximum charging time for the batteries.}$

Warranty Terms & Condition

The product comes with a twelve (12) month factory warranty from the date of purchase. Your product is in perfect condition. In the event where a replacement unit is needed, the owner must provide the original receipt of purchase in order to grant replacement, providing the defect falls under warranty terms. If your unit has been disassembled or repaired without the manufacturer's authorization, the warranty will be immediately voided. The owner is responsible for any fee and charges of delivering the unit back to the agent or manufacturer.

Explanation Of Warning Symbols And Notes

C C This product is compliant with the CE directive.



This symbol indicates uninsulated material within your uniy may cause an electrical shock. For safety, please do not remove product covering.

This symbol indicates direct current.



This symbol indicates attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.




Do not dispose of your product with other household waste. Please act according to local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.





thecoopidea Model: CP-PB24

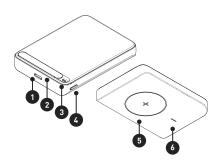

STACK+

5000mAh 磁力無線行動電源

❶ USB-C輸入/輸出口

- 2 可折疊支架
- 電源指示燈
- 4 電源按鈕
- 無線充電輸出區
- ② 定位磁石

內容


STACK+ 行動電源 x 1

30cm USB-A至USB-C電源線 x 1

說明書 x 1


技術規格

輸入(USB-C):	5V=2.5A / 9V=2.0A / 12V=1.5A
USB-C輸出:	5V=3.0A / 9V=2.0A / 12V=1.5A
無線輸出:	5W / 7.5W / 10W
容量:	5000mAh
電池材質:	鋰聚合物
產品尺寸:	86 x 64 x 13mm (L x W x D)
重量:	124g
材質:	ABS

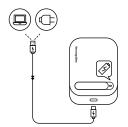


為行動電源充電

將行動電源通過Type-C充電線連接到充電 器或電腦的USB口。 當充電完成時,請將充電線移除。

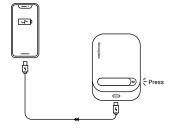

為行動裝置充電

 通過充電線: 將行動裝置連接到行動電源的 USB-C口,按下電源按鈕,開始充電。



為行動裝置充電

無線充電: 按下電源按鈕,綠色LED會亮起。 把無線充電輸出區對準MagSafe裝置的背面 中間位置,產品會自動貼上裝置,開始充電。

LED燈號



按下一次:	白色LED亮起/綠色LED閃亮三次,啓動無	
	線充電功能	
電量不足:	白色LED閃亮三次,然後熄滅	
充電中:	白色LED緩慢閃亮	
充電完成	完成 白色LED直亮起	
無線充電中	白色LED亮起/綠色LED閃亮	

安全注意事項

- ·請勿讓產品接觸灰塵、濕氣並預防過熱,僅可於乾燥的室內使用。
- ·請勿將產品摔落,且勿使其遭受劇烈衝擊。
- :請勿以超出規格限制的功率操作本產品。
- ·請勿以任何方式改裝本裝置,以免保固失效。
- · 若裝置有明顯損壞,請勿繼續操作。
- · 僅可依預定用途使用產品。
- ·如同所有電子產品,請將本產品置於兒童無法觸及之處。
- ·請勿在加熱器或其他熱源附近,或陽光直射處使用本產品。
- ·請將所有纜線平放,以免絆倒受傷。
- 請勿折彎或擠壓縮線。
- · 拔除纜線時,務必持握插頭進行拔除,切勿拉扯纜線。
- · 請立即依當地適用法規棄置包裝材料。
- · 為裝置內建電池充電時,請注意電池的最大充電時間。

警告符號及注意事項說明

(← 本產品符合 CE 指令。

請勿將本產品連同其他家庭廢棄物一起丟 棄。請遵守當地電子與電氣產品及電池分類 回收的規則。正確丟棄此類產品可避免對環 境及人體健康產生潛在的負面影響。

此符號表示設備僅供室內使用。

此符號表示設備具備雙重絕緣系統。

此符號表示裝置內的非絕緣材料可能會導致觸 電。為了安全起見,請勿拆下產品外殼。

此符號表示直流電。

此符號表示請注意應仔細閱讀隨附文字的功能, 以免發生操作及保養問題。

保固條款與條件

本產品自購買日起隨附十二 (12) 個月原廠保固。本產品狀態良好。故障屬於保固條款範圍的情況下,若需更換裝置,擁有人必須提供原購買收據才可進行更換。若裝置在未經製造商授 權的情況下拆解或修繕,保固將立即失效。擁有人需自行負責將裝置退回代理或製造商的任何費用。



