

- ❶ LED Indicator
- ❷ Battery Compartment (AAA Battery)
- ❸ DPI Switcher
- ❹ Battery Compartment (AA Battery)
- ❺ Mini Receiver

Content

- Wireless Keyboard x 1
- Wireless Mouse x 1
- User Manual x 1

TAPPY

 
WIRELESS KEYBOARD & MOUSE SET

Technical Specifications

Battery Type	Keyboard: 2 x AAA Alkaline batteries (Not included) Mouse: 1 x AA Alkaline battery (Not included)
Dimensions	Keyboard: 32 x 15 x 3 cm (L x W x H) Mouse: 11 x 6 x 3.5 cm (L x W x H)
Net Weight	Keyboard: 520g; Mouse: 46g
DPI	1200

Battery Installation


Wireless Mouse: 1 x AA alkaline battery.

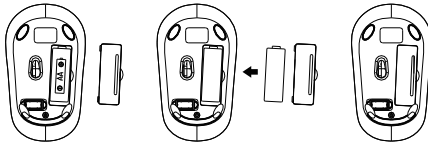

Open the battery cover. Insert 1 AA battery into the battery compartment as picture below. Close the battery cover.


Battery Installation

 Wireless Keyboard: 2 x AAA alkaline battery.

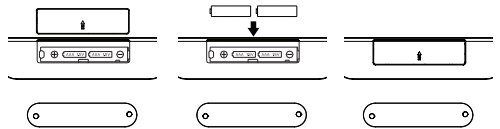

Open the battery cover. Insert 2 AAA battery into the battery compartment as picture below. Close the battery cover.

 Connection

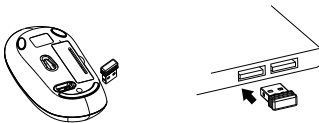

Remove connector from the Wireless Mouse

Plug the connector to the USB port of device that you want to use the product.

Wireless Mouse and Keyboard should be connected automatically.

Energy Saving Mode

The mouse goes into power saving mode when: Connector is not plugged into PC/Laptop, or when the mouse is no longer in use after 30 minutes. With the intelligent power saving mode turned on, the mouse switches to sleep mode after 8 minutes. To get the mouse out of sleep or energy saving mode, use the scroll wheel or click any buttons to resume using the mouse.

Keyboard Hotkeys

FN+ESC = Media Player	FN+F5 = Volume Down	FN+F10 = Mail
FN+F1 = Play/Pause	FN+F6 = Mute	FN+F11 = Key Lock
FN+F2 = Previous Track	FN+F7 = Web Home	FN+F12 = My Computer
FN+F3 = Next Track	FN+F8 = Search	
FN+F4 = Volume Up	FN+F9 = My Favorite	

Safety Notes

- Protect the product from dirt, moisture and overheating and use it in dry rooms only.
- Do not drop the product and do not expose it to any major shocks.
- Do not operate the product outside the power limits given in the specifications.
- Do not modify the device in any way. Doing so voids the warranty.
- Do not continue to operate the device if it becomes visibly damaged.
- Use the product for its intended purpose only.
- Keep this product, as all electrical products, out of the reach of children.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Dispose of packaging material immediately according to locally applicable regulations.

Warranty Terms & Condition

The product comes with a twelve (12) month factory warranty from the date of purchase. Your product is in perfect condition. In the event where a replacement unit is needed, the owner must provide the original receipt of purchase in order to grant replacement, providing the defect falls under warranty terms. If your unit has been disassembled or repaired without the manufacturer's authorization, the warranty will be immediately voided. The owner is responsible for any fee and charges of delivering the unit back to the agent or manufacturer.

 
 
 
 
Explanation Of Warning Symbols And Notes

CE This product is compliant with the CE directive.

RoHS This product is compliant with RoHS (Restriction of Hazardous Substances Directive 2002/95/EC)

⚡ This symbol indicates direct current.

♻️ Do not dispose of your product with other household waste. Please act according to local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

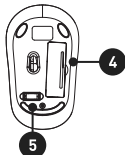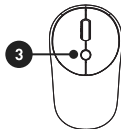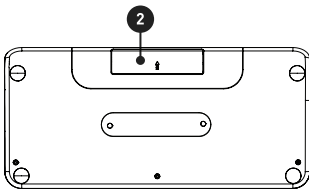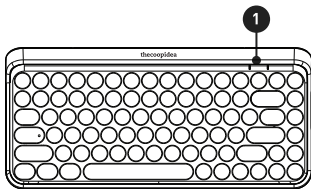

- ① LED指示燈
- ② 電池倉(AAA電池)
- ③ DPI選擇鈕
- ④ 電池倉(AA電池)
- ⑤ 接收器

內容

- 無線鍵盤 x 1
- 無線滑鼠 x 1
- 說明書 x 1

TAPPY

無線鍵盤+無線滑鼠組合

技術規格


電池類型	鍵盤: 2 x AAA 鹼性電池 (不包括) 滑鼠: 1 x AA 鹼性電池 (不包括)
尺寸	鍵盤: 32 x 15 x 3 cm (L x W x H) 滑鼠: 11 x 6 x 3.5 cm (L x W x H)
淨重	鍵盤: 520g; 滑鼠: 46g
DPI	1200

安裝電池

無線滑鼠: 1 x AA 鹼性電池



 打開電池蓋

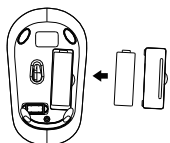


安裝1枚AA電池到電池倉




關上電池蓋

安裝電池

 
無線鍵盤: 2 x AAA 鹼性電池



打開電池蓋

 

安裝2枚AAA電池到電池倉

 


關上電池蓋

連接



 把接收器從無線滑鼠上移除



把接收器插到你想要連接的裝置的USB接口
無線鍵盤和滑鼠會自動連接

省電模式

當接收器沒有插入任何裝置，或開置了30分鐘以上，無線滑鼠會進入省電模式。智能省電模式下，無線滑鼠會在8分鐘後進入睡眠模式。如需離開省電或睡眠模式，請轉動滾輪或按下任一滑鼠鍵。

鍵盤快捷鍵

FN+ESC = 媒體播放器	FN+F5 = 音量減低	FN+F10 = 電郵
FN+F1 = 播放/暫停	FN+F6 = 靜音	FN+F11 = 按鍵鎖
FN+F2 = 上一首	FN+F7 = 網絡首頁	FN+F12 = 我的電腦
FN+F3 = 下一首	FN+F8 = 搜尋	
FN+F4 = 音量加大	FN+F9 = 我的最愛	

安全注意事項

- 請勿讓產品接觸灰塵、濕氣並預防過熱，僅可用於乾燥的室內使用。
- 請勿將產品摔落，且勿使其遭受劇烈衝擊。
- 請勿以超出規格限制的功率操作本產品。
- 請勿以任何方式改裝本裝置，以免保固失效。
- 若裝置有明顯損壞，請勿繼續操作。
- 僅可依預定用途使用產品。
- 如同所有電子產品，請將本產品置於兒童無法觸及之處。
- 請勿在加熱器或其他熱源附近，或陽光直射處使用本產品。
- 請立即依當地適用法規棄置包裝材料。

保固條款與條件

本產品自購買日起隨附十二(12)個月原廠保固。本產品狀態良好，故障屬於保固條款範圍的情況下，若需更換裝置，擁有人必須提供原購買收據才可進行更換。若裝置在未經製造商授權的情況下折解或修繕，保固將立即失效。擁有人需自行負責將裝置退回代運或製造商的任何費用。

警告符號及注意事項說明

本產品符合 CE 指令。

本產品符合有害物質限用指令 (RoHS)

此符號表示直流電。

請勿將本產品連同其他家庭廢棄物一起丟棄。請遵守當地電子與電氣產品及電池分類回收的規則。正確丟棄此類產品可避免對環境及人體健康產生潛在的負面影響。