

GUMMY PRO

10000mAh PD POWERBANK

 
- 1 Power Button
- 2 Micro USB Input
- 3 USB A Output
- 4 Type-C Port (Output & Input)
- 5 LED Indicator Light

Content

- GUMMY PRO PD Powerbank x 1
- 30cm USB-A To USB-C Cable x 1
- User Manual x 1


Technical Specifications

Input	Micro USB 5V = 2A ~ 9V = 2A Type-C 5V = 2.8A ~ 9V = 2A
Output	USB QC3.0 5V = 2.4A / 9V = 2A / 12V = 1.5A Type-C 5V = 3A / 9V = 2.22A / 12V = 1.67A
Capacity	10000mAh
Battery Type	Li-Polymer
Dimensions	136 x 69 x 16mm (L x W x D)
Net Weight	207g
Material	ABS

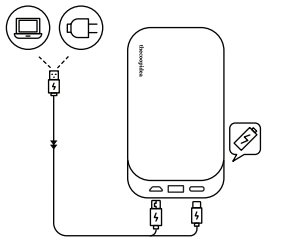


To Charge The Powerbank

 Connect the power bank (via Type C or Micro USB cable) to power sources or USB port of computer.
LED indicator will blink if it is charging.

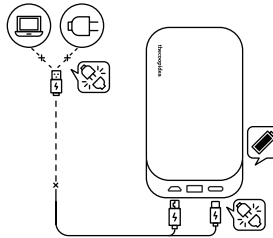


 
Once the power bank is fully charged, please remove the charging cable from the product.

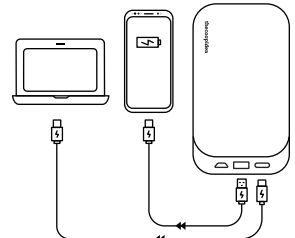

To Charge Your Devices

By Cable: Connect your devices to the USB-A and USB-C port of the power bank (via charging cable) to start charging.

  Power Indication

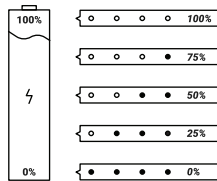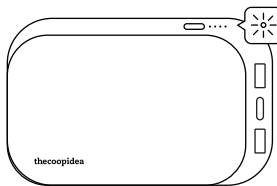

Explanation Of Warning Symbols And Notes

 
- This product is compliant with the CE directive.
- This symbol indicates uninsulated material within your unit may cause an electrical shock. For safety, please do not remove product covering.
- This symbol indicates direct current.
- This symbol indicates attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.
- Do not dispose of your product with other household waste. Please act according to local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Safety Notes

- Protect the product from dirt, moisture and overheating and use it in dry rooms only.
- Do not drop the product and do not expose it to any major shocks.
- Do not operate the product outside the power limits given in the specifications.
- Do not modify the device in any way. Doing so voids the warranty.
- Do not continue to operate the device if it becomes visibly damaged.
- Use the product for its intended purpose only.
- Keep this product, as all electrical products, out of the reach of children.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Lay all cables so that they do not pose a tripping hazard.
- Do not bend or crush the cable.
- Always pull directly on the plug when disconnecting the cable, never on the cable itself.
- Dispose of packaging material immediately according to locally applicable regulations.
- When charging batteries built into a device, pay attention to the maximum charging time for the batteries.

Warranty Terms & Condition

The product comes with a twelve (12) month factory warranty from the date of purchase. Your product is in perfect condition. In the event where a replacement unit is needed, the owner must provide the original receipt of purchase in order to grant replacement, providing the defect falls under warranty terms. If your unit has been disassembled or repaired without the manufacturer's authorization, the warranty will be immediately voided. The owner is responsible for any fee and charges of delivering the unit back to the agent or manufacturer.

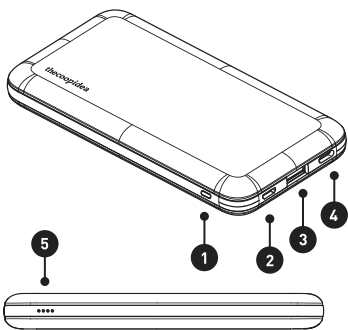

GUMMY PRO

10000mAh PD 行動電源


- ❶ 電源按鍵
- ❷ Micro USB 輸入口
- ❸ USB-A輸出口
- ❹ Type C 輸入 / 輸出
- ❺ LED 指示燈

內容

- GUMMY PRO PD行動電源 x 1
- 30cm USB-A至USB-C電源線 x 1
- 說明書 x 1


技術規格

輸入	Micro USB 5V = 2A ~ 9V = 2A Type-C 5V = 2.8A ~ 9V = 2A
輸出:	USB QC3.0 5V = 2.4A / 9V = 2A / 12V = 1.5A Type-C 5V = 3A / 9V = 2.22A / 12V = 1.67A
容量:	10000mAh
電池材質:	鋰聚合物
產品尺寸:	136 x 69 x 16mm (L x W x D)
重量:	207g
材質:	ABS

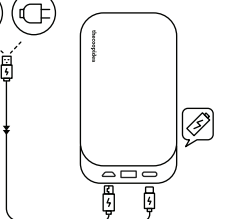 


為行動電源充電

 將行動電源(通過 Type C或Micro USB 充電線) 連接到充電器或電腦的USB口。

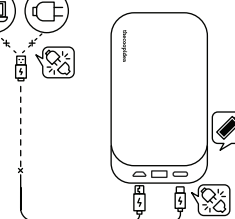



當行動電源充滿電時,請將充電線從產品上移除。

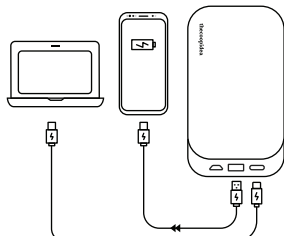 

為行動裝置充電

通過充電線:將行動裝置連接到行動電源的USB-A和C口(通過充電線)開始充電

  LED燈號

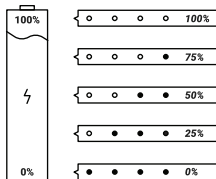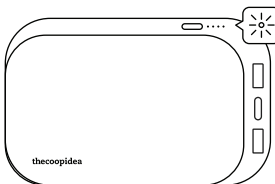

警告符號及注意事項說明

- 本產品符合 CE 指令。
- 請勿將本產品連同其他家庭廢棄物一起去棄。請遵守當地電子與電氣產品及電池分類回收的規則。正確去棄此類產品可避免對環境及人體健康產生潛在的負面影響。
- 此符號表示設備僅供室內使用。
- 此符號表示設備具備雙重絕緣系統。
- 此符號表示裝置內的非絕緣材料可能會導致觸電。為了安全起見,請勿拆下產品外殼。
- 此符號表示直流電。
- 此符號表示請注意應仔細閱讀隨附文字的功能,以免發生操作及保養問題。

安全注意事項

- 請勿讓產品接觸灰塵、濕氣並預防過熱,僅可於乾燥的室內使用。
- 請勿將產品摔落,且勿使其遭受劇烈衝擊。
- 請勿以超出規格限制的功率操作本產品。
- 請勿以任何方式改裝本裝置,以免保固失效。
- 若裝置有明顯損壞,請勿繼續操作。
- 僅可依預定用途使用產品。
- 如同所有電子產品,請將本產品置於兒童無法觸及之處。
- 請勿在加熱器或其他熱源附近,或陽光直射處使用本產品。
- 請將所有纜線平放,以免絆倒受傷。
- 請勿折彎或擠壓纜線。
- 拔除纜線時,務必持握插頭進行拔除,切勿拉扯纜線。
- 請立即依當地適用法規棄置包裝材料。
- 為裝置內建電池充電時,請注意電池的最大充電時間。

保固條款與條件

本產品自購買日起隨附十二(12)個月原廠保固。本產品狀態良好。故僅屬於保固條款範圍的情況下,若需更換裝置,擁有人必須提供原購買收據才可進行更換。若裝置在未經製造商授權的情況下拆解或維修,保固將立即失效。擁有人需自行負責將裝置退回代理或製造商的任何費用。