 
thecoopidea






USER MANUAL

CP-TW04

V19-01

Product Overview

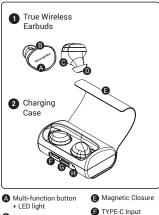


6 USB Output


LED Light

- + LED light
- Microphone
- Charging Interface
- Eartips

Contents

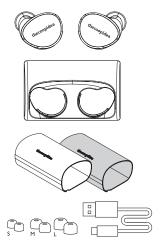


1. Pre-use Setup

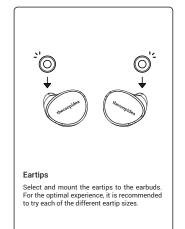

Note: Charge the earbuds for at least 1 hour before use.


2. How To Charge

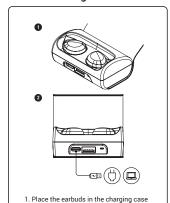


2. Connect charging case to a USB power

supply or device with USB port.

3. Powerbank Output

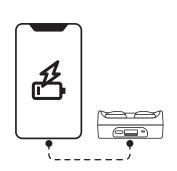


4. How To Wear

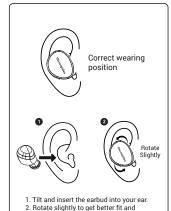


performance.


5. How To Pair (Auto Pairing)

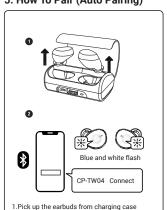

- 2.Turn on bluetooth of your device 2.2 (FIRST TIME) Search and connect to Earbuds

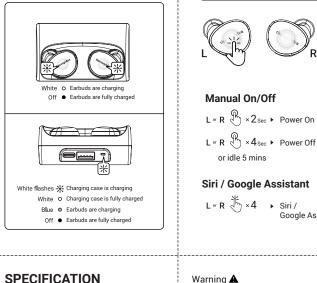



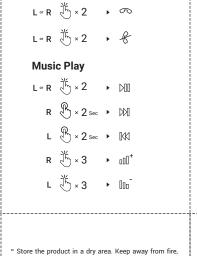

Phone Call L ∘ R 🖔 × 1



Inspirations from New Zealand, Designed in Hong Kong,

Produced in China. Copyright 2019 The Coop Idea Ltd.

8. Earbuds LED Status

SPECIFICATION Frequency Response Bluetooth Version

Bluetooth Range

Stand by Time

Charging Time

Playtime

6 Battery Status

: 20 - 20KHz . 5.1 · 10m

: 100 Hours

: 7 hrs (63hrs On-The-Go) : 3H (Charging Case), 1.5H (Earbuds) : 1300mAh (Charging Case)

Battery Capacity 60mAH (Earbuds) : 68*47*35 mm

Dimensions (Charging Case) Net Weight

Headphone Dimensions: 25*24*19 mm (Earbud)

Headphone Net Weight : 5q (Each)



: 89g (charging case)

safely protected.

decrease battery life.

Avoid storing the earbuds in hot or cold environments to prevent depletion of the battery capacity without recharging them.

"Always store the earbuds in the charging case and

Avoid storing the earbuds for extended periods of time.

7. Touch Control

of If the earbuds or the charging case become dirty, it is

recommended to clean them with a soft cloth that has

been dampened with clean water.

*The OS version of mobile devices may affect performance of earbuds, it is recommended to update the OS of your mobile device to the latest version before "It is strongly recommended to clean and dry the

earbuds properly when it has been exposed to water Don't put the earbuds into charging case while there is

moist, doing so can cause severe damage to the product. Earbuds charging case is not waterproof. *Remove from power source once the product is fully charged. Extended periods of over-charging will

heat, moist and erosive materials. Do not use rough chemical such as soap or cleanser to scrub the product.

" Do not dissemble, damage, or expose the product to

water or fire. Warranty will be voided by any misuse of the product.

" If the battery is expanded or emits smell, stop using the product immediately.