






Quick Start Guide : Additional Functions [AG7i Load Bars]



	Print Long press to display time/date	[PRINT]
	User function set Long press to exchange weight unit Enter function during parameters configuration	[FN]
	Accumulate Long press to retrieve weight records Move digits to right during parameters configuration	[ACCU]
	Tare Long press to display percentage function Increase the digits during configuration	[TARE]
	Zero Decrease the digits during parameters configuration	[ZERO]

Weight Unit Selection

Long press [FN] key for 2 seconds to exchange between **KG** and **LB** (gram and ounce etc)

Activate Livestock Weigh Mode

Please follow these 5 simple steps to change the mode on the system monitor :

1. Press Green “on” button - wait for boot up and count (1-10) to complete so you can view [0.00] on the monitor screen
2. Press the white Function “FN” button once to open up the menu view
3. Screen then Shows : [Aut 00] - press the white “Triangle” button to change setting and then use the yellow “T” (up) button to change the setting on the screen to [Aut 03] then press “FN” key to save.
4. Screen then will display [t 3] - press the white “Triangle” button once to change the setting and then use the yellow “T” (up) button to change the number on the screen to [t 5] then press “FN” key to save.
5. Press the “Green” on button to save the mode settings and exit.

To check you have successfully changed the mode - please complete the following :

Press the “FN” button once and it should display [Aut 3] and then press “FN” button again and it should display [t 5] then press “Green” button to exit

You have now set the device to livestock hold function with a 5 second average weight time and this will smooth out all the weight reading fluctuations.






To restore the system back to original weigh settings complete the following :

Press FN key once - press triangle button to change setting to [Aut 00] - then press FN key to save - and then Green button to exit.

Livestock mode – settings options see below

Operation	Display	Explanation
<i>Push [FN]</i>	[Aut 00]	User functions set
<i>Push [→] and [↑] or [↓] Push [FN]</i>	[Aut 01]	00: Normal weighing mode, manual print/accumulate 01: Normal weighing mode, automatic print/accumulate after the weight stable, auto arrow appears 02: Normal weighing mode, automatic save the weight value, and print/accumulate it after the load < 20d and auto arrow appears 03: Dynamic weighing mode, automatic print/accumulate after the weight <20d, auto arrow appears 04: Peak hold mode, automatic print/accumulate after the weight <20d, auto arrow appears 05: Dynamic weighing mode, manual print/accumulate 06: Peak hold mode, manual print/accumulate 07: Counting mode, manual print/accumulate 08: Positive/Negative weighing, use for testing the tension or compression force 09: Minus weighing mode 10: Automatic tare mode 11: Continuous automatic tare mode Modify the mode and push [FN] to confirm
<i>Push [FN] Push [↑] or [↓] to modify</i>	[Aut 03] [t 3]	If the Aut=03 or 05, there is the time set for dynamic weighing (average weight during the set time) After set done, push [FN] to confirm.
<i>Push [FN]</i>	[0]	Return to weighing mode



	Print Long press to display time/date	[PRINT]
	User function set Long press to exchange weight unit Enter function during parameters configuration	[FN]
	Accumulate Long press to retrieve weight records Move digits to right during parameters configuration	[ACCU]
	Tare Long press to display percentage function Increase the digits during configuration	[TARE]
	Zero Decrease the digits during parameters configuration	[ZERO]

Individual Records – Save and Retrieval

1. Boot up indicator “press green on button”
2. When countdown completed – long press “Triangle” button [Accumulate]
3. When “n” is displayed on screen – press “FN” button and weigh first item
4. Press “Triangle” button to store the weight record and move to the next reading
5. To review saved records – long press Triangle button – should display ‘n’ with number of records ie ‘14’ so [n 14] is what the LCD display will present
6. Then use the arrow buttons to navigate to the reading you want to review (see below list of navigation commands)

Push [→] Push [↑] or [↓] to change	[000008]	Input the serial number of the weight record
Push [FN]	[r 2]	Display the sequence number of that record
Push [PRINT]	[r 3]	Display the next record
Push [ON]	[r 2]	Display the previous record
Push [↑]	[16.06.03]	Display the date of that record
Push [↑]	[14:53:02]	Display the time of that record
Push [↑]	[30.06]	Display the gross weight of that record
Push [↑]	[20.00]	Display the tare weight of that record
Push [↑]	[10.06]	Display the net weight of that record
Push [↑]	[153]	Display the quantity of that record (for counting)
Push [FN]	[27.00]	Push [FN] to return to weighing mode during any data display (date-time-gross weight-tare weight-net weight-quantity)
Push [PRINT]	[16.06.03]	Push [PRINT] to print the record during any data display
Push [→] and [↑] or [↓]	[b 0001]	Push [→] to input the start number of the records (for retrieve)
Push [FN] Push [→] and [↑] or [↓]	[E 0008]	Input the end number of the records (for retrieve)

See the indicator manual for more information and guidance on specific configuration and settings or email info@agriid.com with your support query.