



P1 1 Button - Proffie V2 P1



Warning/Attention:

This product is not intended for use with children under 5 years of age. Do not hit people or animals. Use caution when indoors.

Charge the saber at least 2-4 hours before initial use. Do not OVERCHARGE. Disassembling the saber will void warranty

Features:

- Proffie controller board
- Rechargeable Li-Ion battery
- Smooth Swing
- Multiple soundfonts
- Programmable modes
- SD card included
- Force Effects
- Multi Block
- Background Sound Tracks
- RGB Blade scrolling (Color Tune)
- Mute/Volume Change
- Drag/Melt Tip
- Lock Up/Isolated Flash on Clash

The Proffie board can do it all!

Instructions:

With the Saber OFF:

Turn Saber ON - Press switch once.

Check Battery Level - Press switch three times.

Change font/style next - Hold switch until next font accessed.

Change font/style previous - Hold switch and release to access previous font.

Activate Mute - Single press and hold switch. Saber Will activate MUTED.

Activate Sound - Hold then single press switch. Saber will activate UNMUTED.

Volume Control - Hold switch and Clash to enter/exit Volume Menu. While in Volume Menu, press switch

to increase - Hold/release to decrease. Exit menu at desired volume level.

Activate/Deactivate Sound Track: Press switch twice. Repeat to turn off.

With the Saber ON:

Turn Saber OFF - Hold Switch until shut down.

Lock up/Isolated Flash On Clash - Hold switch and clash. Release to deactivate.

Drag - Hold the switch and strike an object with the blade pointing down.

Melt - Hold the switch down and stab an object.

Blaster deflect - Press switch.

Color Change - Hold switch and sharply twist hilt with the saber pointed down. Saber will get a beep to confirm color change active. Once it beeps release the button. Turn hilt until desired color is present. Hold the switch until it beeps again to confirm the new color.

Lightning Block - Press switch then hold. Release to deactivate.

Force Effects - Hold Switch and twist hilt twice with blade pointing up.

Multi block - Swing saber and hold switch until activated. Now swinging the saber will make the block noise as well. Press switch once to exit multi block mode.

The default configuration is written for a 36" blade and some features may not work with shorter blades.

Join our Facebook group.

www.facebook.com/groups/crimsondawnsabers

For more information and warranty details see our website. If you are experiencing issues email us at service@crimsondawn.com

Check out our YouTube video for charging Proffie sabers without in hilt recharge ports. https://youtu.be/ix_1k9kua4Y



www.CrimsonDawn.com

