



P2

Proffie 2 Button

P2



Warning:

This product is not intended for use with children under 5 years of age. Do not hit people or animals. Use caution when indoors.

Care:

Charge the saber at least 2 hours before initial use.

Do not disassemble the saber. Disassembling the saber will void your warranty.

Features:

- Proffie controller board
- Rechargeable Li-Ion battery
- Smooth Swing
- Multiple soundfonts
- Programmable modes
- SD card included
- Background theme music
- Blade scrolling
- The Proffie board can do it all!

Removable blade: This saber comes with a removable blade.

For more information and warranty details see our website. If you are experiencing issues email us at service@crimsondawn.com

Using the saber

With the blade off:

Changing the sound fonts: Press the AUX button to change the sound font. This will cycle through the sound fonts. To reverse cycle the sound fonts hold the AUX button and press the MAIN button. The sound board comes programmed with multiple unique sound fonts.

Sound Track: To play a musical score hold the MAIN button for 2 seconds and release.

Illuminating the saber: Press the MAIN button 1 time to turn on the saber.

With the saber illuminated:

Turning the saber off: Press the MAIN button 1 time to power down the saber.

Blaster Deflect: Press the AUX button 1 time for blaster deflect.

Lock up: Press and hold either button and clash blade to simulate a saber lock up. Release the button to end the lock.

Force Effect: Press and hold the main button for 1.5 seconds and release for a font unique sound effect.

Color Tuning (Changing colors): Press and hold the AUX button then press the MAIN button and release to begin color tuning. Slowly rotate the hilt to change colors. Press the MAIN button to lock your selected color.

Check out our YouTube video for charging Proffie sabers. https://youtu.be/ix_1k9kua4Y

Join our Facebook group.

www.facebook.com/groups/crimsondawnsabers



www.CrimsonDawn.com

