



V4 Crimson Neocore



Warning/Attention:

This product is not intended for use with children under 5 years of age. Do not hit people or animals. Use caution when indoors.

Charge the saber at least 2-4 hours before initial use. Do not OVERCHARGE. Disassembling the electronics will void warranty

Features:

- Pixel Blade Effects
- Rechargeable Li-Ion battery
- Smooth Swing
- SD card and SD USB reader to modify stock files
- RGB Blade Scrolling Color Change
- Mute/Volume Change
- Melt Tip
- Lock Up/Isolated Flash on Clash
- 6 Active Blade Styles
- 8 Blade Startup Styles
- 46 Sound Fonts

Instructions:

With the Saber OFF:

Activate from deep sleep - Hold switch down until power up sound is made and switch is illuminated.

Turn Saber ON - Tap switch once.

Change Soundfont - Hold switch until next sound font has been selected.

Volume Level Change/Mute - Hold Switch down for one blink. Saber will specify volume level each time. (Volume 11/Volume 5/Mute)

Change Active Blade Effect - Hold switch for two blinks.

Change Blade Startup style - Hold switch for three blinks.

Activate Deep Sleep - Hold switch until switch light is no longer illuminated.

With the Saber ON:

Turn Saber OFF - Hold Switch until shut down.

Lock up/Isolated Flash On Clash - Hold switch and clash.

Melt tip - Hold the switch down for one blink and release. Tap switch again to stop function.

Blaster deflect - Tap switch.

Color Change - Hold switch for two blinks on button. Tap switch to end color scrolling and select color.

The default configuration is written for a 36" blade and some features may not work with shorter blades.

PLEASE NOTE:

This electronics type is equipped with gesture controls. Gesture controls are sometimes complicated to get used to, and are not always guaranteed to function as desired. The instructions for the onboard Gesture Controls are as follows:

Gesture ON/OFF Controls - Thrust upward, downward, inward, outward, or twist hilt
COUNTER-CLOCKWISE/CLOCKWISE

Movie Soundtracks (Only available on certain soundfonts) - Twist hilt
CLOCKWISE/COUNTER-CLOCKWISE while pointing up to activate/deactivate. **Movie Soundtracks will only activate/deactivate while saber is OFF.**

Change Soundfont - Twist hilt
CLOCKWISE/COUNTER-CLOCKWISE while pointing down to go to next soundfont.

Join our Facebook group.

www.facebook.com/groups/crimsondawnsabers

For more information and warranty details see our website. If you are experiencing issues please contact us through the support tab at www.crimsondawn.com



www.CrimsonDawn.com

