



V4

Warning:

This product is not intended for use with children under 5 years of age. Do not hit people or animals. Use caution when indoors.

Care:

Charge the saber at least 2 hours before initial use. The button will pulse while charging. When the button stops pulsing the saber is fully charged.

Do not disassemble the saber. Disassembling the saber will void your warranty.

Features:

Color Tuning: Full RGB color changing blade with unlimited color options.

Sound: The saber comes equipped with a sound driver that detects motion and impact.

Flash on clash: When struck against something with enough force the saber blade will flash to simulate 2 sabers clashing together.

In-hilt recharge: The saber is equipped with USB in hilt recharge. It can be charged with most USB ports. The in-hilt recharge has protection from over voltage, under voltage, and short circuit.

Removable blade: This saber comes with a removable blade.

For more information and warranty details see our website. If your experiencing issues email us at service@crimsondawn.com

Using the saber

Waking the saber:

Press the button for 3 seconds to power on the saber. You should hear a cue and the button should now be lit. Your saber is now "awake".



www.CrimsonDawn.com



V4

With saber awake:

Illuminating the saber: Press the button 1 time to turn on the saber.

Adjusting the volume: Press and hold for 1 second to adjust the volume intensity. Repeat this to select different volumes. There are 3 volumes, mute, soft, and loud.

Blade Effects: Press and hold for 2 seconds to change the light effect. The board comes programed with multiple unique blade effects like pulse and unstable.

Changing the sound fonts: Press and hold for 3 seconds to change the sound font. The sound board comes programmed with multiple unique sound fonts and a mute function.

Hibernation: Press and hold the button for 10 seconds to power your saber down, putting it into hibernation mode. The saber will also power off after idle 10 minutes.

With the saber illuminated:

Turning the saber off: Press and hold the button for 3 seconds to put the saber in sleep mode.

Blaster Deflect: Press the button 1 time for blaster deflect.

Lock up: Press and hold the button for 1 second for "lock up" mode. The next single button press will simulate a lock up. Tap the button 1 time while in a lock up to end it.

Color Tuning (Changing colors): Press and hold the button for 2 seconds for Color Tuning mode. Hold the button to slowly cycle through endless color combinations. Release the button when you are on the desired color. Press the button one time to exit color tuning mode.