
MICRO MOUNT INSTALLATION INSTRUCTIONS




A ENSURE FIREARM IS UNLOADED

A WARNING: Over-torquing fasteners can damage your mount and will not be covered by warranty.

1 If using Front BUIS, thread into place through bottom of FAST Mount so tip of post is generally aligned with Rear BUIS. DO NOT USE THREAD LOCKER.

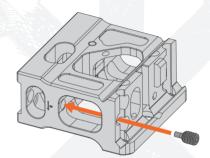

- Remove current mount from optic and set it aside.
- 3 Using supplied mounting screws, install the optic to mount. Tighten the screws in an "X" pattern until they are finger tight. Then give each screw a 1/8 1/4 turn with the supplied wrench. DO NOT EXCEED MANUFACTURER'S RECOMMENDED TORQUE SPEC.

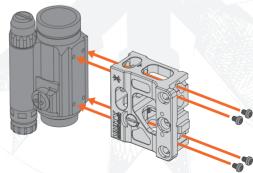

MICRO MOUNT INSTALLATION INSTRUCTIONS



A ENSURE FIREARM IS UNLOADED

If using Standard Rail Grabber Mount clamp, install the mount on weapon. Secure screws using a T25 bit driver. Lightly snug all screws before applying final torque to any. TORQUE TO 35 IN-LBS.

Optional ADM Quick Detach Lever (sold separately) can be installed in place of rail grabber. Installation instructions are included with lever.

> Compatible ADM QD Lever Kit with proprietary nut (see reference image) available exclusively from Unity Tactical and their dealers.

LISING A STANDARD ADMINIT COLL DIDAMAGE YOUR MOUNT AND WILL VOID WARRANTY.










A ENSURE FIREARM IS UNLOADED

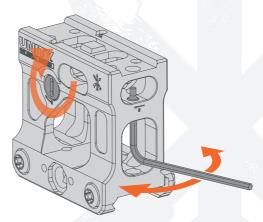

- Windage adjustment of Rear BUIS is 0.5 MOA/click (with a 12.5" Sight Radius). If in conjunction with included Front BUIS, adjustment is 5 MOA/click. Windage adjustment can be made with Aimpoint adjustment tools or flat blade screwdriver.
- Elevation adjustment for Front BUIS is 10 MOA per 1/8" turn (keep in mind this is a 1.27" Sight Radius. So, yeah: Elevation is going to be pretty touchy. This sight is intended as a backup system for weapons that do not have a standard front sight requirement.
- ATTEMPTING TO DISASSEMBLE OR REMOVE THE REAR SIGHT ASSEMBLY IS NOT COVERED UNDER / WILL VOID WARRANTY.