 


Tivax MiTV (3⁵ Portable TV & Media Player)

User Manual



WARNING! IMPORTANT SAFETY INSTRUCTIONS

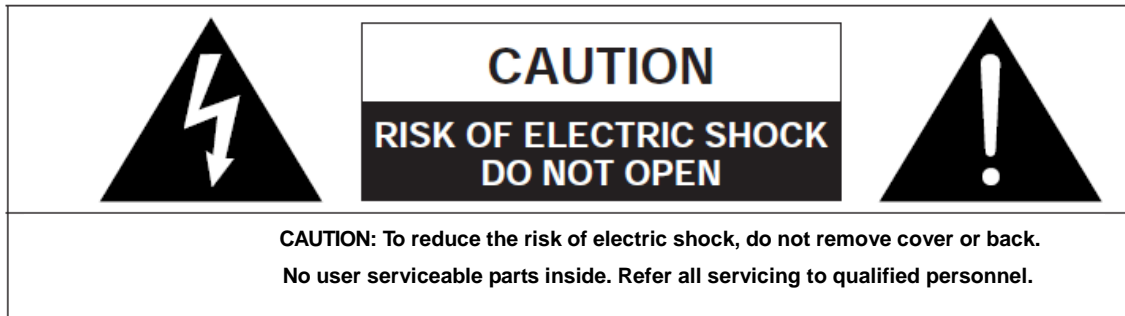

This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

Note to CATV System Installer

This notice is for the CATV system installer to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the ground cable shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Secure Ventilation


The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus, and to protect it from overheating, these slots and openings must never be blocked or covered. There should be at least 2 inches of space from these openings. Never block the openings by placing the MiTV on a bed, sofa, rug or similar surfaces. The MiTV should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

Important Safety Instructions

- 1) Read, follow and keep these instructions.
- 2) Do not expose this apparatus to rain, moisture or place it near water.
- 3) Clean only with dry cloth.
- 4) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5) Do not place near any heat sources such as radiators, stoves, or other apparatus (including amplifiers) that produce heat.
- 6) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding

prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 7) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8) Only use attachments / accessories specified by the manufacturer.
- 9) Unplug this apparatus during lightning storms or when unused for long periods.
- 10) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11) Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your television dealer or local power company.
- 12) Follow all warnings and instructions marked on the MiTV .
- 13) Never push objects of any kind into this MiTV through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the MiTV.
- 14) If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges in the U.S. Section 810-21 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

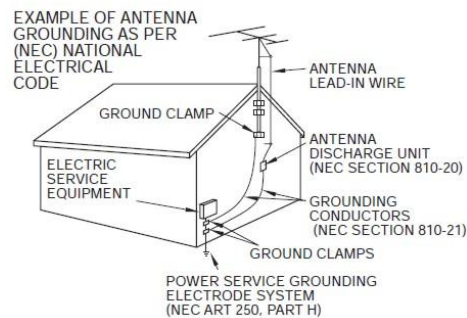

- 15) An outside antenna system should not be located in the vicinity of overhead power lines, other electric light, power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

- 16) Unplug this **MiTV** from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power cord or plug is damaged or frayed.
 - b) If liquid has been spilled into the **MiTV**.
 - c) If the **MiTV** has been exposed to rain or water.
 - d) If the **MiTV** does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the **MiTV** to normal operation.
 - e) If the **MiTV** has been dropped and damaged.
 - f) When the **MiTV** exhibits a distinct change in performance - which indicates a need for service.
- 17) When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards and void the warranty.
- 18) **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING. DO NOT PLACE LIQUID CONTAINERS (FLOWER VASES, CUPS, COSMETICS, ETC.) ABOVE THE SET (INCLUDING ON SHELVES ABOVE, ETC.).**
- 19) **WARNING: SMALL PARTS CAN PRESENT A CHOKING HAZARD IF ACCIDENTALLY SWALLOWED. KEEP SMALL PARTS AWAY FROM YOUNG CHILDREN. DISCARD UNNEEDED SMALL PARTS AND OTHER OBJECTS, INCLUDING PACKAGING MATERIALS AND PLASTIC BAGS/SHEETS TO PREVENT THEM FROM BEING PLAYED WITH BY YOUNG CHILDREN, CREATING THE POTENTIAL RISK OF SUFFOCATION.**
- 20) **CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**
- 21) **CAUTION: DANGER OF EXPLOSION IF BATTERY IN THE TV SET IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.**
- 22) **FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.**

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a TV Broadcast Receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause or receive interference, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the TV antenna.
- Increase the separation between TV and other equipment.
- Connect TV into separate outlet from other equipment.
- Consult dealer or an experienced radio / TV technician for help.

GETTING STARTED (PREPARATION)	6
INTRODUCTION OF YOUR MITV	7
INTRODUCTION.....	7
FEATURES	7
ACCESSORIES	8
RECHARGEABLE LI-ION BATTERY	9
TV INPUT AND OUTPUT PORTS	9
TV CONTROL FUNCTIONS.....	11
MENU OPERATION	13
1. ON SCREEN DISPLAY (OSD) AND MENU.....	13
1.1 Basic Operations.....	13
1.2 DIGITAL TV	13
1.2.1 Setup wizard.....	14
1.2.2 Picture	15
1.2.3 Audio	15
1.2.4 Time	16
1.2.5 Setup.....	16
1.2.6 Channel	16
1.2.7 Return.....	17
1.3 SLIDESHOW	17
1.4 MUSIC.....	18
1.5 VIDEO.....	19
1.6 BROWSING.....	20
1.7. SETTINGS.....	20
1.7.1 Language Settings.....	20
1.7.2 Set Color.....	21
1.7.3 Set Menu.....	21
1.7.4 Set Slideshow.....	21
1.7.5 Info	22
1.7.6 Reset	22
1.7.7 Update Software.....	22
2. MEDIA FORMATS SUPPORTED	23
2.1 SUPPORTED VIDEO FORMATS.....	23
2.2 SUPPORTED AUDIO FORMATS.....	24
2.3 SUPPORTED IMAGE FORMATS.....	26
3. TROUBLESHOOTING	27

MICHLEY/TIVAX LIMITED WARRANTY TO ORIGINAL PURCHASER28

Getting Started (Preparation)

PLACEMENT RECOMMENDATIONS:

Place your **MiTV** on a flat and stable surface, or hold it securely. Avoid dropping it to the ground, as it can cause serious damage to the unit.

CLEANING THE SCREEN:

Pay attention to the following for proper care and cleaning of the **MiTV** screen:


- Do not use glue or adhesive tape on the screen.
- Do not write on the screen.
- Do not allow the screen to come in contact with any sharp objects.
- Do not allow condensation to form on the screen.
- Do not use alcohol, thinner, benzene or other harsh solvents on the screen.
- Do not forcefully rub the screen.

CAUTION:

- Operate only from the power source specified for this apparatus.
- Avoid damaging the AC plug and cord.
- When you are not using this unit for a long period of time, it is recommended that you disconnect the power cord from the main outlet.

POWER CORD CONNECTION:

Connect one end of the 5V/2A power cord to the unit, and the plug to the wall.

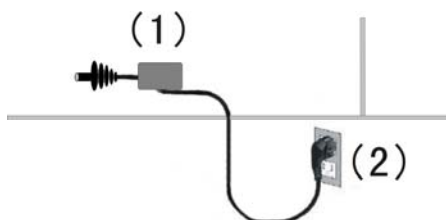

1. Connect the power cord to the **MiTV**.
2. Connect the power cord to the power outlet.

Introduction of Your MiTV

Introduction

Your **MiTV** has a 3.5-inch LCD screen, with MP3, MP4 and digital television function, as well as Slideshow, picture browsing and many other additional entertainment functions. It supports ATSC digital television signals standards. It is very small, easy to carry and with strong ability to receive digital TV signals.

Features

- ✓ ATSC digital signals standards;
- ✓ AVI video format;
- ✓ 3.5-inch LCD screen (320x240);
- ✓ MP3 audio format with synchronized lyrics display;
- ✓ Slideshow with background music;
- ✓ JPG format picture viewing;
- ✓ TF card memory;
- ✓ USB 2.0 high speed interface;
- ✓ Firmware upgradeable;

General Data:

- ✓ AC Input: 100-240 V
- ✓ Input voltage: 5V/2A
- ✓ Power Consumption: max 1.3A (6.5 W, with maximum volume)
- ✓ Size: (LxWxD): 4.33" x 2.95" x 0.68" (110mm*75mm*17.5mm)
- ✓ Net Weight: 6.5 oz.
- ✓ Screen resolution: 320 x 240

Notes:

- **Conserving Battery Life.** Use a switch on the top side of the unit to turn the device on/off in order to conserve battery life.
- **Stationary Position.** For best digital reception, the TV must be stationary. The picture may temporarily freeze if you walk with the TV, or move it too much. This is a characteristic of digital broadcast reception that holds true for any digital TV.

Accessories

The following accessories are available or supplied with your MiTV:

**USB Cable****Power Supply****External Antenna****Car Adapter****Instruction Manual****Lanyard**

The AC/DC power adapter included in the package has AC input : 100~240V · DC Output : 5V / 2A , UL certified..

Rechargeable Li-Ion battery

The TV set comes with a build-in Li-Ion battery.

Notes:

1. The Li-Ion battery is charged approximately 60% before shipped.
2. **Initial Charge.** The battery should be charged for at least 8 hours before first use.
3. After initial charge, it will take about 3 hours for the battery to be fully charged after they are depleted.
4. The lifetime of the Li-Ion battery is about 500 re-charges. Re-charging when fully depleted will extend the life of the battery.

RF input connection

1. Your MiTV can receive free over-the-air digital TV signals through the antenna.
2. Your MiTV has a build-in rod antenna which is good for outdoor use. In order to obtain good reception on digital TV signals, this device has an external antenna connection port.


Figure below shows the rod antenna and external antenna ports located on the top of your TV system.



When the external antenna is used, make sure to retract the rod antenna to avoid possible interference between the two antennas.

TV Input and Output Ports

On the LEFT side of your MiTV, you will see the following I/O ports from top to bottom, as shown in the figure below:

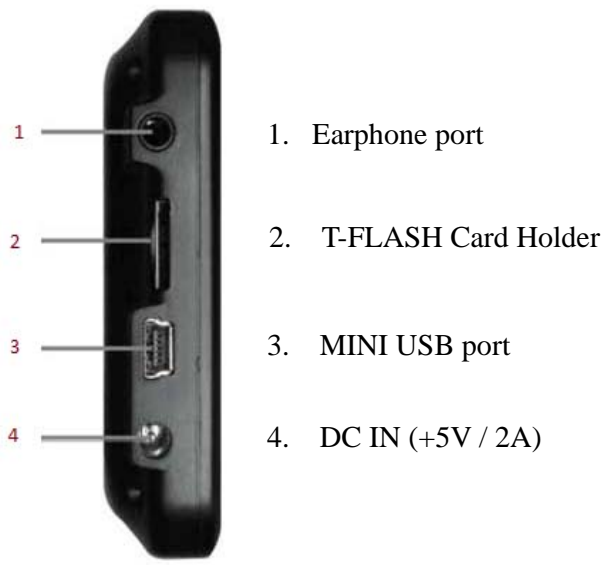

1. Earphone input – insert earphone into this port
2. T-FLASH card holder – insert T-FLASH card for preloaded media file play back. Please refer to section below for details.
3. Mini USB port – connect to your USB storage device for preloaded media file play back. Please refer to section below for details.
4. 5V AC/DC power adapter input – insert the AC/DC power adapter (included in your package) to provide power to your MiTV.

On the RIGHT side of your MiTV, you will see the port for lanyard, as shown in the figure below:



5. Lanyard holder

5. Lanyard holder with integrated stand– The stand inserts into the rear rectangular slot opening of the TV, as shown in figures below.



TV Control Functions

Keypad Button Control Functions

You can control TV functions by using the keypad on your TV system. Keys are shown in the figure below.



6	POWER	Power On / Off switch
7	Menu / Return	Press to enter the Menu mode. Also use this key as the return key while in the sub-menu.
8	Channel + / -	Press + to change channel up and press – to change channel down When in the menu mode, these buttons act as “▲” and “▼” navigation keys respectively
9	VOL + / -	Press + to change volume up and press – to change volume down. When in the menu mode, these buttons act as “◀” and “▶” navigation keys respectively.
10	OK	Press to accept current selection

MENU OPERATION

1. On Screen Display (OSD) and Menu

1.1 Basic Operations

OSD and Menu can be controlled by using the following keypad keys:

1. “**O**” button - confirms the OSD menu selection.
2. “**M**” button - calls the Main Menu and display on the screen;
3. “**RETURN**” button – same as the “**M**” button, exits the current menu.
4. “**▼▲**” button – increases / decreases channel number or selects items upward / downward.
5. “**◀▶**” button - – increases / decreases volume or enter sub-menu when cursor is on the current item.

1.2 Digital TV


In main menu, press **◀▶** key to select **DTV**

feature, press “**O**” key to enter DTV menu.

If there is program, it will play interface directly.


Press **▼▲** key to change other channel, and

press **◀▶** adjust the volume.

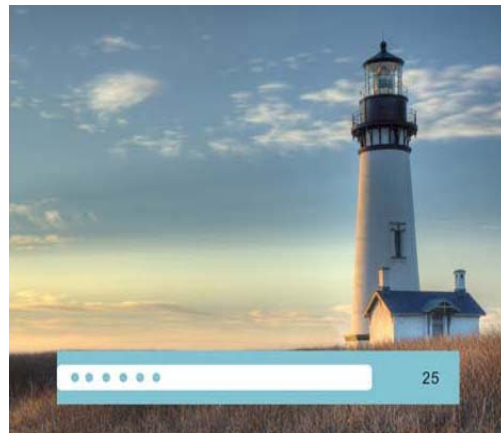


1.2.1 Setup wizard

If this is the first time to enter **DTV** mode, please enter the **Setup Wizard** interface to complete related settings and program searching. To enter Setup Wizard, select factory reset in DTV mode.

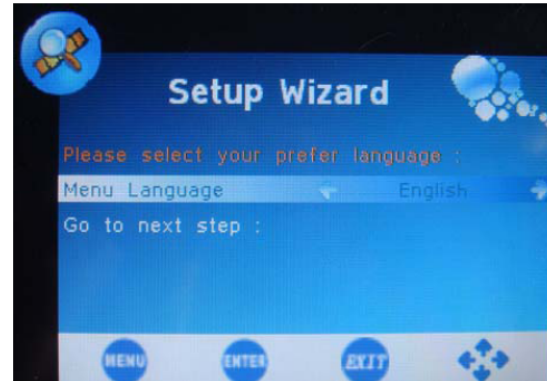


First Step:

Press ◀▶ key to complete language setting, and then go to the next step.

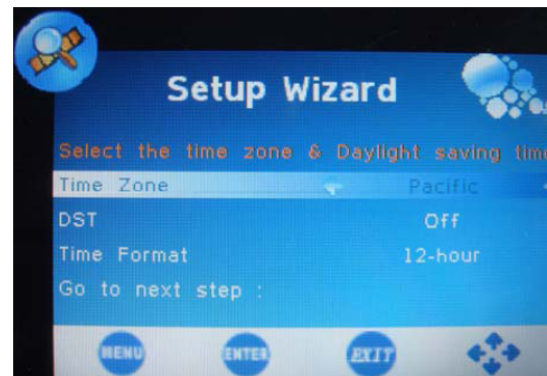

Second Step:


Press ▼▲key to select the **Time Zone**, **DST** and **Time Format**, and press ◀▶ key to move the cursor to complete the setting, and then go to the next step.

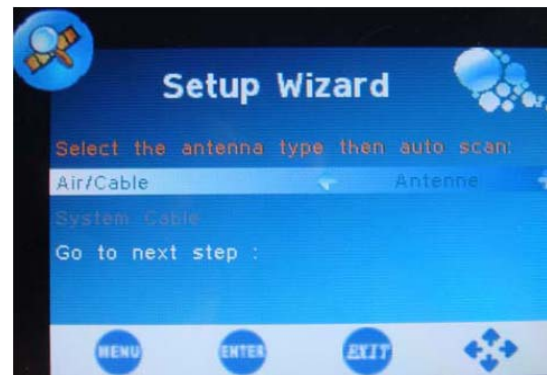

Third Step:

Press ▼▲key to select the searching Style by **Antenna** or **Cable**(if you have cable TV service), and then start the program searching.


The found channels will be show in the **Setup Wizard interface**, and the TV will start playing the first found channel immediately when the channel searching is finished.

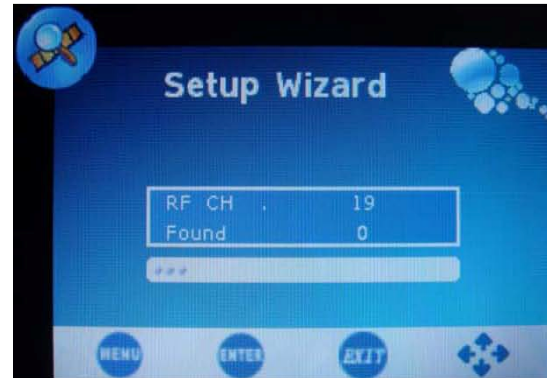

1.2.2 Picture

In the main menu of DTV mode, press ◀▶ key to enter **PICTURE** window.

Adjust settings of **Picture Mode, Contrast, Brightness, Sharpness, Tint, Color, Color Mode, Zoom Mode.**

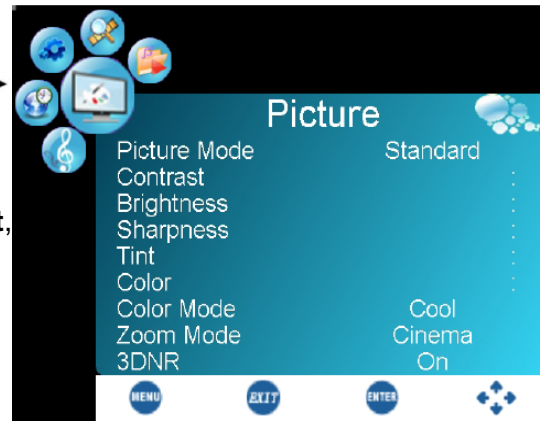

Press ▼▲ to move the cursor. Press “◀▶” key to confirm selection and press “M” key to return.

1.2.3 Audio

In the main menu of **DTV**, Press ▼▲ key to select **Audio**,

Adjust Audio language and Balance.

Press ▼▲ key to choose, press “O” key to confirm, and press “M” key to return.



1.2.4 Time

In the main menu of **DTV**, press **▼▲** Key to select Time function, and press **"M"** key to return.

Use the **◀▶** key to complete the settings of **Sleep Timer**, **Time zone**, **DST**, **Time Format**, **Auto Sync**, **Clock** and so on.

Press **▼▲** to move the cursor, choose, press **"◀▶"** key to confirm selection and press **"M"** key to return.



1.2.5 Setup

The **Setup** of **DTV mode** includes the Settings of **MENU Language**, **Transparent**, **OSD Time Out**, **Closed Caption**, and **Restore Default**.

Press **▼▲** to move the cursor, press **◀▶** key to select, and press **"M"** key to return.



1.2.6 Channel


In the **Channel** interface of **DTV**, check the present interface information and the signal quality.

Choose **Auto Scan** to search for programs again by air or cable.



1.2.7 Return


In the menu of Return, press “◀▶” key to return to the main menu.

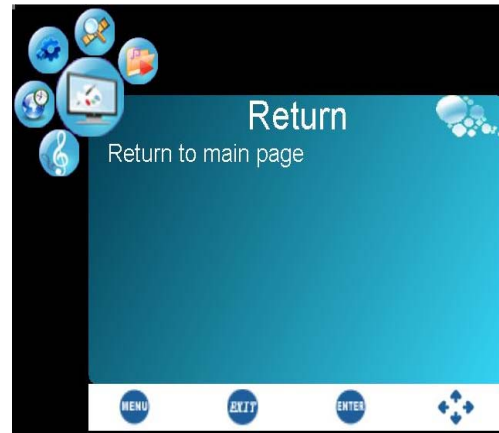






1.3 Slideshow

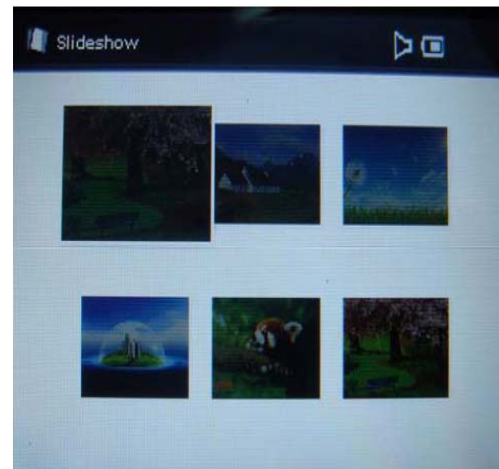In the main menu, press the ◀▶ key to select **Slideshow**, press “O” key to enter Slideshow mode, or press “M” key to return.

In Slideshow mode, available slideshows will be shown.



In the picture browsing interface, press “O” key to display toolbar below, and press the ◀▶ key to select related functions. Press “O” key to confirm. Press “M” key to exit toolbar.

- | | |
|--|--|
|  : Previous |  : Next |
|  : Image 90° flip |  : Play |
|  : VOL +/- | |



1.4 Music

In the main menu, press ◀▶ key to select **MUSIC feature**, press “O” key to confirm, or press “M” key to return.

The music window displays present music files, press ▼▲ to select music, press “O” key to start playing music, and press “M” key to return.

The Music playing interface displays the toolbar below, press ◀▶ key to select related functions.

⏸: Pause

■: Stop

⏮: Previous

⏭: Next



⏪: Fast Backward

⏩: Fast Forward

🔊: VOL+/-

i: File Information

🔄: Loop

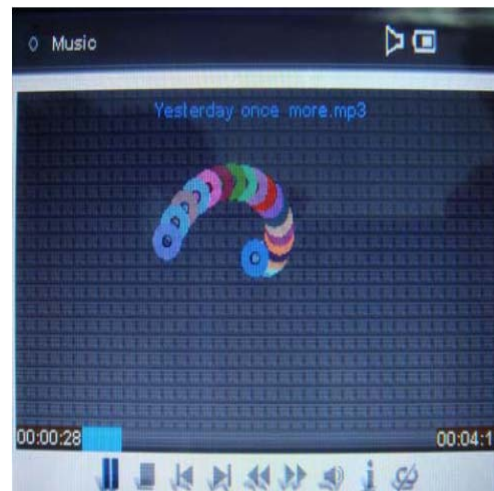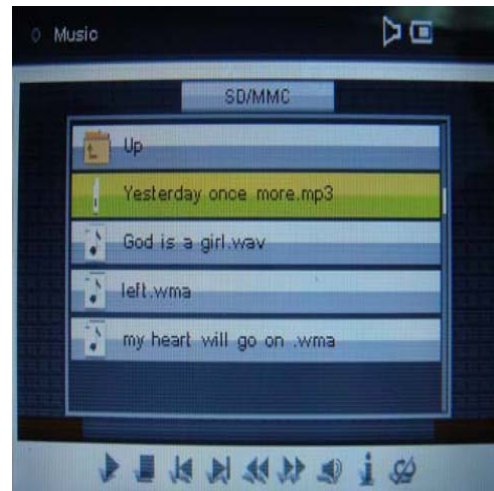


1.5 Video

In the main menu, press the ◀▶ key to select **Video** feature, press “O” key to confirm or press “M” key to return.

The window of **Video** displays all the present movie file list. Press ▼▲ key to select a movie, press “O” key to play the movie, and press “M” to return.

The Movie Playing interface displays the Toolbar below, press ◀▶ key to Select related functions.

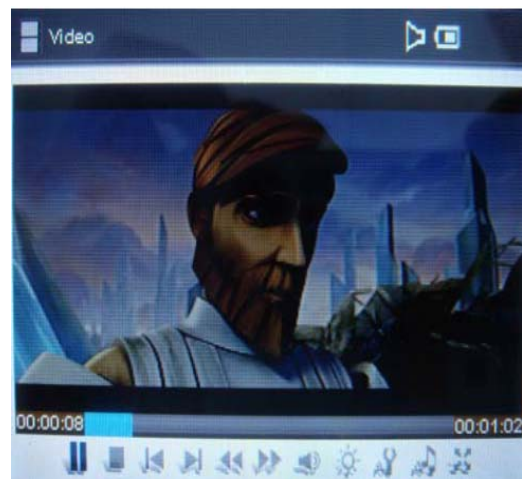


- | | |
|--------------------|-------------------|
| ▶ : Play | ■ : Pause |
| ◀ : Previous | ▶ : Next |
| ◀◀ : Fast Backward | ▶▶ : Fast Forward |
| 🔊 : VOL + / - | ☀ : Brightness |
| 🔧 : Settings | 🎵 : Music |
| ⌘ : Full Screen | |

1.6 Browsing

In the main menu, press ◀▶ key to select Browse function. Press “O” key to enter Browse mode, and press “M” key to return.

In Browse mode, all present pictures, music, video files and folders are displayed. Press “O” key to browse the file, and press “M” key to return.

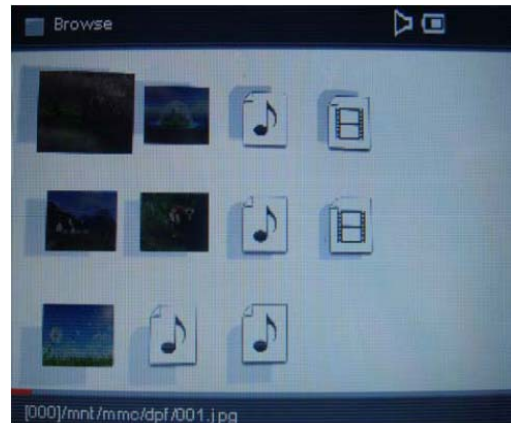


1.7. Settings

In the main menu settings, press ◀▶ key to select **Settings**, press “O” key to complete the settings, and press the “M” key to return.

Settings mode allows you to change **Language, Set Color, Set Menu, Set Slideshow, Info, Reset** and **Update Software**.

 Press ▼▲ key to select, and press “M” key to return.

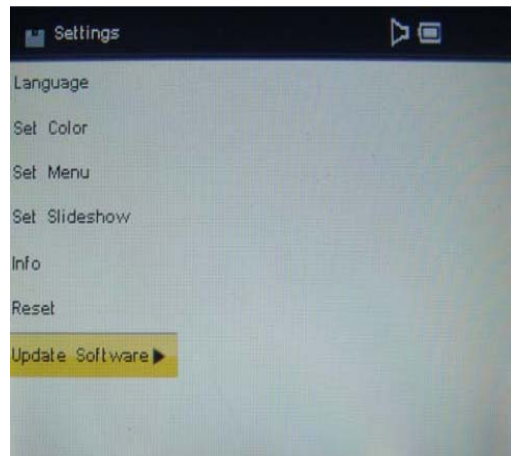


1.7.1 Language Settings

In **Language** Settings, set the language to English, Spanish or French.




1.7.2 Set Color

In the **Color** Settings, adjust **Contrast**, **Brightness**, and **Saturation**.

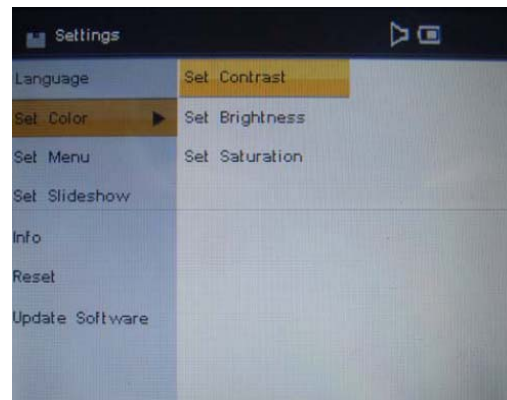

1.7.3 Set Menu


In **Set Menu**, press ▼▲ key to set **Menu Rise Effect** and **Menu view**. **Menu Rise Effect** can be set as Straight Style or Whirl Style. **Menu View** can be set as level view, Overlooking View, or Look up View.

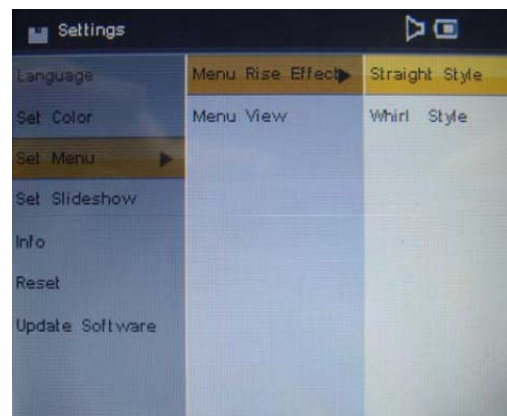

1.7.4 Set Slideshow


In **Set Slideshow**, adjust the Slideshow **Transition Effect**, **Fit to Display** and **Duration**.

Transition Effect includes styles, such as Alpha Fade, Cube, Drop, Flip Bar, **Flip Square**, Magic Cube, Score Board, Swap and Wipes; **Slideshow Duration** includes Fast(1 Sec), Normal (10 Sec), Slow(100 Sec) or OFF.

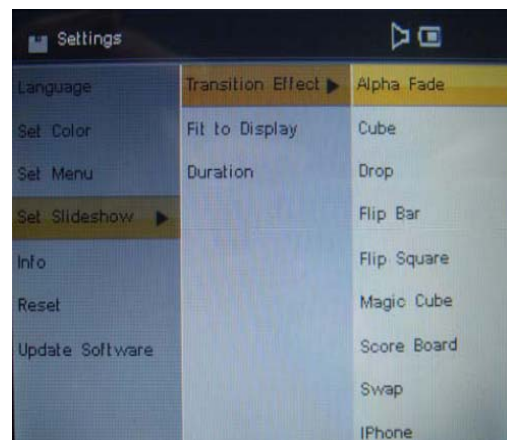


1.7.5 Info

Select Info to display firmware information.

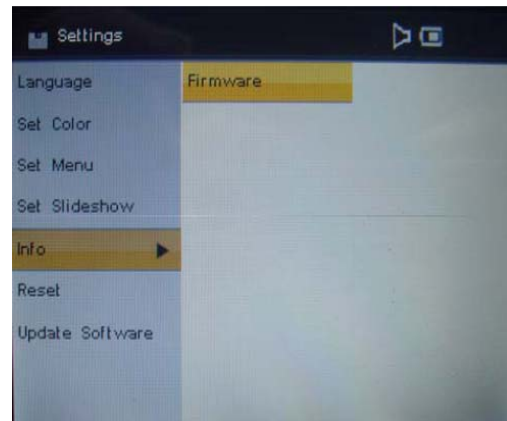


1.7.6 Reset

Select "Reset", and press "Yes" to reset all Settings, or select "No" to exit.

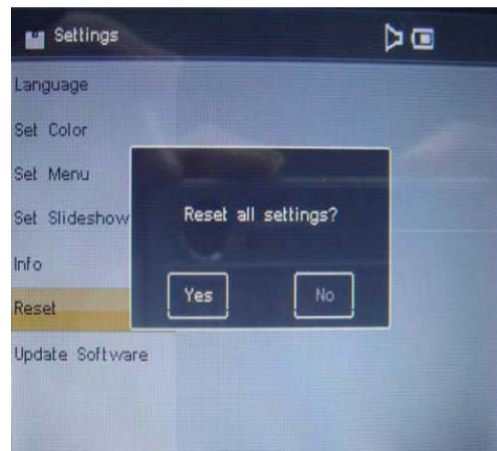

1.7.7 Update Software

This function allows software update with USB or micro SD card. For more detailed Update information, please visit www.tivax.com.

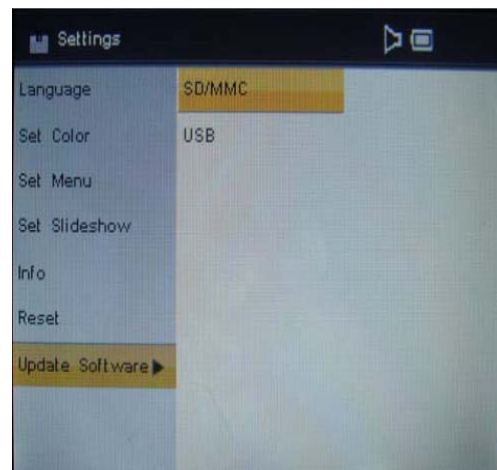

2. Media Formats Supported

MiTV can play back various formats of media files. The tables below list all supported Video and Audio file formats.

2.1 Supported Video Formats

File Extention	Container	Video Decoder	Max. Resolution	Max. frame/sec	Max. Mbit/sec
*.avi	AVI	Divx 3.11	720P	30	20Mbps
		Divx 4.x	720P	30	20Mbps
		Divx 5.1	720P	30	20Mbps
		Xvid	720P	30	20Mbps
		H.264 BP	CIF/QCIF	15/30	500kbps
		H.264 MP	not support		
		H2.64 HP	not support		
		MPEG-4 SP	720P	30	20Mbps
		MPEG-4 ASP	720P	30	20Mbps
		Motion JPEG	720P/VGA	15/30	15Mbps
*.mp4	MP4	H.264 BP	CIF/QCIF	15/30	500kbps
		H.264 MP	not support		
		H2.64 HP	not support		
		MPEG-4 SP	720P	30	20Mbps
		MPEG-4 ASP	720P	30	20Mbps
		Motion JPEG	720P/VGA	15/30	15Mbps
*.mpg *.mpeg *.vob	PS	MPEG1 (Program Stream)	720P	30	20Mbps
		MPEG2 (Program Stream)	720P	30	20Mbps
		MPEG2 (Transport Stream)	not support		
*.ts *.trp .m2ts	TS	MPEG2 (Transport Stream)	not support		

		H264 (Transport Stream)	not support		
*.mov	MOV	H.263	720P	30	20Mbps
		H.264 BP	CIF/QCIF	15/30	500kbps
		H.264 MP	not support		
		H2.64 HP	not support		
		MPEG-4 SP	720P	30	20Mbps
		MPEG-4 ASP	720P	30	20Mbps
*.mkv	MKV	H.264 BP	not support		
		H.264 MP	not support		
		H2.64 HP	not support		
		MPEG-4 SP	not support		
		MPEG-4 ASP	not support		
*.flv	FLV	Sorenson	not support		
*.rm *.rmvb	RMFF	RV8	not support		
		RV9	not support		

Where:

sub-QCIF: 128x96 64 48

QCIF: 176x144 88 72

CIF: 352x288 176 144

DCIF: 528x384

4CIF: 704x576 352 288 (so called D1 type)

16CIF: 1408x1152 704 576

2.2 Supported Audio Formats

File	Bit Rate	Sampling Rate
LPCM(.wav)	16k ~ 384kbps	8k/11.025k/12k/16k/ 22.05k/ 24k/32k/44.1k/48k
MS/IMA ADPCM (.wav)	6k ~ 48kbps	8k/11.025k/12k/16k/ 22.05k/ 24k/32k/44.1k/48k

MP3	MPEG-1 Layer III: 32 40 48 56 64 80 96 112 128 160 192 224 256 320 MPEG-2 layer III: 8 16 24 32 40 48 56 64 80 96 112 128 144 160 MPEG2.5 layer III: 8 16 24 32 40 48 56 64 80 96 112 128 144 160	8k/11.025k/12k/16k/ 22.05k/ 24k/32k/44.1k/48k
MPEG1 Layer1,2	Layer1: 32,64,96,128,160,192,224,256,288 ,320,352,384,416,448 Layer2: 32,48,56, 64, 80, 96,112,128,160,192,224,256,320, 384	8k/11.025k/12k/16k/ 22.05k/ 24k/32k/44.1k/48k
AC3	not support	
AAC	~288kbps per channel	8k/11.025k/12k/16k/ 22.05k /24k/32k/44.1k/48k
HE-AAC	~288kbps per channel	8k/11.025k/12k/16k/ 22.05k/ 24k/32k/44.1k/48k
WMA7	5k ~ 384k bps	8k ~ 48k
WMA8	5k ~ 384k bps	8k ~ 48k
WMA9 STD	5k ~ 384k bps	8k ~ 48k
CDDA (*.wav)	not support	
RealAudio8 LBR	6k ~ 96kbps	8k/11.025k/22.05k/ 44.1k
DD51	not support	
DDPlus	not support	
LPCM7.1	not support	
AMR	4.75, 5.15, 5.9, 6.7, 7.4, 7.95, 10.2 , 12.2 kbps	8K

2.3 Supported Image Formats

This LCD TV supports following image formats:

- ✓ JPEG
- ✓ BMP
- ✓ PNG
- ✓ GIF

It also supports animation GIF files, but it can be displayed alone, not for slide show.

3. Troubleshooting

1. What should I do if I can not receive any channels?

Please check whether there is any ATSC TV signal in the local area, and make sure the antenna is securely connected or the telescoping antenna is fully extracted.

2. What should do I if my TV can not power on?

Press the on/off key again and connect your AC power supply in case the battery is depleted.

Michley/Tivax Limited Warranty to Original Purchaser

Michley/Tivax warrants this product purchased in the USA against defects in material and workmanship under normal use and service for a period of one year from the date of retail purchase by the original end-user purchaser. Products will not be warranted if the serial number is removed or defaced.

This warranty shall be void upon transfer of ownership of this product and is effective only when used in the United States.

Michley/Tivax agrees to repair or replace this unit at no charge, within the warranty period, providing that the product is delivered to Michley/Tivax in its original package or equivalent, fully insured, with all shipping charges prepaid and a return authorization number listed on the outside of the packaging. A handling charge of \$25 will be applied to any returned product found not to be defective. To honor this warranty and to ensure the best service to our customer, Michley/Tivax requires the following information to be included with the returned unit:

- A copy of the original sales invoice from your vendor.
- Model number & serial number of the unit.
- A detailed description of the problem associated electrical connection and hardware.

A Return Authorization number can be requested by sending a fax to 650-963-3585 or an email to support@tivax.com prior to returning the unit.

This warranty contemplates the owner will reasonably maintain this product without alteration, negligent use, misuse, or abuse. Furthermore, any unauthorized alteration of this device without written approval by Michley/Tivax will void any warranty and the owner's right to operate this device.

This warranty presented above is exclusive and in lieu of all other expressed or implied warranties. Any warranty applicable to this product is limited to the period described above. In no event will Michley/Tivax be liable for any special, incidental, or consequential damage, loss of revenue, or cost of replacement goods resulting from the use of malfunction of this product to the equipment system on which it is used. This warranty gives specific legal rights and you may have other rights that vary from state to state.

Michley Electronics Inc. / Tivax
530 Showers Dr., Suite #7-204
Mountain View, CA 94040
Tel. 1-888-33-Tivax (1-888-338-4829)
Fax. 1-650-963-3585
Web. www.tivax.com



General Information: info@tivax.com 1-888-33-Tivax (1-888-338-4829)

Customer Support: support@tivax.com

www.tivax.com