

2. Adjusting the front handle

 


WARNING:
Remove the battery from string trimmer before performing adjustments.

- While grip the adjustment button (J) on front handle (C) tightly and turn it with downward direction (See fig.12), push the front handle down until the desired angle is set. Then release the adjustment button on front handle.



- There are 5 angles for you to choose the preferred one. Note: there's a downward arrow marked on this handle. You can follow the direction of the arrow to adjust the angle (See fig.13).

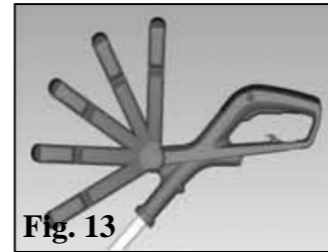

3. Adjusting the angle of motor housing



WARNING:
Remove the battery from string trimmer before performing adjustments.

- While firmly holding the main handle in one hand and one foot step on the top of the motor housing, push back and forth the shaft to adjust the motor housing (4 positions-0° ,30° ,60° ,90°) (See fig.14).



4. Adjusting the motor housing angle for trimmer or lawn edging



WARNING:
Remove the battery from string trimmer before performing adjustments.

The SF8A201 is designed to offer both trimming and edging function. To switch from trimming to edging, you press the edger function switch (D)on the tool, and firmly holding the telescopic shaft (K) in one hand and turn to left.(See fig.15)



SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to **PAXCESS AUTHORIZED SERVICE CENTER** for repair. When servicing, use only identical replacement parts.



WARNING: To avoid serious personal injury, do not attempt to use this product until you have read this Owner's Manual thoroughly and understand it completely. If you do not understand the warnings and instructions in this Owner's Manual, do not use this product. Call the Toll-free Helpline (US) (877)-756-8666 for assistance.







WARNING:
The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full-face shield. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1



SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watts	Power
min	Minutes	Time
	Safety Alert	Precautions that involve your safety.
	Read the user's manual	To reduce the risk of injury, user must read and understand user's manual before using this product.
	Eye protection	Wear eye protection when operating this equipment.
	Wet conditions alert	Do not expose to rain or use in damp locations.

	Long hair	Failure to keep long hair away from moving parts could result in personal injury.
	Loose clothing	Failure to keep loose clothing away from moving parts could result in personal injury.
	Keep Bystanders away	Keep all bystanders at least 50 ft. away.
	Electric shock alert	Beware of electric shock hazard.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS



WARNING: Read and thoroughly understand all instructions and safety information before operating this string trimmer. Failure to do so may cause serious injury or death. Do not allow anyone to operate this string trimmer who has not read this manual. A string trimmer can be dangerous if assembled or used improperly. Do not operate this string trimmer if you have doubts or questions concerning safe operation. Call our customer service department at (US) (877)-756-8666 to address these concerns.

STARTING/STOPPING THE STRING TRIMMER

- Install the battery pack. (Refer to Installing the battery pack)
- Depress the lock off button (1) and at the same time press the trigger switch (2). (See fig. 10)
- To switch off, release the trigger switch.



Fig. 10



WARNING:

The tool runs for approximately 4 seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.

TRIMMING FUNCTION

1. Adjusting the cutting height



WARNING:

Do not try to adjust the telescopic shaft while the trimming line is rotating.

- Unscrew the lock sleeve on the shaft and adjust the length of the telescopic shaft (K) to the most comfortable operation position (See fig.11). Turn the lock sleeve anti-clockwise to lock the shaft in position.



Fig. 11

CONNECTING AND REMOVING BATTERY

IMPORTANT!

The battery pack is not charged when it is purchased. Before using the string trimmer for the first time, place the battery pack in the battery charger and charge. Make sure to read all safety precautions, and follow the instructions in the battery charger section.

 
To remove the battery pack

- Press the battery release button (1), Slide the battery pack backward, and then pull or lift the battery out of the tool (See fig.8).



To install the battery pack

To install the battery pack into the bottom of the handle, align the rails of the battery pack with the rails in the handle and push the battery into the handle. To connect the battery, slide the battery pack fully forward. Until the latch locks into place (See fig.9).

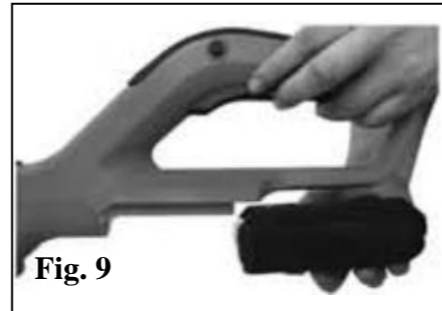


WARNING:

Follow these instructions in order to avoid injury and to reduce the risk of electric shock or fire:

- Replace the battery pack or the charger immediately if the battery case or charger cord is damaged.
- Verify that the battery pack is removed before inspecting, adjusting, or performing maintenance on any part of the string trimmer.
- Read, understand, and follow the instructions.

 KNOWING YOUR STRING TRIMMER

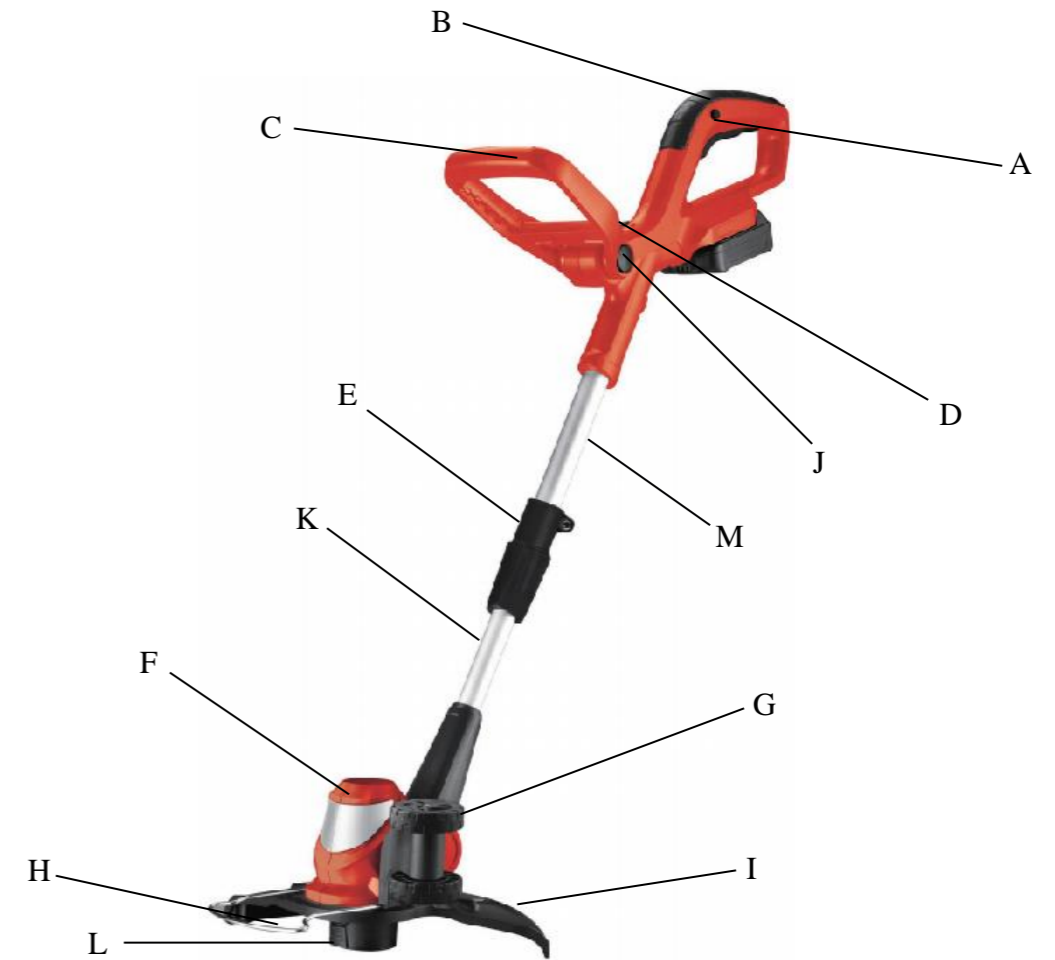

A	Trigger switch	B	Lock off button
C	Front handle	D	Edger function switch
E	Shaft adjustment lock	F	Motor housing
G	Edger wheel	H	Protector
I	Guard	J	Front handle adjustment button
K	Telescopic shaft	L	Spool and line assembly
M	Upper shaft		

Unpacking

Unpack the string trimmer and all its parts, and compare against the list below. Do not discard the carton or any packaging materials. Please call (US) (877)-756-8666 or E-mail us at service@paxcess.com if any parts are damaged or missing.

Including:

String trimmer	Guard
20V Battery and Charger	Protector
User manual	Screw x1 pcs
Edger wheel	Hex key

ASSEMBLY INSTRUCTIONS



WARNING:

Do not use this product if any parts on the packing list are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.



WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.



WARNING:

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.



WARNING:

Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

 
 


WARNING:

Before assembly, make sure that the tool is switched off and the battery has been removed.


CONNECTING THE UPPER SHAFT AND THE TELESCOPIC SHAFT

- Align the shaft ends with each other and assemble the upper shaft (M) into the telescopic shaft (K) (See fig.1).
- Then use the hex key to tighten the bolt (See fig.2).

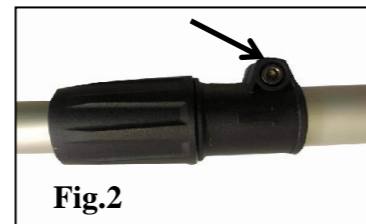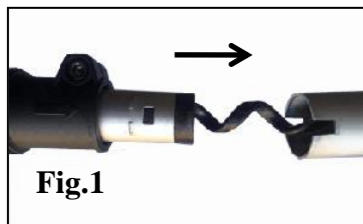

INSTALLING THE PROTECTOR AND GUARD AND THE EDGING WHEEL

 - Insert the protector (H) into the black slot on motor housing (F). Note the direction of the protector. When in trimming mode, the protector should be like fig.3.

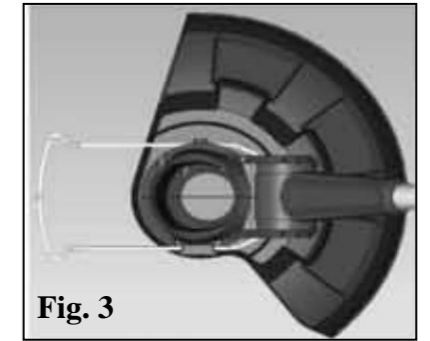

- Locate the guard (I) onto the motor housing and turn it a bit to make sure it engages into the slots on the motor housing (F). Note to follow the arrow direction on the guard (I) (See fig.4)



- Fix the guard onto the motor housing with the screw out of the package (See fig.5)



- When in edging mode, the edging wheel (G) needs to be fit on the trimmer. Insert the edging wheel into the black slot piece on the motor housing (F) (See fig.6). Make sure the edging wheel is firmly connecting with slot. And push the protector (H) to make it not protrude (See fig.7).

