

Microwave Toastie Maker

Magic In The Microwave



INSTRUCTION MANUAL



Perfect for sandwiches, toasties, panini's & more!

Thank you for purchasing this unit. Please read these instructions carefully prior to usage. Please keep these instructions safe for future use.

WARNING



TO BE USED for MICROWAVE OVENS ONLY



ALWAYS handle with insulated oven mitts



ALWAYS place in the middle of the turntable



DO NOT immerse in water immediately after use



DO NOT exceed 1000W heat setting



DO NOT use metal utensils on non-stick surface



DO NOT allow use by children or the impaired/infirm



ENSURE to place an insulating mat underneath the unit when placing on desktop

NOTE

Odour may be noticeable when used for the first time. Please clean the unit prior to usage.



KEY FEATURES

- Soft silicone case for safer handling
- Advanced microwave-safe composite alloy
- Non-Stick Surface

KEY BENEFITS

- Turn your microwave into a toastie maker
- Real golden & crunchy bread just like sandwich press
- Energy efficient – concentrates direct heat for fastest cooking
- Faster than stove-top / oven grills

HOW IT WORKS

- Advanced microwave-safe composite alloy absorbs thermal energy, rapidly rising above 200 degrees C in 2-3 minutes
- Cooks FAST and just like a hot plate or pan, whilst also allowing the microwave to cook from inside
- Butter outsides of bread for delicious golden crispy results

FOR BEST RESULTS

- Set microwave between 700W & 1000W
- Pre-heat in microwave for 1-2 minutes
- Spread butter or margarine on the outside bread surface for extra golden results
- Place the food/sandwich into the Toastie maker
- Clamp both ends
- Cook for between 2-5 minutes according to taste/fillings

WASHING INSTRUCTIONS

For the first time use, clean the unit gently with warm running water and dishwasher detergent.

Allow the unit to completely dry before using the product.

After use, allow the unit to cool down before washing. Continue following this process.

Always use soft cloth to clean the product, as using scouring pads may damage the non-stick coating.

NOTE

Always use safety equipment or oven mitts when the grill plates are hot



Thank you for purchasing this unit. Please read these instructions carefully prior to usage. Please keep these instructions safe for future use.