

# PLEASE CONTACT YOUR PPEI DEALER FROM PURCHASE FOR CUSTOMER SERVICE/TECH SUPPORT



## 2011-2014 LML AUTOCAL INSTRUCTIONS

1. Plug the autocal into the truck's OBD II port using the supplied cord.
2. Turn the ignition to the run position, do not start the vehicle.
3. Scroll down until you see "Tuning tool" and then click OK
4. Select "Program FULL" and then select tune "A\_FLASH"
5. It will ask if you want to LICENSE ECU NOW? Press the OK button.
6. It will now ask if you are sure, once again press the OK button. The device should now say Flashing with a percentage below it. The flashing process should take 3-5 minutes. The "A\_Flash" tune (full or prog) will no longer be used after flash is complete.
7. When the flash has finished, the Autocal will prompt you to turn the ignition off, once off the countdown will begin.
8. Once the countdown is finished, turn the key back on but do not start the vehicle.
9. Select "Program Cal" **\*All the tunes for the truck will be under Program Cal\***
10. Scroll down to tune of choice and then click "ok"  
\*It is advised to have a lift pump when running the street tune, and is required for the max effort tune. \*
11. Once you select your tune and license, the tuner will then flash the truck. This flash should take 1-2 minutes.
12. Once this flash has finished, you need to turn the key off, it may or may not prompt this, but turn the key off and wait for the countdown.
13. Once the countdown has completed, the vehicle has been tuned. Turn the key on and enjoy your newfound power.

### How to Datalog with Autocal \*BBx\*

- a. Select "Scan tool"
- b. Scroll down to "RECORD DATA"
- c. Select controller type you want to log and click ok (e54LB7, e60-LLY, e35a-LBZ, e35b-LMM)
- d. Click ok on "Record Data" to data log and send to us or "Display Data" to verify information for yourself.
- e. Click ok and the time should pop up to show that you are recording.
- f. Once you are done recording, press ok, and it will stop recorded and save the log to the device.
  - i. Many of the options (PIDs) you see are the options that are available that will help us diagnose any issues you may be having with your truck.

### To Read and Clear Codes

- a) Scroll down to "Trouble codes" and click "ok"
- b) Scroll down to "Display all DTCs" and select "ok"
- c) To clear codes- Scroll down to "Clear codes"