

## Installing Rimgard®

Follow this instruction and your Rimgard® will be installed in less than 15 minutes.

Install by hand with no excessive force, now workshop help is needed.

We recommend using a pair of gloves to avoid grease or lock lubricant.



### 1. Remove the center caps



Apply butyl putty onto the center cap so that it covers as much of the cap as possible.

Use an object with a flat surface as handle, and press it firmly against the putty.

Pull with a quick snap to remove the center cap.



### 2. Fit the Rimgard® module into the center hub

Check so that the module is in a fully open position and that no lug nuts are sticking too far out, preventing the module to reach all the way into the hub.



### 3. Attach with tool

Attach the Rimgard® module using the enclosed Hex key and adaptor. Turn by hand until the module is tightly fit and cannot be turned/moved. This is enough to properly install the Rimgard®.

Store the adaptor in your vehicle so that you can remove your wheel if needed.

### 4. Insert lock cylinder

Make sure the lock cylinder is in an open position.

### 5. Lock

Turn the key anti-clockwise to lock.

Keep one key with your regular key chain so that you always have it at hand in case you need to remove your wheels.

Never store the keys in the vehicle.

 
### 6. Re-insert the center cap


Snap the center cap onto the Rimgard® module. That's it, you are good to go.

Scan the QR-code for video instructions.

**Do not use an impact wrench**

Min torque 20 Nm Max Torque 50 Nm



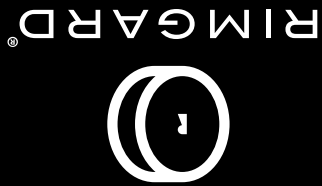

## Key management

We recommend that you keep one key on your regular key chain and store the second key on a safe place. We do not recommend storing your keys with your car key. Never leave your keys inside the car.

Keep your key card in a safe place, it is needed should you have to order new keys. We recommend that you register your key card on our webpage, [ringgard.com](http://ringgard.com), where you can also order new keys.

### Scope- and terms of use

Rimgard® is attached to the wheel in order to prevent wheel theft.

Only use Rimgard® in prescribed way. Rimgard® does not accept responsibility for possible damages and/or injuries inflicted due to use in a non-prescribed way. To use Rimgard® in a non-prescribed way could lead to injuries and damages for which Rimgard does not accept responsibility. Should you hear dissonance from the product when mounted onto the rim, do not drive or attempt to move the car without first demounting Rimgard®. Should you need to remove the product after a failed theft attempt, contact us or an authorized work shop. The owner is obliged to observe local laws, rules and regulations.

### Warranty

Rimgard® issues a two year warranty for its products. If the product is altered in any un-prescribed way the warranty does not apply. See [www.Rimgard.com](http://www.Rimgard.com) for full terms.




## Maintenance twice a year

1. Remove the locks from your wheels and inspect them for damage or tampering.
2. Apply a small amount of non-metallic grease on the turning parts in the lock cylinder slot.
3. Apply lock lubricant to the inside of the lock cylinders.

## Contact

Rimgard Sweden AB  
Frösundaviks allé 1  
169 70 Solna  
Sverige  
[ringgard.com](http://ringgard.com)  
[info@ringgard.com](mailto:info@ringgard.com)  
+46 8 605 77 00

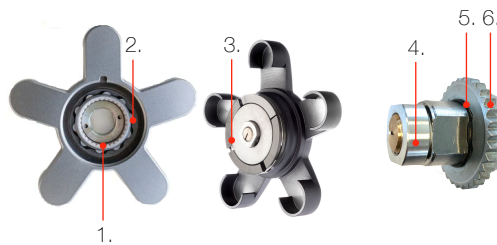

## How we name the parts

If you ever need help attaching your Rimgard® locks, this is a great dictionary for referring to components and describing your problem to us.

1. Centerbolt
2. Module socket
3. Expander heels and heel spring
4. Lock cylinder heel
5. O-ring
6. Lock cylinder cap

## Congratulations!

### To your choice to protect your wheels with Rimgard® wheel locks.

We hop you understand how important you are, not only to us as a customer, but as part in eliminating wheel theft.

Follow our step by step instructions and you will have your Rimgard® locks installed, and be part of setting a new standard for how theft of tires and rims is prevented.



## In the box

1. Rimgard modules (4 pcs)
2. Lock cylinders (4 pcs)
3. Butyl putty
4. Keys (2 pcs) and key card (1 pc)
5. Hex key adaptor - (1 pc, store in car)
6. Hex key - (1 pc, store in car)

## Remember to

**Tell your neighbours**, after all there is a risk that your problems are now theirs...

**Point** at and show your new Rimgard® wheel locks whenever you get the opportunity. People need to know!

**Share** in social media. Post with #KeepingMyWheels and @Rimgard.

**Give us your rating** on Google and Trustpilot. It means a great deal to us!