



Installing Rimgard®

Follow this instruction and your Rimgard® will be installed in less than 10 minutes.

Install by hand with no excessive force, no workshop help is needed.

We recommend using a pair of gloves to avoid grease or lock lubricant.



1. Remove center caps

Apply butyl putty onto the center cap so that it covers as much of the cap as possible.

Use an object with a flat surface as handle, and press it firmly against the putty.

Pull with a quick snap to remove the center cap.



2. Open the locking ring




3. Insert locking ring

Insert the locking ring into the center hole at a 45° angle, with the open end first.

Level the locking ring with the center hole and close. Align the hooks on the ring with a wheel lug nut.

See the installation video for illustration

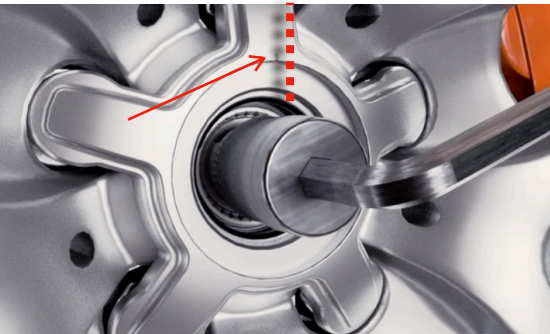

4. Attach the module

Place the module over the locking ring. Align the small cut in the module with the hooks on the locking ring.

Use enclosed hex key and adaptor to tighten by hand until the module fits firmly and cannot be turned/moved. This is enough to properly install the Rimgard®.

Do not use an impact wrench
Min torque 20 Nm Max Torque 50 Nm



5. Insert lock cylinder

Make sure the lock cylinder is in an open position. Insert the cylinder all the way so that the cogs on the "lock cylinder cap" fit nicely into the module.

Never drive with Rimgard modules installed without locking cylinder!



6. Lock

Turn the key 1/4 turn, anti-clockwise, to lock. No effort should be needed.


Keep one key with your regular key chain so that you always have it at hand, in case you should need to remove your wheels. For the same reason, make sure that the hex key and adaptor are stored in the car.




7. Re-insert the center cap

Snap the center cap onto the Rimgard® module. That's it, you are good to go.

If you need more visual support, scan the QR-code for video.

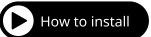

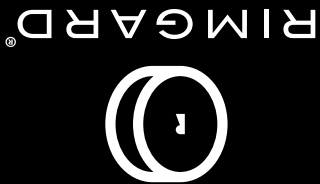

Key management

Keep one key on your regular key chain and don't store/leave the keys in the car.

Keep your key card and spare key in a safe place. The card it is needed for ordering new keys. Register your key card on rimgard.com, where you can also order new keys.

Scope and terms of use

Rimgard® is attached to the wheel in order to prevent wheel theft.

Only use Rimgard® in prescribed way. Rimgard® does not accept responsibility for possible damages and/or injuries inflicted due to use in a non-prescribed way. To use Rimgard® in a non-prescribed way could lead to injuries and damages for which Rimgard does not accept responsibility. Should you hear dissonance from the product when mounted onto the rim, do not drive or attempt to move the car without first demounting Rimgard®. Should you need to remove the product after a failed theft attempt, contact us or an authorized work shop. The owner is obliged to observe local laws, rules and regulations.

Warranty

Rimgard® issues a two year warranty for its products. If the product is altered in any un-prescribed way the warranty does not apply. See www.Rimgard®.com for full terms.

Contact

Rimgard Sweden AB
Frösundaviks allé 1
169 70 Solna
Sverige
rimgard.com
info@rimgard.com
+46 8 605 77 00

Congratulations!

To your choice to protect your wheels with Rimgard® wheel locks.

We hope you understand how important you are, not only to us as a customer, but also in contributing to the elimination of wheel theft.

Follow our step by step instructions and you will have your Rimgard® locks installed, and be part of setting a new standard for how theft of tires and rims is prevented.



Remember to

Tell your neighbours, after all there is a risk that your problems are now theirs...


Point at and show your new Rimgard® wheel locks whenever you get the opportunity. People need to know!

Share in social media. Post with #KeepingMyWheels and tag us.
Instagram: @rimgard
Twitter: @rimgard_com

Give us your rating on Google and Trustpilot. It means a great deal to us!

Maintenance twice a year

1. Remove the locks from your wheels and inspect them for damage or tampering.
2. Apply a small amount of non-metallic grease on the turning parts in the lock cylinder slot.
3. Apply lock lubricant to the inside of the lock cylinders.

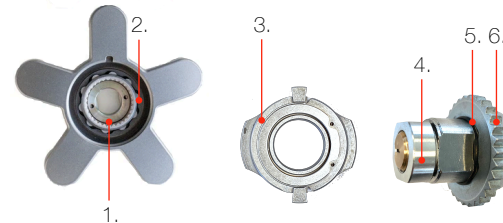

How we name the parts

If you ever need help attaching your Rimgard® locks, this is a great dictionary for referring to components and describing your problem to us.

1. Centerbolt
2. Module socket
3. Locking ring
4. Lock cylinder heel
5. O-ring
6. Lock cylinder cap



In the box

1. Rimgard modules (4 pcs)
2. Locking ring (4 pcs)
3. Lock cylinders (4 pcs)
4. Butyl putty
5. Keys (2 pcs) and key card (1 pc)
6. Hex key adaptor - (1 pc)
7. Hex key - (1 pc)