

TP100 – Driver Installation Guide

- 1. Make sure the printer is connected to power and USB and turned on
- 2. Download the TP100 Printer driver from the below link. https://drive.google.com/uc?id=1PKzm1I5ghF8kyEjUyqLxPHLeftmK0xzm &export=download
- 3. Once downloaded extract the files and run the installer.
- 4. Select the language and click OK

		00		
	Select Set	tup Language	×	
	18	Select the language to use during the installation:		
		English	~	
		OK Cance	el	
5.	Click Ir	ıstall		
	👸 Setup	p - Senor Printer Driver	– 🗆 ×	
	<b>Read</b> Se	rinter Driver on your computer.		
	Cli	ick Install to continue with the installation.		
			Install Cancel	]

### The Senor Building

65 & 67 Weaver Street Coopers Plains QLD 4108 F: +61 7 3275 5800 Brisbane, Australia support@senortech.com.au www.senortech.com.au

P: +61 7 3275 5888



6. Select 'thermal receipt printer – TP100' Select 'Port – USB PORT:' Printer name can be set to anything Click Install

🥩 Pri	inter Driver install program v2.61	- 🗆 X				
5	System Type: Microsoft Windows 10					
	Printer Model					
	• Thermal Receipt Printer	TP100 ~				
	○ Impact Printer	DP120 $\vee$				
	OPortable Printer	MP-T80UBW $\sim$				
	Printer Port					
	Port:	USB PORT: ~				
		Add Port Configure Port				
	Printer Name:	TP100 Printer				
		Install Exit				

7. Click OK

SUCCESS	×	
Printer installed		
ОК	Cancel	

### The Senor Building

65 & 67 Weaver Street P: +61 7 3275 5888 Coopers Plains QLD 4108 F: +61 7 3275 5800 Brisbane, Australia support@senortech.com.au www.senortech.com.au



## 8. Click Exit

8	Printer Driver install program v2.61	- 🗆 🗙				
System Type: Microsoft Windows 10 Printer Model						
	○ Impact Printer	DP120 $\lor$				
	○Portable Printer	MP-T80UBW $\lor$				
	Printer Port					
	Port:	USB PORT: ~				
		Add Port Configure Port				
	Printer Name:	TP100 Printer				
Install Exit   9. Click Finish — — — — — — — — — — — — — — — — — — —						
		<u>F</u> inish				
		/				

The Senor Building

Coopers Plains QLD 4108 F: +61 7 3275 5800 Brisbane, Australia  $\underline{support@senortech.com.au}$ www.senortech.com.au

65 & 67 Weaver Street P: +61 7 3275 5888



# 10. Open Control Panel – Devices and Printers Right Click the TP100 Printer and select Printer properties

The Devices and Printers -							×		
$\leftarrow \rightarrow \cdot \cdot \uparrow$	Search	Devices and	Printers	Q					
Add a device	Add a printer Se	e what's printing	Print server properties	Remov	e device	-	?		
		$\checkmark$					^		
AOC 2270W	IMAGEMASTER-P C	USB Keykoard	USB-PS/2 Optical Mouse						
imes Multimedia I	Devices (2)						- 1		
192.168.2.11 - Sonos Play:1	Senor (ispos-650)								
V Printers (5)									
					See what's	printing			
80EN	Fax	Microsoft Print to	Microsoft XPS	TP10	Set as defai Printing pr	ult printer eferences			
		PDF	Document Writer		Printer pro	perties			
	P100 Printer Model: Category:	TP100 Printer			Create sho	tcut			
	Status:	us: 0 document(s) in queue		•	Remove de	vice			
					Troublesho	ot			
					Properties				

### The Senor Building

65 & 67 Weaver Street P: +61 7 3275 5888 Coopers Plains QLD 4108 F: +61 7 3275 5800 Brisbane, Australia support@senortech.com.au www.senortech.com.au



## 11. Click Print Test Page to confirm the printer is setup correctly. 12.(test receipt will print out)

TP100	) Propert	ies	,			×			
General	Sharing	Ports	Advanced	Color Managemen	t Security				
50		TP100							
Location:									
<u>C</u> omm	ent:								
Madah	L	TD100							
– Featu	rec	19100							
Colo	or: No			Paper availa	Paper available:				
Dou	Double-sided: No			Printer1 80	72.1) x 99999 mm	~			
Stap	Staple: No								
Spee	Speed: Unknown								
Max	imum re	solution:	203 dpi			~			
					Print <u>T</u> est Page				
				OK	Cancel Ag	oply			

### The Senor Building

65 & 67 Weaver Street P: +61 7 3275 5888 Coopers Plains QLD 4108 F: +61 7 3275 5800 Brisbane, Australia support@senortech.com.au www.senortech.com.au

