



CYCLONE MINI

CONTROLS OVERVIEW

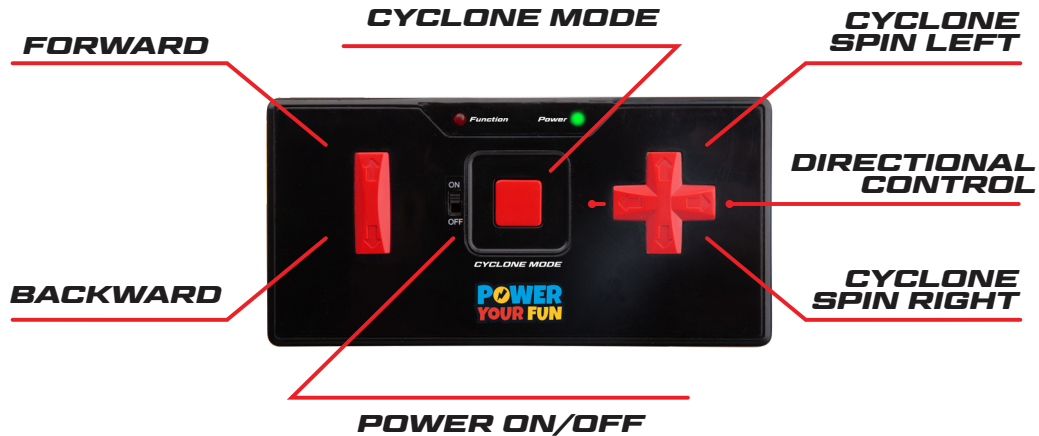

OPERATING INSTRUCTIONS

1. Switch on the Cyclone Mini RC car by pressing the button circled in Picture 1. An internal LED will flash red.
2. Turn on the transmitter by switching the power to the "ON" position as circled in Picture 2. The internal light on the RC car will stop flashing.
3. You are now ready to drive your RC car!

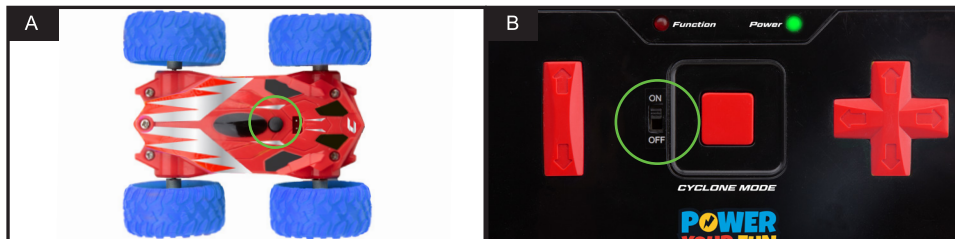


PICTURE 1

PICTURE 2

IMPORTANT SAFETY INFORMATION

- Do not mix old and new batteries or standard (carbon-zinc) and alkaline batteries
- Do not leave batteries in product if left unattended/unused for an extended period of time
- Remove or change out batteries immediately after they expire
- Do not tamper with or short circuit the supply terminals as damage to the product or injury to oneself may occur
- The infrared technology used in this product may interfere with/be interfered with by other electronic devices. If this occurs, please move the product away from the vicinity of those electronics to continue use
- Avoid extended exposure to heat or direct sunlight
- Do not immerse this product in water as it may damage electronic components
- Do not alter item in any way

RC CHARGING INSTRUCTIONS

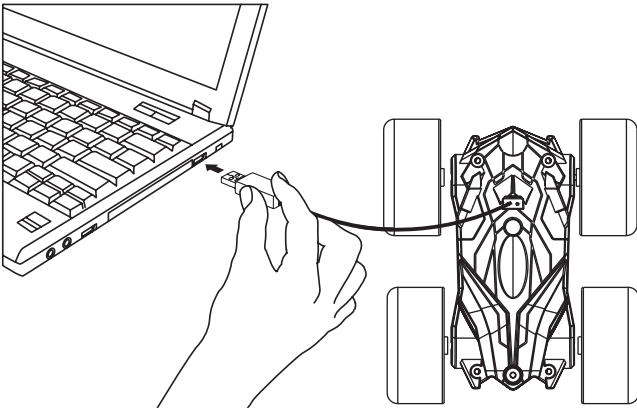

- Connect RC car to USB port with USB charger cable and choose one of the charging methods pictured below
- The USB charger light will be red when charging and turn off when fully charged



Computer




Phone Charger



Power Bank



Car Charger

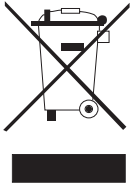

LI-PO BATTERY DISPOSAL & RECYCLING

Contact your local electronics recycling facility for more information about how to recycle Li-Po battery-powered products.



WARNING:
DO NOT LEAVE
BATTERY CHARGING
UNSUPERVISED