





## **Instruction Manual**

## **REMOTE CONTROL FUNCTIONS & BATTERY INSTALLATION**



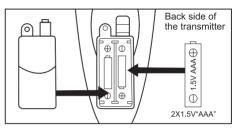


2 X 1.5V AAA BATTERIES (NOT INCLUDED) ARE NEEDED FOR REMOTE CONTROL

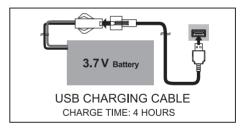

3.7V RECHARGEABLE BATTERY (INCLUDED)

## TAIL ASSEMBLY INSTRUCTIONS

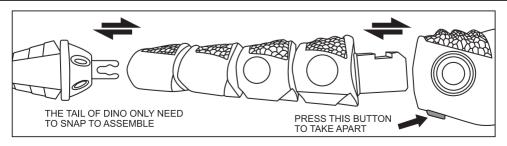

## **REMOTE CONTROL FUNCTIONS**



VOLUME UP UP TO 5 LEVELS



TURN LEFT



VOLUME DOWN UP TO 5 LEVELS



TURN RIGHT



DINO LANGUAGE



**DINO DANCE MUSIC 1** 



ROTATING HEAD WITH DINO SOUNDS



DINO DANCE MUSIC 2



TAIL WAGGING WITH DINO SOUNDS



DINO DANCE MUSIC 3



WALK FORWARD



PRESS THIS BUTTON THEN
TOUCH DINO'S HEAD TO INTERACT

THEN PRESS PROGRAM MODE AGAIN

PROGRAM MODE. PRESS ANY FUNCTION BUTTON TO PROGRAM



WALK BACKWARD



TO APPLY



SLIDE FORWARD



SHOOT BULLET




STOP



FIGHT MODE



SLIDE BACKWARD

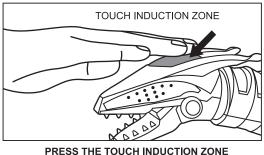

TO INTERACT