

Column Sentry Installation



Order the correct sized Column Sentry® column protector according to the size of your industrial column. The protector is delivered with two sides and the attaching hook and loop strap.



First, place the product around the column and extend the straps around the installed protector. Finally, press the hook and loop straps together for a tight fit.



That's it! The installation process for the protector is that simple!